



Upgrade Guide

AWS Elemental Conductor Live



AWS Elemental Conductor Live: Upgrade Guide

Copyright © 2026 Amazon Web Services, Inc. and/or its affiliates. All rights reserved.

Amazon's trademarks and trade dress may not be used in connection with any product or service that is not Amazon's, in any manner that is likely to cause confusion among customers, or in any manner that disparages or discredits Amazon. All other trademarks not owned by Amazon are the property of their respective owners, who may or may not be affiliated with, connected to, or sponsored by Amazon.

Table of Contents

About this guide	1
Rules for software versions	3
Compatible versions	3
Cluster Upgrades	5
Standard Conductor Live upgrade	5
Step A: Get ready	6
Step B: Copy the AWS Elemental installers	8
Step C: Disable high availability	8
Step D: Remove the secondary Conductor Live node	10
Step E: Stop the running channels	11
Step F: Remove worker nodes	11
Step G: Upgrade worker nodes	12
Step I: Add worker nodes	15
Step J: Add the secondary Conductor Live node	17
Step K: Start channels	18
Step L: Re-enable high availability	18
Reduced downtime Conductor Live upgrade	20
Step A: Get ready	21
Step B: Copy the AWS Elemental installers	23
Step C: Remove the backup worker nodes	24
Step D: Upgrade the backup worker nodes	25
Step E: Add back the backup worker nodes	26
Step F: Fail over an active node	28
Step G: Remove the failed worker node	29
Step H: Upgrade the failed active node	29
Step I: Add failed worker node	31
Step J: Fail back the running channels	33
Step K: Re-designate the backup worker node	33
Step L: Disable high availability	34
Step M: Remove the secondary Conductor Live node	35
Step N: Upgrade the secondary Conductor Live node	36
Step O: Upgrade the primary Conductor node	36
Step P: Add the secondary Conductor Live node	37
Step Q: Re-enable high availability	38

Sample Upgrade	39
Downloading Software	43
Cluster Downgrades	44
Step A: Get ready	45
Save the database backup	45
Create bootable kickstart	45
Step B: Copy the AWS Elemental installers	46
Step C: Stop the running channels	47
Step D: Disable high availability	47
Step E: Remove the secondary Conductor node	48
Step F: Downgrade the nodes	49
Step G: Add the secondary Conductor Live node	52
Step H: Start channels	53
Step I: Re-enable high availability	53
Document History	55

About this guide

This guide describes how to upgrade or downgrade Conductor Live and worker nodes in an Conductor Live cluster. It covers versions 3.25.x and lower. These versions run on RHEL 7 (or CentOS 7). It also covers version 3.26.0 and higher. These versions run on RHEL 9.

It applies to the following *upgrade* scenarios:

- You are currently running version 3.25.x or lower, and you want to upgrade to a version that is below 3.26.0.
- You are currently running version 3.26.0 or higher, and you want to upgrade to a version that is higher than your current version.

It applies to the following *downgrade* scenarios:

- You are currently running version 3.25.x or lower, and you want to downgrade to a version that is lower than your current version.
- You are currently running version 3.26.0 or higher, and you want to downgrade to a different 3.26.x version.

If you want to upgrade or downgrade across the 3.25 / 3.26 divide, see the [AWS Elemental Conductor Live Migration Guide](#).

Prerequisite knowledge

We assume that you know how to:

- Connect to the Conductor Live web interface using your web browser.
- Log in to a remote terminal (Linux) session in order to work via the command line interface.

Note

For assistance with your AWS Elemental appliances and software products, see the [AWS Elemental Support Center](#).

Sending Commands

- Unless otherwise stated, enter all Linux shell commands from the home directory (/home/elemental).
- To ensure that the commands are executed regardless of your user permissions, use sudo to run the command as superuser.

Rules for software versions

There are rules about working with different software versions on the nodes in a AWS Elemental Conductor Live cluster.

Compatible versions

Worker nodes

All the worker nodes (Elemental Live and Elemental Statmux) in the cluster should have the same major version installed. It's only permissible for there to be a mix of versions when you are in the middle of upgrading the worker nodes.

If you have both Elemental Live and Elemental Statmux nodes in the cluster, consult the release notes to decide whether to upgrade the minor versions. Often, there are no fixed issues or new features in a minor version of Elemental Statmux. Therefore, it's acceptable to run, to perform a minor version upgrade of Elemental Live and to not upgrade Elemental Statmux.

Conductor Live nodes

If you have a redundant cluster, both the Conductor Live nodes must have the same version number, down to the minor version. For example, both must run version 3.25.5.

Worker nodes compared to Conductor Live nodes

The Conductor Live nodes can be running different versions from the worker nodes. These rules apply:

- The Conductor Live nodes must be running the lower version.
- The worker nodes can be a maximum of two major versions of the Conductor Live nodes. For example, 2.25 and 3.25.
- The Conductor Live node can control worker nodes that are running a higher version, but you won't be able to use features that are new in the higher version. This rule exists because the Conductor Live node has no code that can control the new feature.

Typically, you introduce worker nodes with a higher software version if you obtain a new worker node, and the node is installed with a newer software version. You want to recruit the new worker

node, but you are not yet prepared to upgrade the Conductor Live nodes. AWS Elemental supports this configuration because we recognize that upgrading the Conductor Live nodes is a major undertaking.

However, we strongly recommend that you align all the software versions, down to the patch level, as soon as possible.

Note that if you experience a problem with interaction in two nodes running different software versions, AWS Elemental Support will probably request that you set up all the nodes on the same patch version.

Cluster Upgrades in Conductor Live

There are two types of upgrade that you can perform on an AWS Elemental Conductor Live cluster:

- **Standard upgrade:** Use this for any type of cluster and redundancy configuration. Do this type of upgrade in a maintenance window since all nodes are offline for the duration of the upgrade process.
- **Reduced downtime upgrade:** Use this for clusters that have worker redundancy. This type of upgrade leverages worker node redundancy. Therefore the downtime is typically less than 30 seconds.

This document describes both upgrade processes.

Topics

- [Standard Conductor Live upgrade](#)
- [Reduced downtime Conductor Live upgrade](#)
- [Sample Upgrade](#)

Standard Conductor Live upgrade

The process outlined in this section is for a standard upgrade of the AWS Elemental Conductor Live software, where all nodes are taken offline and upgraded within a maintenance window. If your worker nodes are in a redundancy group and you want to limit downtime outside of a maintenance window, see [Reduced downtime Conductor Live upgrade](#).

This process applies when the following are true:

- You're upgrading to Conductor Live to a specific version, and you're upgrading all the worker nodes to the matching version. For example 3.25.5 (for Conductor Live) and 2.25.5 (for worker nodes).
- The cluster is in a working state. If any nodes are in a degraded state (not responding or not accepting jobs), any upgrades you might make to that node won't work.

This comprehensive upgrade process is valid regardless of the type of redundancy you're using and whether or not you're upgrading worker nodes.

Note

In this procedure, we show how to upgrade from version 3.23.5 to version 3.25.5. Modify the commands to specify the version that you are upgrading to.

Topics

- [Step A: Get ready](#)
- [Step B: Copy the AWS Elemental installers](#)
- [Step C: Disable high availability](#)
- [Step D: Remove the secondary Conductor Live node](#)
- [Step E: Stop the running channels](#)
- [Step F: Remove worker nodes](#)
- [Step G: Upgrade worker nodes](#)
- [Step I: Add worker nodes](#)
- [Step J: Add the secondary Conductor Live node](#)
- [Step K: Start channels](#)
- [Step L: Re-enable high availability](#)

Step A: Get ready

The following steps prepare you to perform a standard upgrade of an Conductor Live node. Performing this procedure helps ensure you don't lose data due to a malfunctioning node.


Check essential notes

Refer to the essential notes in the [current Release Notes](#) to identify changes in behavior with the upgrade.

Verify the worker node type

The software installer that you use for the nodes varies depending on if you have GPU-accelerated software type, or CPU-only. To determine the type of software, look at any web interface screen of the worker node. The top shows icons as follows:

- CPU and GPU icons: the software is *GPU-accelerated*.
- CPU icon only: the software is *CPU-only*.

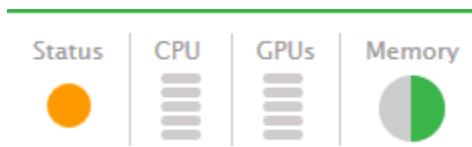

Save the latest database backup

Perform these steps on the primary Conductor node and all worker nodes in the cluster.

When you install the upgraded operating system, your previous database backups are deleted. Locate and save the most recent backup off the system. You can use this backup later if you need to downgrade from the version that you are now installing.

To save the latest backup

1. From a Linux prompt, log in to the appliance with the *elemental* user credentials.
2. Navigate to the directory where Conductor Live saves its backups.

```
[elemental@host ~]$ cd /home/elemental/database_backups
```

3. Locate the most recent backup and save it to a location off of the AWS Elemental system. The backup name includes the date and time that the backup was taken, in a format similar to this:
`elemental-db-backup_live_3.23.5_2018-02-08_21-01-36.tar`

Create bootable kickstart

You must install the host operating system from an `.iso` file onto each physical machine that will be running AWS Elemental software. Doing so is referred to as “kickstarting the system”.

Make sure that you install the right version of the operating system with each piece of software. The correct `.iso` file is available at [AWS Elemental Support Center Activations](#).

Create a Boot USB Drive

Do this from your workstation.

Use a third-party utility (such as PowerISO or ISO2USB) to create a bootable USB drive from your `.iso` file. For help, see the knowledge base article [Creating Bootable Recovery \(kickstart\) Media](#).

Move custom files

If the primary Conductor Live or any worker nodes have custom AWS Elemental assets, such as scripts, saved to `/opt/elemental_se/scripts`, then move them to a safe location so they're not deleted during the upgrade.

Step B: Copy the AWS Elemental installers

Locate and copy the AWS Elemental installers for worker and Conductor Live nodes.

1. From your regular workstation, open a web browser, go to [AWS Elemental Support Center Activations](#), and download the software for the version that you're going to.
2. Make a note of where downloads are stored on your workstation. For example:

```
h:/corporate/downloads/.
```

3. Make a note of the name of the download file. For example:
`elemental_production_conductor_live247_3.25.5.12345.run`
4. Copy the download file from your workstation to `/home/elemental/` on one of the nodes. For example:
 - Use SFTP protocol and an FTP client application on your workstation computer. Connect to the IP address for Elemental Live with the *elemental* user credentials and transfer the file.
 - Use SCP protocol and an SCP client application on your workstation computer. Copy the file with the *elemental* user credentials and transfer the file.
5. Repeat the download to any other nodes that are changing versions. If you're changing versions on several nodes, copy the download file to every hardware unit at once. Doing so reduces downtime on each node as you start installing the new software.

For detailed downloading steps, see [Downloading Software](#).

Step C: Disable high availability

If you don't have high availability enabled, skip this step and go to [the section called "Step E: Stop the running channels"](#).

To disable high availability

1. If you're using a virtual machine (VM), take a snapshot before disabling high availability. See the VMware vSphere help text for more information.
2. On the web interface for the primary Conductor Livenode, go to the **Cluster** page and choose **Redundancy**.
3. In the **High Availability** field, choose **Disable**.
4. Verify that high availability is disabled. From Linux prompts, access the primary and secondary Conductor Live nodes with the *elemental* user credentials. For password assistance, contact your system administrator.
5. In the remote terminal session for each Conductor Live, enter the following command to verify that Conductor Live high availability is disabled:

```
[elemental@hostname log]$ tail -F /opt/elemental_se/web/log/  
conductor_live247.output
```

The `conductor_live247.output` log starts to scroll on the screen and shows messages as they are occurring. Watch for the following INFO lines on the primary Conductor Live node:

```
WARN -- : Disabling HA, elemental_se restarting..  
.  
.  
.  
I, [2015-11-13T04:37:54.491204 #4978] INFO -- : HA environment not enabled  
.  
.  
.  
I, [2015-11-13T04:38:03.905069 #4978] INFO -- : Elemental Conductor is ready
```

Ensure the secondary Conductor Live is also ready.

6. Press Ctrl+C to exit the tail command.
7. Enter the following commands:

```
[elemental@hostname ~]$ sudo -s  
[elemental@hostname ~]$ cd /data/pgsql/logs  
[elemental@hostname ~]$ tail -F postgresql-<day>.log
```

where <day> is today (the day you are upgrading), typed with an initial capital letter: Mon, Tue, Wed, Thu, Fri, Sat, Sun

8. Confirm that you see database system is ready to accept connections on the secondary Conductor Live.
9. Press Ctrl+C to exit the tail command.
10. Type the following command to exit the session as the sudo user:

```
[elemental@hostname ~]$ exit
```

Step D: Remove the secondary Conductor Live node

If you have only one Conductor Live, skip this step and go to [the section called “Step E: Stop the running channels”](#).

Prior to upgrading, you must remove the secondary Conductor Live node first from the redundancy group, and then from the cluster. You can't remove the node from the cluster if it's still in the redundancy group.

To remove the secondary node from the redundancy group

1. On the web interface for the primary Conductor Live node, access **Cluster > Redundancy** and ensure that you have the Conductor Live redundancy group selected.
2. Locate the secondary Conductor Live and click Delete (trash icon) to delete it from the redundancy group.

When the secondary Conductor Live node is removed from the redundancy group, remove it from the cluster.

To remove the secondary node from the cluster

1. On the web interface for the primary Conductor Live node, access **Cluster > Nodes**.
2. Locate the secondary Conductor Live node and display the options by choosing the down-facing arrow.
3. Select **Remove Node**.

When the node is removed from the redundancy group and the cluster, you can move forward with the upgrade process.

Step E: Stop the running channels

You must stop all running channels before you upgrade.

To stop channels

1. On the web interface for the primary Conductor Live node, access the **Channels** screen.
2. Toward the top of the page, select **Tasks** and **Stop Channels**.

When all channels are stopped, move on to the next step.

Step F: Remove worker nodes

Remove the worker nodes from the redundancy group, and then from the cluster. Perform these steps on for all worker nodes in the cluster.

Topics

- [Step A: Remove channel assignments](#)
- [Step B: Remove workers from redundancy groups](#)
- [Step C: Remove workers from the cluster](#)

Step A: Remove channel assignments

Before you can remove a worker node, first make sure that no channels are assigned to the node.

To remove channels from the node

1. On the primary Conductor Live node's web interface, go to the **Channels** page.
2. Ensure that all channels are stopped.
3. Choose **Edit**(pencil icon) on a channel.
4. On the **Edit Channel** page, in **Node**, choose **None**.
5. Save the channel. Repeat this procedure to edit the remaining channels to have no node assignment.
6. When all of the channels have no node assignments, go to the next step.

Step B: Remove workers from redundancy groups

Remove all nodes from the worker redundancy groups.

To remove workers from redundancy groups

1. On the primary Conductor Live node's web interface, go to the **Cluster** page.
2. On the **Cluster** page, choose **Redundancy**.
3. In the navigation bar, choose the Elemental Live redundancy group.
4. On the **Backup Nodes** tab, choose **Delete** (trash icon) for each node.
5. When you've removed all backup nodes, choose the **Active Nodes** tab and choose **Delete** (trash icon) for each node.
6. If you have multiple Elemental Live redundancy groups, repeat this procedure on each group, then go to the next step.

Step C: Remove workers from the cluster

Remove the nodes from the cluster so that you can perform the upgrade process.

To remove workers from the cluster

1. On the **Cluster** page, choose **Nodes**.
2. On each worker node, choose the downward triangle and select **Remove Node**.
3. Remove all nodes from the cluster, then move on to the upgrade process.

Step G: Upgrade worker nodes

Perform these steps on the AWS Elemental Live nodes.

There are two procedures for upgrading the worker nodes. Choose the procedure that applies to your deployment. There is just one procedure for upgrading the Conductor Live nodes.

To upgrade worker nodes without changing the deployment

Follow this procedure if you don't need to change anything about the deployment.

1. From the Linux command line, log in to the worker node. Use the *elemental* user credentials.

2. Run the installer. Make sure to include the `-c` option to clear the database. Use the appropriate command:

- For GPU and CPU versions of the software:

```
[elemental@hostname ~]$ sudo sh ./elemental_production_live_2.25.5.12345.run -c --skip-all --start -xeula
```

- For CPU-only versions of the software:

```
[elemental@hostname ~]$ sudo sh ./elemental_production_live_cpu_2.25.5.12345.run -c --skip-all --start -xeula
```

3. If you copied a script to a safe location (as described in [Move custom files](#)), copy it back to its location in `/opt/elemental_se/scripts`.

4. When the upgrade is complete, restart the node with the following command:

```
[elemental@hostname ~] sudo reboot
```

5. Repeat the upgrade steps on each worker node before moving on to the next step in the upgrade process.

To upgrade backup worker nodes and change the deployment

Follow this procedure if you want to change something in the deployment. Specifically, follow this procedure if you want to enable OCR conversion for the first time. This feature is available in AWS Elemental Live version 2.22.0 and later. (For information about this feature, see [Support for OCR Conversion](#) in the *AWS Elemental Live User Guide*.)

1. Follow the appropriate procedure in the *AWS Elemental Live Installation Guide*:

- [Install the AWS Elemental Live software](#): to install on hardware
- [Install the AWS Elemental Live software](#): to install on a VM

2. If you copied a script to a safe location (as described in [Move custom files](#)), copy it back to its location in `/opt/elemental_se/scripts`.

3. When the upgrade is complete, restart the node with the following command:

```
[elemental@hostname ~] sudo reboot
```

4. Repeat the upgrade steps on each worker node before moving on to the next step in the upgrade process.

To upgrade the Conductor Live nodes

Perform these steps on the secondary Conductor Live (if applicable), then on the primary Conductor Live.

1. From the Linux command line, log in to the Conductor node. Use the *elemental* user credentials.
2. Run the installer:
 - For the *secondary* Conductor Live, make sure to include the `-c` option to clear the database. Use this command:

```
[elemental@hostname ~]$ sudo sh ./
elemental_production_conductor_live247_3.25.5.12345.run -c --skip-all --start -
xeula
```

- For the *primary* (or only) Conductor Live, **do not** include the `-c` option to clear the database. Use this command:

```
[elemental@hostname ~]$ sudo sh ./
elemental_production_conductor_live247_3.25.5.12345.run --skip-all --start -xeula
```

The installer automatically stops the software. You will not be prompted to do the following:

- Change the network setup (eth0 and eth1) or the Ethernet partitioning (setup of eth0 as a management interface).
 - Choose the timezone.
 - Enable or disable user authentication.
3. Make sure that the `elemental_se` service restarts. Look for this prompt on the primary Conductor Live command line:

```
Starting elemental_se: [OK]
```

4. If you copied a script to a safe location (as described in [Move custom files](#)), copy it back to its location in `/opt/elemental_se/scripts`

Step I: Add worker nodes

Add the worker nodes back to the cluster and their redundancy groups. Perform these steps for all worker nodes that are supposed to be in the cluster.

Topics

- [Step A: Add worker nodes to the cluster](#)
- [Step B: Add worker nodes to redundancy groups](#)
- [Step C: Add channel assignments](#)

Step A: Add worker nodes to the cluster

Add the worker nodes back to the cluster.

To add nodes to the cluster

1. On the primary Conductor Live node's web interface, go to the **Cluster** page and choose **Nodes**.
2. On the **Nodes** page, choose **Add Node**.
3. In the **Add Nodes to Cluster** dialog, do one of the following:
 - In **Node IP Address/s**, enter the IP address or range of IP addresses for multiple nodes and choose **Add**.
 - If your network has a DNS server, search for the node by its hostname:
 1. In **Lookup Node IP Address**, enter the hostname of the node that you're adding. You set the hostname during installation of the node.
 2. Choose the **search** icon.
 3. When Conductor Live displays the IP address that corresponds to the hostname, choose the plus sign beside the address to add it to the Node IP address list.
 4. Choose **Add**.
4. Still in the **Add Nodes to Cluster** dialog, add each node that will be a part of the cluster.
5. Verify that the nodes are added to the list on the Nodes screen and the correct information is shown:
 - The **Status** is **Online**.

- The **Elemental Product** is the correct type of node, either Conductor Live or AWS Elemental Live.
6. If any nodes contain SDI cards, import the devices so that the Conductor Live node knows about them. Do the following:

1. On a node that has SDI cards, choose the downward triangle and select **Import Devices**.

Conductor Live detects the device and adds its configuration to the Conductor Live database.

2. Import the devices for all nodes that use SDI cards.

If you don't import the devices, they won't appear in the Conductor Live web interface. You won't be able to specify these devices as video sources in a channel.

Step B: Add worker nodes to redundancy groups

Add the workers to their redundancy groups.

For more information about adding workers to redundancy groups, see *Add Worker Node Redundancy* in the [AWS Elemental Conductor Live Configuration Guide](#).

To add workers to redundancy groups

1. On the primary Conductor Live node's web interface, go to the **Cluster** page.
2. On the **Cluster** page, choose **Redundancy**.
3. In the navigation bar, choose the Elemental Live redundancy group.
4. On the **Active Nodes** tab, choose **Add to Active**.
5. In the **Nodes** field, select the nodes to add to the group.
6. Choose **Add**.
7. On the **Backup Nodes** tab, choose **Add to Backup Nodes**.
8. In the **Nodes** field, select the nodes to add to the group. Make sure that you add nodes in order, starting with the reserve node with the highest priority.
9. Choose **Add**.
10. If you have multiple Elemental Live redundancy groups, repeat this procedure on each group, and then go to the next step.

Step C: Add channel assignments

Assign channels back to the nodes.

To assign channels to the workers

1. On the primary Conductor Live node's web interface, go to the **Channels** page.
2. Choose **Edit**(pencil icon) on a channel.
3. On the **Edit Channel** page, in **Node**, choose the node that this channel will use.
4. Save the channel. Repeat this procedure to edit the remaining channels to have the correct node assignment.
5. When all of the channels have node assignments, go to the next step.

Step J: Add the secondary Conductor Live node

If you have only one Conductor Live, skip this step and go to [Step K: Start channels](#).

Add the secondary node back to the cluster, and then to the redundancy group.

To avoid errors when you're adding the secondary Conductor Live back to the cluster, wait approximately three minutes after the upgrade before performing these steps. This wait ensures that the `elemental_se` service has restarted and is running.

To add the secondary node to the cluster

1. On the web interface for the primary Conductor Live node, access **Cluster > Nodes** and choose **Add Node**.
2. In the **Add Nodes to Cluster** pop-up, complete the node information for the secondary Conductor Live and choose **Add**.

When the secondary node is added back to the cluster, add it to the Conductor Live redundancy group.

To add the secondary node to the redundancy group

1. On the web interface for the primary Conductor Live node, access **Cluster > Redundancy** and select the Conductor Live redundancy group.

2. Choose **Add HA Nodes**.
3. In the **Add** pop-up, use the **Node** drop-down to select the secondary Conductor Live. Choose **Add**.

When the secondary node is added back to the cluster and redundancy group, you can start the channels, as described in the following section.

Step K: Start channels

When all nodes have been upgrade, you can start the channels that were previously running.

To start channels

1. On the web interface for the primary Conductor Live node, access the **Channels** screen.
2. Toward the top of the page, select **Tasks** and **Start Channels**.

Alternatively, if you want to start channels individually, select the play button on each channel that you're starting.

If you have only one Conductor Live, the upgrade process is complete when you start the channels. Otherwise, continue to the following section to enable high availability.

Step L: Re-enable high availability

You re-enable high availability when you have more than one Conductor Live node. If you have only one Conductor node you don't need to do re-enable high availability and the upgrade process is complete when you start the channels.

Important

Enabling high availability must be the last step that you take when changing versions on your cluster.

To enable HA

1. If you're using a virtual machine (VM), take a snapshot before you enable HA. See the VMware VSphere help text for more information.

2. On the web interface for the primary Conductor Live node, go to the **Cluster** page and choose **Redundancy**. In the **High Availability** field, choose **Enable**.

To verify that HA is correctly enabled, follow these steps on each Conductor Live node.

1. At your workstation, start a remote terminal session to the Conductor Live node.
2. Enter the following command to verify that Conductor Live HA is enabled:

```
[elemental@hostname log]$ tail -F /opt/elemental_se/web/log/  
conductor_live247.output
```

The conductor_live247.output log starts to scroll on the screen and shows messages as they are occurring. Watch for the following INFO lines on the primary Conductor Live node:

```
CONDUCTOR: Initializing environment  
I, [2015-11-13T04:37:54.491204 #4978] INFO -- : Configuring the HA environment  
I, [2015-11-13T04:37:54.660644 #4978] INFO -- : configuring keepalived  
.  
.  
.  
I, [2015-11-13T04:38:03.905069 #4978] INFO -- : Elemental Conductor is ready
```

3. Press **Ctrl - C** to exit the tail command.
4. Enter the following commands:

```
[elemental@hostname ~]$ sudo -s  
[elemental@hostname ~]$ cd /data/pgsql/logs  
[elemental@hostname ~]$ tail -F postgresql-<day>.log
```

where *<day>* is today (the day you are upgrading), typed with an initial capital letter: Mon, Tue, Wed, Thu, Fri, Sat, Sun

5. Confirm that you see database system is ready to accept connections on the primary Conductor Live, and database system is ready to accept read only connections on the secondary Conductor Live.
6. Press **Ctrl - C** to exit the tail command.
7. Type the following command to exit the session as the sudo user:

```
[elemental@hostname ~]$ exit
```

Reduced downtime Conductor Live upgrade

The process outlined in this section uses worker redundancy to limit the upgrade downtime. This process applies when the following are true:

- The worker nodes are in a redundancy group.
- You are upgrading the worker nodes and the AWS Elemental Conductor Live node or nodes to the same major version. For example, 2.25.5 and 3.25.5.
- The cluster is in a working state. If any node is in a degraded state (not responding or not accepting jobs), the upgrade on that node won't work.

If these conditions don't apply, see [Standard Conductor Live upgrade](#).

Note

In this procedure, we show how to upgrade from version 3.23.5 to version 3.25.5 (for Conductor Live) and from version 2.23.5 to version 2.25.5(for worker nodes). Modify your commands to specify the version that you are upgrading to.

To check the type of redundancy of your deployment

1. On the web interface for the primary Conductor Live node, access **Conductor Live > Redundancy**.
2. Look in the **Redundancy Group** task bar:
 - If you find any groups labeled as **Live**, your cluster is using worker redundancy and you can perform the reduced downtime upgrade.
 - If you find any groups labeled as **Conductor Live**, your cluster is using Conductor Live redundancy (high availability).

The following procedure shows the comprehensive reduced downtime upgrade process. This process is valid whether or not you have Conductor Live redundancy. It will guide you to your next step based on your circumstances through the steps provided.

Topics

- [Step A: Get ready](#)
- [Step B: Copy the AWS Elemental installers](#)
- [Step C: Remove the backup worker nodes](#)
- [Step D: Upgrade the backup worker nodes](#)
- [Step E: Add back the backup worker nodes](#)
- [Step F: Fail over an active node](#)
- [Step G: Remove the failed worker node](#)
- [Step H: Upgrade the failed active node](#)
- [Step I: Add failed worker node](#)
- [Step J: Fail back the running channels](#)
- [Step K: Re-designate the backup worker node](#)
- [Step L: Disable high availability](#)
- [Step M: Remove the secondary Conductor Live node](#)
- [Step N: Upgrade the secondary Conductor Live node](#)
- [Step O: Upgrade the primary Conductor node](#)
- [Step P: Add the secondary Conductor Live node](#)
- [Step Q: Re-enable high availability](#)

Step A: Get ready

The following steps prepare you for upgrading. Perform these steps to ensure that you don't lose any data.

Enabling HTTPS

Do not follow the reduced downtime upgrade process if you're enabling HTTPS at the same time that you're upgrading the cluster. HTTPS must be enabled on all nodes at the same time, so you have to use the [standard upgrade process](#).


Check essential notes

Refer to the essential notes in the [current Release Notes](#) to identify changes in behavior with the upgrade.

Verify the worker node type

The software installer that you use for the nodes varies depending on if you have GPU-accelerated software type, or CPU-only. To determine the type of software, look at any web interface screen of the worker node. The top shows icons as follows:

- CPU and GPU icons: the software is *GPU-accelerated*.
- CPU icon only: the software is *CPU-only*.

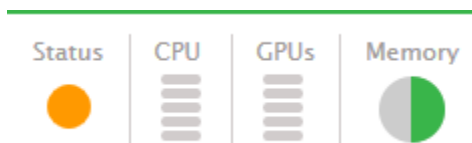

Save the latest database backup

Perform these steps on the primary Conductor Live node and all worker nodes in the cluster.

When you install the upgraded operating system, your previous database backups are deleted. Locate and save the most recent backup off the system. You can use this backup later if you need to downgrade.

To save the latest backup

1. From a Linux prompt, log in to the appliance with the *elemental* user credentials.
2. Navigate to the directory where Conductor Live saves its backups.

```
[elemental@host ~]$ cd /home/elemental/database_backups
```

3. Locate the most recent backup and save it to a location off the AWS Elemental system. The backup name includes the date and time that the backup was taken, in a format similar to this:
`elemental-db-backup_live_2.23.5_2018-02-08_21-01-36.tar`

Move custom files

If the primary Conductor Live or any worker nodes have custom AWS Elemental assets, such as scripts, saved to `/opt/elemental_se/scripts`, then move them to a safe location so they're not deleted during the upgrade.

Create bootable kickstart

You must install the host operating system from an `.iso` file onto each physical machine that will be running AWS Elemental software. Doing so is referred to as “kickstarting the system”.

Make sure that you install the right version of the operating system with each piece of software. The correct `.iso` file is available at [AWS Elemental Support Center Activations](#).

Create a Boot USB Drive

Do this from your workstation.

Use a third-party utility (such as PowerISO or ISO2USB) to create a bootable USB drive from your `.iso` file. For help, see the knowledge base article [Creating Bootable Recovery \(kickstart\) Media](#).

Step B: Copy the AWS Elemental installers

Locate and copy the AWS Elemental installers for worker and Conductor Live nodes.

1. From your regular workstation, open a web browser, go to [AWS Elemental Support Center Activations](#) and download the software for the version that you're upgrading to.
2. Make a note of where downloads are stored on your workstation. For example:

```
h:/corporate/downloads/.
```

3. Make a note of the name of the download file. For example:
`elemental_production_conductor_live247_3.25.5.12345.run`
4. Copy the download file from your workstation to `/home/elemental/` on one of the nodes. For example:
 - Use SFTP protocol and an FTP client application on your workstation computer. Connect to the IP address for Conductor Live on port 22 with the *elemental* user credentials and transfer the file.

- Use SCP protocol and an SCP client application on your workstation computer. Copy the file with the *elemental* user credentials and transfer the file.
5. Repeat the download to any other nodes that are changing versions. If you're changing versions on several nodes, copy the download file to every appliance at once. Doing so reduces downtime on each node as you start installing the new software.

For detailed downloading steps, see [Downloading Software](#).

Step C: Remove the backup worker nodes

Remove the backup worker nodes from the redundancy group before removing them from the cluster. You can then upgrade them while the active workers continue to encode.

Topics

- [Step A: Remove backup workers from redundancy groups](#)
- [Step B: Remove backup workers from the cluster](#)

Step A: Remove backup workers from redundancy groups

Remove all backup workers from the worker redundancy groups.

To remove workers from redundancy groups

1. On the web interface for the primary Conductor Live node, go to the **Cluster** page.
2. On the **Cluster** page, choose **Redundancy**.
3. In the navigation bar, choose the Elemental Live redundancy group.
4. On the **Backup Nodes** tab, choose **Delete** (trash icon) for each node.
5. If you have multiple Elemental Live redundancy groups, repeat this procedure on each group, then go to the next step.

Step B: Remove backup workers from the cluster

Remove the backup workers from the cluster so that you can perform the upgrade process.

To remove workers from the cluster

1. On the **Cluster** page, choose **Nodes**.

2. On each backup worker, choose the downward triangle and select **Remove Node**.
3. Remove all backup workers from the cluster, then move on to the upgrade process.

Step D: Upgrade the backup worker nodes

The role of backup nodes is not to run channels but to take over from an active node that fails. If you have any nodes that are strictly backup nodes, then upgrade these nodes first before performing the upgrade.

Perform these same steps on each node. To limit your downtime, upgrade all of the backup nodes before upgrading the active nodes.

There are two procedures for upgrading. Choose the procedure that applies to your deployment.

To upgrade backup worker nodes without changing the deployment

Follow this procedure if you don't need to change anything about the deployment.

1. From the Linux command line, log in to the worker node. Use the *elemental* user credentials.
2. Run the installer. Make sure to include the `-c` option to clear the database. Use the appropriate command:

- For GPU and CPU versions of the software:

```
[elemental@hostname ~]$ sudo sh ./elemental_production_live_2.25.5.12345.run -c --skip-all --start -xeula
```

- For CPU-only versions of the software:

```
[elemental@hostname ~]$ sudo sh ./elemental_production_live_cpu_2.25.5.12345.run -c --skip-all --start -xeula
```

3. If you copied a script to a safe location (as described in [the section called "Move custom files"](#)), copy it back to its location in `/opt/elemental_se/scripts`.
4. When the upgrade is complete, restart the node with the following command:

```
[elemental@hostname ~] sudo reboot
```

5. Repeat the upgrade steps on each backup worker node before moving on to the next step in the upgrade process.

To upgrade backup worker nodes and change the deployment

Follow this procedure if you want to change something in the deployment. Specifically, follow this procedure if you want to enable OCR conversion for the first time. This feature is available in AWS Elemental Live version 2.22.0 and later. (For information about this feature, see [Support for OCR Conversion](#) in the *AWS Elemental Live User Guide*.)

1. Follow the appropriate procedure in the *AWS Elemental Live Installation Guide*:
 - [Install the AWS Elemental Live software](#): to install on hardware
 - [Install the AWS Elemental Live software](#): to install on a VM
2. If you copied a script to a safe location (as described in [the section called “Move custom files”](#)), copy it back to its location in `/opt/elemental_se/scripts`.
3. When the upgrade is complete, restart the node with the following command:

```
[elemental@hostname ~] sudo reboot
```

4. Repeat the upgrade steps on each backup worker node before moving on to the next step in the upgrade process.

Step E: Add back the backup worker nodes

Add the backup workers back to the cluster and redundancy groups so that they can encode while the remaining workers are upgraded.

Step A: Add back the backup worker nodes to the cluster

Add the backup worker nodes back to the cluster.

To add nodes to the cluster

1. On the web interface for the primary Conductor Live node, go to the **Cluster** page and choose **Nodes**.
2. On the **Nodes** page, choose **Add Node**.
3. In the **Add Nodes to Cluster** dialog, do one of the following:
 - In **Node IP Address/s**, enter the IP address or range of IP addresses for multiple nodes and choose **Add**.

- If your network has a DNS server, search for the node by its hostname:
 1. In **Lookup Node IP Address**, enter the hostname of the node that you're adding. You set the hostname during installation of the node.
 2. Choose the **search** icon.
 3. When Conductor Live displays the IP address that corresponds to the hostname, choose the plus sign beside the address to add it to the Node IP address list.
 4. Choose **Add**.
- 4. Still in the **Add Nodes to Cluster** dialog, add each node that will be a part of the cluster.
- 5. Verify that the nodes are added to the list on the Nodes screen and the correct information is shown:
 - The **Status** is **Online**.
 - The **Elemental Product** is the correct type of node, either Conductor Live or AWS Elemental Live.
- 6. If any nodes contain SDI cards, import the devices so that the Conductor Live node knows about them. Do the following:
 1. On a node that has SDI cards, choose the downward triangle and select **Import Devices**.

Conductor Live detects the device and adds its configuration to the Conductor Live database.
 2. Import the devices for all nodes that use SDI cards.

If you don't import the devices, they won't appear in the Conductor Live web interface. You won't be able to specify these devices as video sources in a channel.

Step B: Add back the backup workers to redundancy groups

Add the backup workers to their redundancy groups.

For more information about adding workers to redundancy groups, see *Add Worker Node Redundancy* in the [AWS Elemental Conductor Live Configuration Guide](#).

To add workers to redundancy groups

1. On the web interface for the primary Conductor Live node, go to the **Cluster** page.

2. On the **Cluster** page, choose **Redundancy**.
3. In the navigation bar, choose the Elemental Live redundancy group.
4. On the **Backup Nodes** tab, choose **Add to Backup Nodes**.
5. In the **Nodes** field, select the nodes to add to the group. Make sure that you add nodes in order, starting with the reserve node with the highest priority.
6. Choose **Add**.
7. If you have multiple Elemental Live redundancy groups, repeat this procedure on each group, and then go to the next step.

Step F: Fail over an active node

Fail over the running channels from the first active worker node that you're upgrading to a backup node. To reduce impact on your worker nodes, perform this step through [Step K: Re-designate the backup worker node](#) all for the same active worker node before moving on to the next node.

To fail-over a node

1. On the web interface for the primary Conductor Live node, access **Cluster > Redundancy**.
2. Select the worker node redundancy group which contains the node that you're failing over.
3. On the **Active Nodes** tab, locate the node that you're upgrading and choose the **Initiate Failover** button (double arrows).

The backup node is moved to the **Active Nodes** tab and the running channels are moved from the failed worker.

4. When all channels are failed to a backup worker node, upgrade the failed active node as described in the next step.

Warning

Your worker redundancy group will persist in an N+0 redundancy type until you've upgraded all worker nodes. In a production scenario, this is *not a valid configuration*. An alert will persist until you are back to an N+1, 1+1, or N+M redundancy type.

Step G: Remove the failed worker node

Remove the failed worker node from the redundancy group and then from the cluster. It can then be upgraded while the backup worker continues to encode.

Topics

- [Step A: Remove failed worker from redundancy groups](#)
- [Step B: Remove failed worker from the cluster](#)

Step A: Remove failed worker from redundancy groups

Remove the active worker that you just failed over from the worker redundancy group.

To remove the failed worker from a redundancy group

1. On the web interface for the primary Conductor Live node, go to the **Cluster** page.
2. On the **Cluster** page, choose **Redundancy**.
3. In the navigation bar, choose the Elemental Live redundancy group.
4. On the **Backup Nodes** tab, choose **Delete** (trash icon) for the failed worker.

Step B: Remove failed worker from the cluster

Remove the failed worker from the cluster so that you can perform the upgrade process.

To remove the failed worker from the cluster

1. On the **Cluster** page, choose **Nodes**.
2. On each the failed worker, choose the downward triangle and select **Remove Node**.
3. Move on to the upgrade process for this worker.

Step H: Upgrade the failed active node

Now upgrade the active worker node that you just failed over. Use the same upgrade process that you used to upgrade the backup worker nodes. Perform these steps from the now-failed node.

To reduce impact on your worker nodes, upgrade one active node at a time and complete the steps through [Step K: Re-designate the backup worker node](#) before moving on to the next node.

Perform these steps on each node. To limit your downtime, upgrade all of the backup nodes before upgrading the active nodes.

There are two procedures for upgrading. Choose the procedure that applies to your deployment.

To upgrade the failed worker node without changing the deployment

Follow this procedure if you don't need to change anything about the deployment.

1. From the Linux command line, log in to the worker node. Use the *elemental* user credentials.
2. Run the installer. Make sure to include the `-c` option to clear the database. Use the appropriate command:

- For GPU and CPU versions of the software:

```
[elemental@hostname ~]$ sudo sh ./elemental_production_live_2.25.5.12345.run -c --skip-all --start -xeula
```

- For CPU-only versions of the software:

```
[elemental@hostname ~]$ sudo sh ./elemental_production_live_cpu_2.25.5.12345.run -c --skip-all --start -xeula
```

3. If you copied a script to a safe location (as described in [the section called "Move custom files"](#)), copy it back to its location in `/opt/elemental_se/scripts`.
4. When the upgrade is complete, restart the node with the following command:

```
[elemental@hostname ~] sudo reboot
```

5. When the upgrade on this node is complete, fail-back the channels that were on this node, as described in the next step.

To upgrade the failed worker node and change its deployment

Follow this procedure if you want to change something in the deployment. Specifically, follow this procedure if you want to enable OCR conversion for the first time. This feature is available in AWS Elemental Live version 2.22.0 and later. (For information about this feature, see [Support for OCR Conversion](#) in the *AWS Elemental Live User Guide*.)

1. Follow the appropriate procedure in the *AWS Elemental Live Installation Guide*:

- [Install the AWS Elemental Live software](#): to install on hardware
 - [Install the AWS Elemental Live software](#): to install on a VM
2. If you copied a script to a safe location (as described in [the section called “Move custom files”](#)), copy it back to its location in `/opt/elemental_se/scripts`.
 3. When the upgrade is complete, restart the node with the following command:

```
[elemental@hostname ~] sudo reboot
```

4. When the upgrade on this node is complete, fail-back the channels that were on this node, as described in the next step.

Step I: Add failed worker node

Add the failed worker back to the cluster and redundancy groups so that it can encode while the remaining workers are upgraded.

Step A: Add failed worker to the cluster

Add the failed worker node back to the cluster.

To add nodes to the cluster

1. On the web interface for the primary Conductor Live node, go to the **Cluster** page and choose **Nodes**.
2. On the **Nodes** page, choose **Add Node**.
3. In the **Add Nodes to Cluster** dialog, do one of the following:
 - In **Node IP Address/s**, enter the IP address or range of IP addresses for multiple nodes and choose **Add**.
 - If your network has a DNS server, search for the node by its hostname:
 1. In **Lookup Node IP Address**, enter the hostname of the node that you're adding. You set the hostname during installation of the node.
 2. Choose the **search** icon.
 3. When Conductor Live displays the IP address that corresponds to the hostname, choose the plus sign beside the address to add it to the Node IP address list.
 4. Choose **Add**.

4. Still in the **Add Nodes to Cluster** dialog, add each node that will be a part of the cluster.
5. Verify that the nodes are added to the list on the Nodes screen and the correct information is shown:
 - The **Status** is **Online**.
 - The **Elemental Product** is the correct type of node, either Conductor Live or AWS Elemental Live.
6. If any nodes contain SDI cards, import the devices so that the Conductor Live node knows about them. Do the following:
 1. On a node that has SDI cards, choose the downward triangle and select **Import Devices**.

Conductor Live detects the device and adds its configuration to the Conductor Live database.
 2. Import the devices for all nodes that use SDI cards.

If you don't import the devices, they won't appear in the Conductor Live web interface. You won't be able to specify these devices as video sources in a channel.

Step B: Add failed worker to a redundancy groups

Add the failed workers to their redundancy groups.

For more information about adding workers to redundancy groups, see *Add Worker Node Redundancy* in the [AWS Elemental Conductor Live Configuration Guide](#).

To add the failed worker to a redundancy group

1. On the web interface for the primary Conductor Live node, go to the **Cluster** page.
2. On the **Cluster** page, choose **Redundancy**.
3. In the navigation bar, choose the Elemental Live redundancy group that this node belongs to.
4. On the **Backup Nodes** tab, choose **Add to Backup Nodes**.
5. In the **Nodes** field, select the failed worker node to add to the group.
6. Choose **Add**.

Step J: Fail back the running channels

Move the running channels back to the upgraded active node by failing over the backup node that they're currently on.

To fail-back channels

1. On the web interface for the primary Conductor Live node, access **Cluster > Redundancy**.
2. Select the worker node redundancy group.
3. On the **Active Nodes** tab, locate the node that the channels failed over to and choose the **Initiate Fail over** button (double arrows).

The upgraded node is moved to the **Active Nodes** tab and the running channels are moved from the backup worker.

4. When all channels are moved back to the active worker node, re-designate the backup worker node as a backup, as described in the next step.

Step K: Re-designate the backup worker node

Re-designate the backup worker as a backup so that it only runs active channels that have failed over from an active worker node.

To designate a backup worker node

1. On the web interface for the primary Conductor Live node, access **Cluster > Redundancy**.
2. Select the worker node redundancy group.
3. On the **Active Nodes** tab, locate the backup node that the channels failed over to and choose the **Move** button (circle).

The node is moved back to the **Backup Nodes** tab.

4. When the backup node is moved back to the backup tab, choose a different active worker node and perform the steps [Step F: Fail over an active node](#) through this step for the same node. Repeat this entire process for each active worker node in the cluster until all have been processed.

Step L: Disable high availability

To disable high availability

1. If you're using a virtual machine (VM), take a snapshot before disabling high availability. See the VMware vSphere help text for more information.
2. On the web interface for the primary Conductor Livenode, go to the **Cluster** page and choose **Redundancy**.
3. In the **High Availability** field, choose **Disable**.
4. Verify that high availability is disabled. From Linux prompts, access the primary and secondary Conductor Live nodes with the *elemental* user credentials. For password assistance, contact your system administrator.
5. In the remote terminal session for each Conductor Live, enter the following command to verify that Conductor Live high availability is disabled:

```
[elemental@hostname log]$ tail -F /opt/elemental_se/web/log/  
conductor_live247.output
```

The `conductor_live247.output` log starts to scroll on the screen and shows messages as they are occurring. Watch for the following INFO lines on the primary Conductor Live node:

```
WARN -- : Disabling HA, elemental_se restarting..  
.  
.  
.  
I, [2015-11-13T04:37:54.491204 #4978] INFO -- : HA environment not enabled  
.  
.  
.  
I, [2015-11-13T04:38:03.905069 #4978] INFO -- : Elemental Conductor is ready
```

Ensure the secondary Conductor Live is also ready.

6. Press Ctrl+C to exit the tail command.
7. Enter the following commands:

```
[elemental@hostname ~]$ sudo -s  
[elemental@hostname ~]$ cd /data/pgsql/logs
```

```
[elemental@hostname ~]$ tail -F postgresql-<day>.log
```

where <day> is today (the day you are upgrading), typed with an initial capital letter: Mon, Tue, Wed, Thu, Fri, Sat, Sun

8. Confirm that you see database system is ready to accept connections on the secondary Conductor Live.
9. Press Ctrl+C to exit the tail command.
10. Type the following command to exit the session as the sudo user:

```
[elemental@hostname ~]$ exit
```

Step M: Remove the secondary Conductor Live node

If you have only one Conductor Live, skip this step and go to [the section called "Step O: Upgrade the primary Conductor node"](#).

Prior to upgrading, you must remove the secondary Conductor Live node first from the redundancy group, and then from the cluster. You can't remove the node from the cluster if it's still in the redundancy group.

To remove the secondary node from the redundancy group

1. On the web interface for the primary Conductor Live node, access **Cluster > Redundancy** and ensure that you have the Conductor Live redundancy group selected.
2. Locate the secondary Conductor Live and click Delete (trash icon) to delete it from the redundancy group.

When the secondary Conductor Live node is removed from the redundancy group, remove it from the cluster.

To remove the secondary node from the cluster

1. On the web interface for the primary Conductor Live node, access **Cluster > Nodes**.
2. Locate the secondary Conductor Live node and display the options by choosing the down-facing arrow.
3. Select **Remove Node**.

Step N: Upgrade the secondary Conductor Live node

If you have only one Conductor Live, skip this step and go to [the section called “Step O: Upgrade the primary Conductor node”](#).

Perform these steps on the secondary Conductor Live node.

To upgrade the Conductor Live nodes

Perform these steps on the secondary Conductor Live (if applicable), then on the primary Conductor Live.

1. From the Linux command line, log in to the worker node. Use the *elemental* user credentials.
2. Run the installer. Make sure to include the `-c` option to clear the database. Use this command:

```
[elemental@hostname ~]$ sudo sh ./
elemental_production_conductor_live247_3.25.5.12345.run -c --skip-all --start -
xeula
```

The installer automatically stops the software. You will not be prompted to do the following:

- Change the network setup (eth0 and eth1) or the Ethernet partitioning (setup of eth0 as a management interface).
 - Choose the timezone.
 - Enable or disable user authentication.
3. Make sure that the `elemental_se` service restarts. Look for this prompt on the primary Conductor Live command line:

```
Starting elemental_se:          [OK]
```

4. If you copied a script to a safe location (as described in [the section called “Move custom files”](#)), copy it back to its location in `/opt/elemental_se/scripts`.

Step O: Upgrade the primary Conductor node

Warning

Do not clear the database of the primary Conductor Live node when you run the installer!

Perform these steps on the primary Conductor Live node.

To upgrade the primary node

1. From the Linux command line, log in to the worker node. Use the *elemental* user credentials.
2. Run the installer. *Do not* include the `-c` option to clear the database. Use this command:

```
[elemental@hostname ~]$ sudo sh ./  
elemental_production_conductor_live247_3.25.5.12345 --skip-all --start -xeula
```

The installer automatically stops the software. You will not be prompted to do the following:

- Change the network setup (eth0 and eth1) or the Ethernet partitioning (setup of eth0 as a management interface).
 - Choose the timezone.
 - Enable or disable user authentication.
3. Make sure that the `elemental_se` service restarts. Look for this prompt on the primary Conductor Live command line:

```
Starting elemental_se: [OK]
```

4. If you copied a script to a safe location (as described in [the section called "Move custom files"](#)), copy it back to its location in `/opt/elemental_se/scripts`.

Step P: Add the secondary Conductor Live node

If you have only one Conductor Live, you don't need to do this step. The downgrade process is complete when you upgrade the single Conductor Live.

Add the secondary node back to the cluster, and then to the redundancy group.

Wait approximately three minutes after the upgrade before you perform these steps. This wait ensures that the `elemental_se` service has restarted and is running.

To add the secondary node to the cluster

1. On the web interface for the primary Conductor Live node, access **Cluster > Nodes** and choose **Add Node**.

2. In the **Add Nodes to Cluster** pop-up, complete the node information for the secondary Conductor Live and choose **Add**.

When the secondary node is added back to the cluster, add it to the Conductor Live redundancy group.

To add the secondary node to the redundancy group

1. On the web interface for the primary Conductor Live node, access **Cluster > Redundancy** and select the Conductor Live redundancy group.
2. Choose **Add HA Nodes**.
3. In the **Add** pop-up, use the **Node** drop-down to select the secondary Conductor Live. Choose **Add**.

When the secondary node is added back to the cluster and redundancy group, you can start the channels, as described in the following section.

Step Q: Re-enable high availability

1. If you're using a virtual machine (VM), take a snapshot before you enable HA. See the VMware VSphere help text for more information.
2. On the web interface for the primary Conductor Live node, go to the **Cluster** page and choose **Redundancy**. In the **High Availability** field, choose **Enable**.

To verify that HA is correctly enabled, follow these steps on each Conductor Live node.

1. At your workstation, start a remote terminal session to the Conductor Live node.
2. Enter the following command to verify that Conductor Live HA is enabled:

```
[elemental@hostname log]$ tail -F /opt/elemental_se/web/log/  
conductor_live247.output
```

The `conductor_live247.output` log starts to scroll on the screen and shows messages as they are occurring. Watch for the following INFO lines on the primary Conductor Live node:

```
CONDUCTOR: Initializing environment  
I, [2015-11-13T04:37:54.491204 #4978] INFO -- : Configuring the HA environment
```

```
I, [2015-11-13T04:37:54.660644 #4978] INFO -- : configuring keepalived
.
.
.
I, [2015-11-13T04:38:03.905069 #4978] INFO -- : Elemental Conductor is ready
```

3. Press **Ctrl - C** to exit the tail command.
4. Enter the following commands:

```
[elemental@hostname ~]$ sudo -s
[elemental@hostname ~]$ cd /data/pgsql/logs
[elemental@hostname ~]$ tail -F postgresql-<day>.log
```

where **<day>** is today (the day you are upgrading), typed with an initial capital letter: Mon, Tue, Wed, Thu, Fri, Sat, Sun

5. Confirm that you see database system is ready to accept connections on the primary Conductor Live, and database system is ready to accept read only connections on the secondary Conductor Live.
6. Press **Ctrl - C** to exit the tail command.
7. Type the following command to exit the session as the sudo user:

```
[elemental@hostname ~]$ exit
```

Sample Upgrade

Following is a screen printout of a typical upgrade, showing the prompts and possible responses.

```
[elemental@hostname ~]$ sudo sh ./
elemental_production_conductor_live247_3.25.4.12345.run --skip-all
Verifying archive integrity... All good.
Uncompressing Elemental Installer.....
Network device eth0 already initialized...
Stopping Apache..
Checking Elemental System Update
Starting system update
New system update version: 25101
Skipping System Update, version 25101 has already been applied
Installing Conductor Live 3.25.1.12345
```

```

Network device eth0 already initialized...

Welcome to the product installation utility!
Version information:
  Conductor Live (CPU) 3.25.4.12345
  -----
  ruby 1.9.3p484 (2013-11-22 revision 43786) [x86_64-linux]
  Rails 3.2.17
  mysql Ver 14.14 Distrib 5.1.73, for redhat-linux-gnu (x86_64) using readline
5.1
  Elemental Git revision 543f5b87

Checking license files.
IMPORTANT INFORMATION
.
.
.
Continue? [Y] y

2. LICENSE AND RESTRICTIONS.
.
.
.
Continue? [Y] y

TERM AND TERMINATION. This Agreement is effective until terminated. This
.
.
.
Continue? [Y] y
.
.
.
Do you agree to these terms? [N] y

```

The Conductor Live services and the database are stopped.

```

Stopping services...
Starting mysqld:                [ OK ]

Stopping mysqld:                [ OK ]
Starting mysqld:                [ OK ]

```

The software is updated.

```
Creating/Updating database...
Running migrations - this could take a while.
Database updated!
Database creation complete!
Loading Rails environment...
Adding node to database...
Saving settings...
Adding cluster stat monitors...
Adding node stat monitors...
Adding cluster scheduled tasks...
Adding node scheduled tasks...
Adding licensing scheduled tasks...
```

Files are verified.

```
Checking hardware and license files...
[2014-08-29 22:24:31 +0000 SERVICE]: 8 CPU cores available, max CPU load: 21.12

Hardware and license check complete
Creating default directory structures and data
Setting server defaults...
Checking user presets...
Checking user profiles...
Changing permissions and ownership...
Cleaning elemental_ipc...
Removing tmp...
Removing cached files
Configuring Apache...
Adding Elemental service...
Configuring log rotation...
Configuring SNMP...
Configuring dynamic libraries...
Configuring NTP...
Setting sysctl configuration and adding to /etc/rc.local...
Configuring Avahi...
```

Services are started.

```
Shutting down SMB services:           [ OK ]
Starting SMB services:                 [ OK ]
```

```
Setting CPU scaling governorStarting services...
Starting system logger:                [ OK ]
Starting httpd:                        [ OK ]
Starting ntpd:                         [ OK ]
Shutting down Avahi daemon:           [ OK ]
Starting Avahi daemon...               [ OK ]
Starting snmpd:                        [ OK ]
```

The user is prompted to start `elemental_se`.

```
Would you like to start the Elemental service now? [Y] y
Starting elemental_se:                  [ OK ]
Starting elemental-issue:              [ OK ]

Installation and configuration complete!
Please open a web browser and point it to http://10.4.136.91 to get to the web
interface.
Enjoy!
[elemental@hostname ~]$
```

Downloading Conductor Live Software

These are the detailed steps for downloading software files from the [AWS Elemental Support Center](#).

1. Log in to the [AWS Elemental Support Center](#) with the email address that you used to receive your activation email and your password.
2. From the home page, click **Software and Licenses** on the right.
3. From the **Download Central Home**, choose **Your Entitlements** from the **Software & Entitlements** menu.
4. On **Your Entitlements**, your orders are listed from newest to oldest. In the **Activation Key** column, choose the link for the product that you're downloading.
5. On **Order Detail**, choose the plus sign for the package listed in the **Product Description** column to expand the order details. Then choose the product and version that you wish to download.
6. In the list of available files, choose the file you want to download.
7. On **Product Download**, select the check box next to the file you want to download. Then click **Download Selected Files**.
8. If you are prompted to install the NetSession Interface download manager, click **download the installer** and run the executable.
9. Select a location and save the files. Note the file location for later.

Cluster downgrades in Conductor Live

In a AWS Elemental Conductor Live cluster, downgrade the Conductor Live nodes first, and then downgrade each of the Elemental Live worker nodes.

Downgrade rules

The following rules apply when you're downgrading Conductor Live software.

- Your system must be in a working state prior to the downgrade. If it's in a degraded state (for example, it is failing to successfully create events or channels, or it isn't responding through the web interface), the downgrade does not work.
- You can downgrade to a version that's a maximum of two major versions below your current version. For example, for Conductor Live, you can downgrade from 3.25.5 to 3.23.5. (The number of minor versions between the two versions is irrelevant.)
- We recommend that you always downgrade to the highest minor version in the series you're downgrading to. For example, downgrade to 3.23.5.
- To downgrade over a bigger span than two major versions, you must perform the downgrade in several steps. For example, downgrade from 3.25.5 to 3.23.5, then to 3.22.5.

Important

Plan to downgrade during a maintenance window. All activity on the nodes stops during downgrade.

In this procedure, we show how to downgrade from version 3.25.5 to version 3.23.5 (for Conductor Live) and from version 2.25.5 to 2.23.5 (for worker nodes). Modify your commands to specify the version that you are downgrading to.

Topics

- [Step A: Get ready](#)
- [Step B: Copy the AWS Elemental installers](#)
- [Step C: Stop the running channels](#)
- [Step D: Disable high availability on the Conductor nodes](#)
- [Step E: Remove the secondary Conductor node](#)

- [Step F: Downgrade the nodes](#)
- [Step G: Add the secondary Conductor Live node](#)
- [Step H: Start channels](#)
- [Step I: Re-enable high availability](#)

Step A: Get ready

The following steps prepare you for downgrading. Perform these steps to ensure that you don't lose any data.

Save the database backup

Locate the database backup for the version that you're downgrading to. Copy the backup to a location off of the system. Performing a downgrade removes your entire file structure.

Every time that you downgrade, a backup of the database is automatically made and saved in the following location. For example:

```
/home/elemental/database_backups/elemental-db-backup_conductor-  
live-3_3.23.5_2021-10-12_15-03-29.tar
```

When you perform a downgrade, you must specify a database to restore. You should restore the backup that corresponds to the version you are downgrading to. For example, when downgrading to 3.23.5, restore the 3.23.5 database.

Create bootable kickstart

You must install the host operating system from an `.iso` file onto each physical machine that will be running AWS Elemental software. Doing so is referred to as “kickstarting the system”.

Make sure that you install the right version of the operating system with each piece of software. The correct `.iso` file is available at [AWS Elemental Support Center Activations](#).

Create a Boot USB Drive

Do this from your workstation.

Use a third-party utility (such as PowerISO or ISO2USB) to create a bootable USB drive from your `.iso` file. For help, see the knowledge base article [Creating Bootable Recovery \(kickstart\) Media](#).

Step B: Copy the AWS Elemental installers

Locate and copy the AWS Elemental installers for worker and Conductor nodes.

1. Find the version of the software that you're downgrading to.

Follow these steps:

- a. From a Linux prompt, log in to the hardware until with the *elemental* user credentials.
- b. Look for the desired installer as shown here.

```
[elemental@hostname ~] ls
```

Look for the file named similar to this

```
...elemental_production_conductor_live247_3.23.5.12345.run...
```

2. If you find the software, skip to [Step C: Stop the running channels](#)

If the software isn't on the appliance, go to the next step.

3. From your regular workstation, open a web browser, go to [AWS Elemental Support Center Activations](#) and download the and download the software for the version that you're going to.
4. Make a note of where downloads are stored on your workstation. For example:

```
h:/corporate/downloads/.
```

5. Make a note of the name of the download file. For example:
`elemental_production_conductor_live247_3.23.5.12345.run`
6. Copy the download file from your workstation to `/home/elemental/` on one of the nodes. For example:
 - Use SFTP protocol and an FTP client application on your workstation computer. Connect to the IP address for the product , using the *elemental* user credentials, and transfer the file.
 - Use SCP protocol and an SCP client application on your workstation computer. Copy the file with the *elemental* user credentials and transfer the file.
7. Repeat the download to any other nodes that are changing versions. If you're changing versions on several nodes, copy the download file to every appliance at once. Doing so reduces downtime on each node as you start installing the new software.

Step C: Stop the running channels

You must stop all running channels before you downgrade.

To stop channels

1. On the web interface for the primary Conductor Live node, access the **Channels** screen.
2. Toward the top of the page, select **Tasks** and **Stop Channels**.

When all channels are stopped, move on to the next step.

Step D: Disable high availability on the Conductor nodes

If you don't have high availability enabled, skip this step and go to [Step F: Downgrade the nodes](#).

To disable high availability

1. If you're using a virtual machine (VM), take a snapshot before disabling high availability. See the VMware vSphere help text for more information.
2. On the web interface for the primary Conductor Livenode, go to the **Cluster** page and choose **Redundancy**.
3. Note the values in **Virtual IP Address** and **Virtual Route Identifier**. You will use these when you re-enable high availability.
4. In the **High Availability** field, choose **Disable**.
5. Verify that high availability is disabled. From Linux prompts, access the primary and secondary Conductor Live nodes with the *elemental* user credentials. For password assistance, contact your system administrator.
6. In the remote terminal session for each Conductor Live, enter the following command to verify that Conductor Live high availability is disabled:

```
[elemental@hostname log]$ tail -F /opt/elemental_se/web/log/  
conductor_live247.output
```

The `conductor_live247.output` log starts to scroll on the screen and shows messages as they are occurring. Watch for the following INFO lines on the primary Conductor Live node:

```
WARN -- : Disabling HA, elemental_se restarting...
```

```
.  
. .  
I, [2015-11-13T04:37:54.491204 #4978] INFO -- : HA environment not enabled  
. .  
I, [2015-11-13T04:38:03.905069 #4978] INFO -- : Elemental Conductor is ready
```

Ensure the secondary Conductor Live is also ready.

7. Press Ctrl+C to exit the tail command.
8. Enter the following commands:

```
[elemental@hostname ~]$ sudo -s  
[elemental@hostname ~]$ cd /data/pgsql/logs  
[elemental@hostname ~]$ tail -F postgresql-<day>.log
```

where *<day>* is today (the day you are upgrading), typed with an initial capital letter: Mon, Tue, Wed, Thu, Fri, Sat, Sun

9. Confirm that you see database system is ready to accept connections on the secondary Conductor Live.
10. Press Ctrl+C to exit the tail command.
11. Type the following command to exit the session as the sudo user:

```
[elemental@hostname ~]$ exit
```

Step E: Remove the secondary Conductor node

If you have only one Conductor Live, skip this step and go to [Step F: Downgrade the nodes](#).

Prior to upgrading, you must remove the secondary Conductor Live node first from the redundancy group, and then from the cluster. You can't remove the node from the cluster if it's still in the redundancy group.

To remove the secondary node from the redundancy group

1. On the web interface for the primary Conductor Live node, access **Cluster > Redundancy** and ensure that you have the Conductor Live redundancy group selected.
2. Locate the secondary Conductor Live and click Delete (trash icon) to delete it from the redundancy group.

When the secondary Conductor Live node is removed from the redundancy group, remove it from the cluster.

To remove the secondary node from the cluster

1. On the web interface for the primary Conductor Live node, access **Cluster > Nodes**.
2. Locate the secondary Conductor Live node and display the options by choosing the down-facing arrow.
3. Select **Remove Node**.

When the node is removed from the redundancy group and the cluster, you can move forward with the downgrade process.

Step F: Downgrade the nodes

When you downgrade, run the installer with the `--downgrade` option for each node. Downgrade in the following order:

1. Primary Conductor Live
2. Secondary Conductor Live (if applicable)
3. Back-up worker nodes (if applicable)
4. Active worker nodes

To downgrade the primary Conductor Live

1. From the Linux prompt, log in with the *elemental* user credentials. Once you are logged in, the initial directory is `/home/elemental`.
2. Enter the following command. For example:

```
[elemental@hostname ~]$ chmod 755  
elemental_production_conductor_live247_3.23.5.12345.run
```

3. Run the installer as follows. For example:

```
[elemental@hostname ~]$ sudo ./  
elemental_production_conductor_live247_3.23.5.12345.run -skip-all -xeula --start --  
downgrade --restore-db-backup <path>
```

Options are as follows:

- `-xeula`: Skips the prompts to read through the EULA. You are prompted once to accept it.
- `--start`: Specifies to start the services without being prompted.
- `--downgrade`: Tells the installer that an earlier version is being installed.
- `--restore-db-backup <path>`: Installs the version old version of the database back-up file. Provides the path and file name in the following format:

```
/home/elemental/elemental-db-backup_<date>_<version>.tar
```

4. Reboot the node with the following command:

```
[elemental@hostname ~]$ sudo reboot
```

5. Make sure that `elemental_se` restarts on this node; otherwise, you will not be able to downgrade the secondary Conductor Live node. Look for this prompt on the primary Conductor Live command line:

```
Starting elemental_se:      [ OK ]
```

6. Refresh your web browser in order to load the updated web interface.

To downgrade the secondary Conductor Live node

Downgrade the secondary Conductor Live node using the same steps that you used above to downgrade the primary Conductor Live node. Include the clean database option (`--cleandb`) in the downgrade command instead of the restore database path. For example:

```
[elemental@hostname ~]$ sudo ./elemental_production_conductor_live247_3.23.5.12345.run  
-skip-all -xeula --start --downgrade --cleandb
```

To downgrade the worker nodes

If you're not downgrading worker nodes, skip this step and go to [Step G: Add the secondary Conductor Live node](#).

If you have worker node redundancy, downgrade the back-up nodes first and then the active nodes.

1. Enter the following command. For example:

```
[elemental@hostname ~]$ chmod 755 elemental_production_live_2.23.5.12345run
```

2. Downgrade the active worker nodes following these steps. See [AWS Elemental Live Upgrade Guide](#) for more details.

Run the installer with the skip-all option. Use the following commands with the actual file name of the .run file, rather than the example below:

- For GPU and CPU versions of the software:

```
[elemental@hostname ~]$ sudo sh ./elemental_production_live_2.23.5.12345.run -c  
--skip-all --start -xeula --downgrade
```

- For CPU-only versions of the software:

```
[elemental@hostname ~]$ sudo sh ./elemental_production_live_cpu_2.23.5.12345.run  
-c --skip-all --start -xeula --downgrade
```

3. When the installer completes, **do not** reboot or restart! Run these two commands first:

```
[elemental@hostname ~]$ sudo yum versionlock delete device-mapper*
```

```
[elemental@hostname ~]$ sudo yum install lvm2
```

If you don't run these commands before rebooting, the node will boot into emergency mode and you might lose data.

- Restart the node with the following command:

```
[elemental@hostname ~] sudo reboot
```

On the Conductor Live web interface, a message appears to indicate that the node is deactivated (offline).

- When the node has rebooted, the Conductor Live web interface displays a message to indicate that the node is back online. Refresh your web browser on the Elemental Live node to load the updated web interface.
- Repeat the downgrade steps on each worker node before moving on to the next step in the downgrade process.

Step G: Add the secondary Conductor Live node

If you have only one Conductor Live, skip this step and go to [Step H: Start channels](#).

Add the secondary node back to the cluster, and then to the redundancy group.

To avoid errors when you're adding the secondary Conductor Live back to the cluster, wait approximately three minutes after the downgrade before performing these steps. This wait ensures that the `elemental_se` service has restarted and is running.

To add the secondary node to the cluster

- On the web interface for the primary Conductor Live node, access **Cluster > Nodes** and choose **Add Node**.
- In the **Add Nodes to Cluster** pop-up, complete the node information for the secondary Conductor Live and choose **Add**.

When the secondary node is added back to the cluster, add it to the Conductor Live redundancy group.

To add the secondary node to the redundancy group

- On the web interface for the primary Conductor Live node, access **Cluster > Redundancy** and select the Conductor Live redundancy group.
- Choose **Add HA Nodes**.

3. In the **Add** pop-up, use the **Node** drop-down to select the secondary Conductor Live. Choose **Add**.

When the secondary node is added back to the cluster and redundancy group, you can start the channels, as described in the following section.

Step H: Start channels

When all nodes have been downgraded, you can start the channels that were previously running.

To start channels

1. On the web interface for the primary Conductor Live node, access the **Channels** screen.
2. Toward the top of the page, select **Tasks** and **Start Channels**.

Alternatively, if you want to start channels individually, select the play button on each channel that you're starting.

If you have only one Conductor Live, the downgrade process is complete when you start the channels. Otherwise, continue to the following section to enable high availability.

Step I: Re-enable high availability

1. If you're using a virtual machine (VM), take a snapshot before you enable HA. See the VMware VSphere help text for more information.
2. On the web interface for the primary Conductor Live node, go to the **Cluster** page and choose **Redundancy**. In the **High Availability** field, choose **Enable**.

To verify that HA is correctly enabled, follow these steps on each Conductor Live node.

1. At your workstation, start a remote terminal session to the Conductor Live node.
2. Enter the following command to verify that Conductor Live HA is enabled:

```
[elemental@hostname log]$ tail -F /opt/elemental_se/web/log/  
conductor_live247.output
```

The `conductor_live247.output` log starts to scroll on the screen and shows messages as they are occurring. Watch for the following INFO lines on the primary Conductor Live node:

```
CONDUCTOR: Initializing environment
I, [2015-11-13T04:37:54.491204 #4978] INFO -- : Configuring the HA environment
I, [2015-11-13T04:37:54.660644 #4978] INFO -- : configuring keepalived
.
.
.
I, [2015-11-13T04:38:03.905069 #4978] INFO -- : Elemental Conductor is ready
```

3. Press **Ctrl - C** to exit the tail command.
4. Enter the following commands:

```
[elemental@hostname ~]$ sudo -s
[elemental@hostname ~]$ cd /data/pgsql/logs
[elemental@hostname ~]$ tail -F postgresql-<day>.log
```

where `<day>` is today (the day you are downgrading), typed with an initial capital letter: Mon, Tue, Wed, Thu, Fri, Sat, Sun

5. Confirm that you see database system is ready to accept connections on the primary Conductor Live, and database system is ready to accept read only connections on the secondary Conductor Live.
6. Press **Ctrl - C** to exit the tail command.
7. Type the following command to exit the session as the sudo user:

```
[elemental@hostname ~]$ exit
```

Document History for Upgrade Guide

The following table describes the documentation for this release of AWS Elemental Conductor Live.

- **API version:** 3.22.0 and later
- **Release notes:** [current Release Notes](#)

The following table describes the documentation for this release of Conductor Live. For notification about updates to this documentation, you can subscribe to an RSS feed.

Change	Description	Date
Removed mention of prepare_for_downgrade script	We have removed two mentions of this script. The script is no longer required for any of the supported versions of Conductor Live. Don't run the script, even if you have it available, because it will cause the node to be unusable.	March 14, 2025
Clarification about scope of the guide	This guide has been modified to clarify that it applies to AWS Elemental Conductor Live versions 3.25 and 3.26.	July 17, 2024
Rules for software versions	This guide now contains information about the rules for combining different software versions on the nodes in a AWS Elemental Conductor Live cluster.	February 19, 2024
Cross-version release of the guide	This guide has been modified so that it isn't for a specific version of AWS Elemental Conductor Live. The upgrade	November 11, 2021

and downgrade procedures don't change from version to version.

[Version 3.22 release](#)

First release of the 3.22 software version.

February 6, 2021