



Administrator Guide

# Amazon WorkSpaces Thin Client



# Amazon WorkSpaces Thin Client: Administrator Guide

Copyright © 2026 Amazon Web Services, Inc. and/or its affiliates. All rights reserved.

Amazon's trademarks and trade dress may not be used in connection with any product or service that is not Amazon's, in any manner that is likely to cause confusion among customers, or in any manner that disparages or discredits Amazon. All other trademarks not owned by Amazon are the property of their respective owners, who may or may not be affiliated with, connected to, or sponsored by Amazon.

---

# Table of Contents

.....	<b>vi</b>
<b>What is the Amazon WorkSpaces Thin Client administrator console? .....</b>	<b>1</b>
Are you a first-time user? .....	1
Architecture .....	1
<b>Amazon WorkSpaces Thin Client end of support .....</b>	<b>4</b>
Service status until end of support .....	4
Alternatives to Amazon WorkSpaces Thin Client .....	4
How to transition from Amazon WorkSpaces Thin Client .....	5
Need help or have questions? .....	5
FAQs .....	5
<b>Setting up Amazon WorkSpaces Thin Client administrator console .....</b>	<b>8</b>
Sign up for AWS .....	8
Create an IAM user .....	8
<b>Getting started with your VDI for Amazon WorkSpaces Thin Client administrator console .....</b>	<b>10</b>
Configuring WorkSpaces Personal for WorkSpaces Thin Client .....	10
Before you begin .....	11
Step 1: Verify that your system meets WorkSpaces Personal required features .....	11
Step 2: Use advanced setup to launch your Workspace .....	12
Business continuity .....	13
Configuring WorkSpaces Pools for WorkSpaces Thin Client .....	14
Before you begin .....	14
Create a WorkSpaces Pool .....	14
Configuring WorkSpaces Thin Client access .....	17
Configuring WorkSpaces Applications for Amazon WorkSpaces Thin Client .....	18
Step 1: Verify that your system meets WorkSpaces Applications required features .....	18
Step 2: Set up your WorkSpaces Applications stacks .....	19
Configuring Amazon WorkSpaces Secure Browser for Amazon WorkSpaces Thin Client .....	20
Step 1: Verify that your system meets Amazon WorkSpaces Secure Browser required features .....	20
Step 2: Set up WorkSpaces Secure Browser portals .....	20
<b>Starting the WorkSpaces Thin Client administrator console .....</b>	<b>22</b>
Covered regions .....	22
Launching the WorkSpaces Thin Client administrator console .....	23
<b>Using WorkSpaces Thin Client administrator console .....</b>	<b>24</b>

Environments .....	25
Environment list .....	25
Environment Details .....	27
Creating an environment .....	30
Editing an environment .....	34
Deleting an environment .....	35
Devices .....	35
Device list .....	35
Device details .....	38
Editing a device name .....	45
Resetting and deregistering a device .....	45
Archiving a device .....	45
Deleting a device .....	46
Exporting device details .....	46
Software updates .....	47
Updating environment software .....	48
Updating device software .....	49
WorkSpaces Thin Client software releases .....	50
<b>Using tags on WorkSpaces Thin Client resources .....</b>	<b>62</b>
<b>Security .....</b>	<b>65</b>
Data protection .....	65
Data encryption .....	67
Encryption at rest .....	68
Encryption in transit .....	81
Key management .....	82
Internet work traffic privacy .....	82
Identity and access management .....	82
Audience .....	83
Authenticating with identities .....	83
Managing access using policies .....	84
How Amazon WorkSpaces Thin Client works with IAM .....	86
Identity-based policy examples .....	91
AWS managed policies .....	96
Troubleshooting .....	102
Resilience .....	104
Vulnerability Analysis and Management .....	105

---

<b>Monitoring</b> .....	<b>106</b>
CloudTrail logs .....	106
CloudTrail data events .....	108
CloudTrail management events .....	109
CloudTrail event examples .....	109
Monitor using CloudWatch metrics .....	112
WorkSpaces Thin Client metrics .....	113
<b>AWS CloudFormation resources</b> .....	<b>115</b>
WorkSpaces Thin Client and CloudFormation templates .....	115
Learn more about CloudFormation .....	115
<b>AWS PrivateLink</b> .....	<b>116</b>
Considerations .....	116
Create an interface endpoint .....	116
Create an endpoint policy .....	117
<b>Document history</b> .....	<b>118</b>

End of support notice: On March 31, 2027, AWS will end support for Amazon WorkSpaces Thin Client. After March 31, 2027, you will no longer be able to access the WorkSpaces Thin Client console or WorkSpaces Thin Client resources. For more information, see [Amazon WorkSpaces Thin Client end of support](#).

# What is the Amazon WorkSpaces Thin Client administrator console?

With the Amazon WorkSpaces Thin Client administrator console, administrators can manage WorkSpaces Thin Client environments and devices through a WorkSpaces Thin Client portal. From this web console, administrators can create environments, manage devices, and set parameters for WorkSpaces Thin Client users within their network.

Virtual desktop environments that you use for WorkSpaces Thin Client must be created or modified within their own console.

## Important

For WorkSpaces Thin Client administrator console to work properly, your system must first meet specific requirements. These requirements are listed in [Prerequisites and Configurations](#).

## Topics

- [Are you a first-time user?](#)
- [Architecture](#)

## Are you a first-time user?

If you are a first-time user of WorkSpaces Thin Client administrator console, we recommend that you begin by reading the following sections:

- [Starting the WorkSpaces Thin Client administrator console](#)
- [Using WorkSpaces Thin Client administrator console](#)

## Architecture

Each WorkSpaces Thin Client is associated with a virtual desktop interface (VDI) provider. WorkSpaces Thin Client supports three VDI providers:

- [Amazon WorkSpaces](#)
- [WorkSpaces Applications](#)
- [Amazon WorkSpaces Secure Browser](#)


Depending on the VDI used, information for your WorkSpaces Thin Client is accessed and managed either via directories for WorkSpaces, stacks for WorkSpaces Applications, and web portal endpoints for WorkSpaces Secure Browser.

For more information on Amazon WorkSpaces, see [Get started with WorkSpaces quick setup](#). Directories are managed through the Directory Service, which offers the following options: Simple AD, AD Connector, or Directory Service for Microsoft Active Directory, also known as AWS Managed Microsoft AD. For more information, see the [Directory Service Administration Guide](#).

For more information on WorkSpaces Applications, see [Get Started with Amazon WorkSpaces Applications: Set Up With Sample Applications](#). WorkSpaces Applications manages the AWS resources required to host and run your applications, scales automatically, and provides access to your users on demand. WorkSpaces Applications provides users access to the applications they need on the device of their choice, with a responsive, fluid user experience that is indistinguishable from natively installed applications.

For information on WorkSpaces Secure Browser, see [Getting started with Amazon WorkSpaces Secure Browser](#). Amazon WorkSpaces Secure Browser is an on-demand, fully managed, Linux-based service designed to facilitate secure browser access to internal websites and software-as-a-service (SaaS) applications. Access the service from existing web browsers, without the administrative burden of infrastructure management, specialized client software, or virtual private network (VPN) solutions.

The following diagram shows the architecture of WorkSpaces Thin Client.

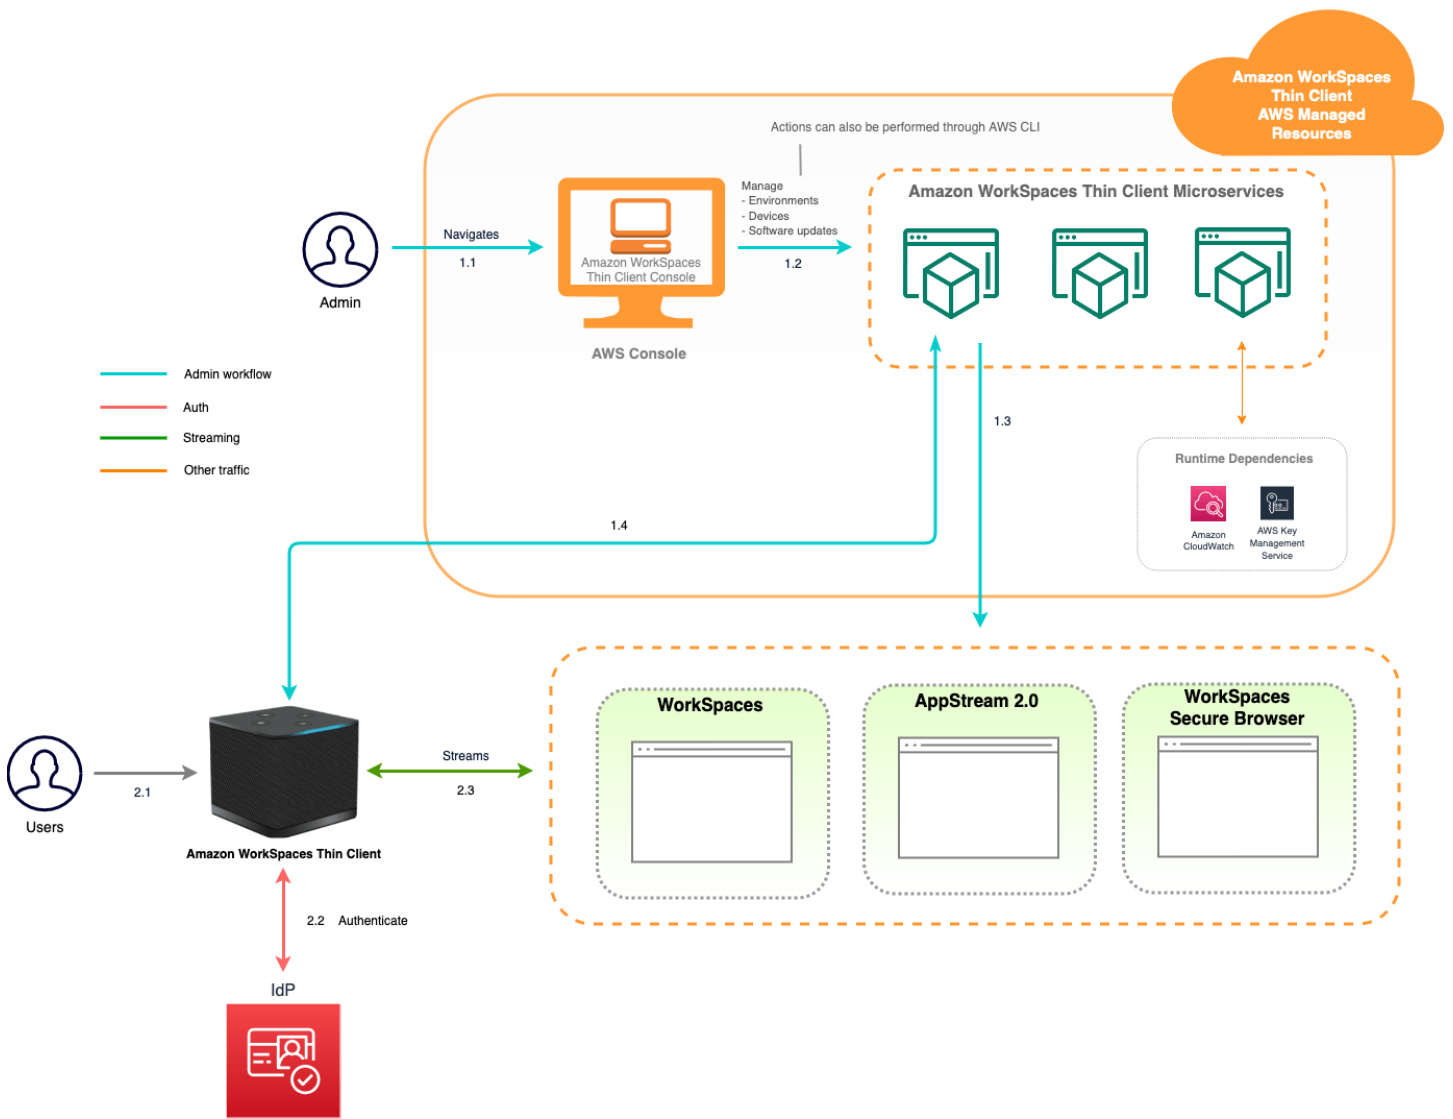

# Amazon WorkSpaces Thin Client end of support

After careful consideration, we decided to end support for Amazon WorkSpaces Thin Client, effective March 31, 2027. Amazon WorkSpaces Thin Client will no longer accept new customers beginning April 20, 2026. As an existing customer, you can continue to use the service as normal until March 31, 2027.

After March 31, 2027, you will no longer be able to use Amazon WorkSpaces Thin Client to access Amazon WorkSpaces (WorkSpaces Personal, WorkSpaces Applications, and WorkSpaces Secure Browser), or manage Amazon WorkSpaces Thin Client using the console.

This page provides important information to help you understand the impact of this change and plan your transition to supported alternatives before the end-of-support date.

## Service status until end of support

As an existing customer who purchased and registered an Amazon WorkSpaces Thin Client before March 31, 2026, you can continue to use the service as normal until March 31, 2027. During this period, AWS will focus on maintaining service stability and addressing critical functional or security issues. No new features or major enhancements will be introduced prior to the end-of-support date.

Customers can continue to use existing devices and manage them through the Amazon WorkSpaces Thin Client service until support ends on March 31, 2027.

## Alternatives to Amazon WorkSpaces Thin Client

AWS Partners offer third-party thin client solutions that support Amazon WorkSpaces. These supported alternatives provide:

- Continued secure access to Amazon WorkSpaces
- Broader hardware selection, including devices with additional integrated USB ports, higher-performance CPUs, and increased memory capacity, as well as greater flexibility to align endpoint refresh and lifecycle management with your organization's standard hardware practices
- Cloud management services to manage the devices

Using these alternatives allows you to continue using Amazon WorkSpaces without relying on the Amazon WorkSpaces Thin Client service.

Learn more about these alternative thin client solutions by viewing the [complete list of AWS partner thin client vendors](#). For example, you can also explore the [Dell Configuration Guide for Amazon WorkSpaces](#).

## How to transition from Amazon WorkSpaces Thin Client

To prepare for the end of support, customers should complete the following steps before March 31, 2027:

- Identify all devices currently managed using Amazon WorkSpaces Thin Client.
- Select a supported alternative thin client solution that meets your organizational requirements.
- Provision and configure replacement devices according to the alternative vendor's documentation.
- Connect replacement devices to your existing Amazon WorkSpaces environments.
- Decommission Amazon WorkSpaces Thin Client devices once the transition is complete.
- To dispose of devices in United States, visit the [Amazon Recycling portal](#) to schedule pickup or drop-off. For Germany, France, India, Italy, Spain, and United Kingdom, visit the [Device Recycling page](#) for more information.

AWS encourages customers to begin planning their transition as early as possible to ensure a smooth experience before the end-of-support date.

## Need help or have questions?

If you have questions about this change or need assistance planning your transition, contact us through AWS Support. You can also review the below FAQs for more information.

## FAQs

What happens if I don't migrate by March 31, 2027?

You will no longer be able to use Amazon WorkSpaces Thin Client to access Amazon WorkSpaces, or manage Amazon WorkSpaces Thin Client using the console after March 31,

2027. Additionally, Amazon WorkSpaces Thin Client cannot be used for any other purpose once the service is deprecated on March 31, 2027.

Will my existing Amazon WorkSpaces continue to function after the deprecation date?

Yes, you can continue to use your Amazon WorkSpaces on other supported devices. You can view the [complete list of AWS partner thin client vendors](#).

Which alternative should I choose?

The best alternative depends on your organization's use case and requirement. If you want a device that is easier to manage compared to traditional desktop devices, you can choose a thin client device from Dell or other supported partners. You can explore the [list of supported devices](#). Before deployment, we recommend you conduct a proof-of-concept test and verify the device meets your requirements.

How can I get help with migration?

If you have questions about setting up WorkSpaces on your device, contact AWS Support or reach out to your AWS account manager for assistance.

If you have device-specific questions, contact your device vendor for assistance.

Will I continue to receive support before March 31, 2027?

Yes, you will continue to receive support through AWS Support before March 31, 2027.

Will I continue to be charged the \$6 monthly service fee before March 31, 2027?

For activated devices, customers will continue to be charged a monthly service fee of \$6 per device, unless devices are deregistered. You can follow [these steps](#) to deregister unused devices. After March 31, 2027, the WorkSpaces Thin Client device will stop working and you will no longer be charged the \$6 monthly service fee.

Can I continue to purchase Amazon WorkSpaces Thin Client?

We will stop accepting new customers from March 31, 2026. For existing Amazon Business customers, we will allowlist your account to purchase Amazon WorkSpaces thin clients. For existing Amazon.com retail customers, the Amazon WorkSpaces Thin Client team will provide specific ordering instructions according to individual requests. Both new and existing customers can no longer order any Amazon WorkSpaces Thin Client after March 31, 2027.

What should I do with the physical devices after sunset?

You should first [deregister the devices](#). For devices in United States, you can use Amazon's official recycling partner, Re-Teck, to dispose of decommissioned devices. Visit the [Amazon](#)

[Recycling portal](#) to schedule pickup or drop-off. This process ensures secure data destruction, environmental compliance, and proper documentation through certificates of recycling. Inventory all devices before disposal and retain certificates for your records. Your end users can follow the steps to recycle the devices without requiring the devices to be shipped to a central location.

For Germany, France, India, Italy, Spain, and United Kingdom, visit the [Device Recycling page](#) for more information.

# Setting up Amazon WorkSpaces Thin Client administrator console

## Topics

- [Sign up for AWS](#)
- [Create an IAM user](#)

## Sign up for AWS

If you do not have an AWS account, complete the following steps to create one.

### To sign up for an AWS account

1. Open <https://portal.aws.amazon.com/billing/signup>.
2. Follow the online instructions.

Part of the sign-up procedure involves receiving a phone call or text message and entering a verification code on the phone keypad.

When you sign up for an AWS account, an *AWS account root user* is created. The root user has access to all AWS services and resources in the account. As a security best practice, assign administrative access to a user, and use only the root user to perform [tasks that require root user access](#).

## Create an IAM user

To create an administrator user, choose one of the following options.

Choose one way to manage your administrator	To	By	You can also
In IAM Identity Center  (Recommended)	Use short-term credentials to access AWS.  This aligns with the security best practices . For information about best practices , see <a href="#">Security best practices in IAM</a> in the <i>IAM User Guide</i> .	Following the instructions in <a href="#">Getting started</a> in the <i>AWS IAM Identity Center User Guide</i> .	Configure programmatic access by <a href="#">Configuring the AWS CLI to use AWS IAM Identity Center</a> in the <i>AWS Command Line Interface User Guide</i> .
In IAM  (Not recommended)	Use long-term credentials to access AWS.	Following the instructions in <a href="#">Create an IAM user for emergency access</a> in the <i>IAM User Guide</i> .	Configure programmatic access by <a href="#">Manage access keys for IAM users</a> in the <i>IAM User Guide</i> .

# Getting started with your VDI for Amazon WorkSpaces Thin Client

Amazon WorkSpaces Thin Client is a cost-effective thin client device built to work with AWS End User Computing services to provide you with secure, instant access to applications and virtual desktops.

Choose a virtual desktop infrastructure (VDI), and configure it to work with WorkSpaces Thin Client.

## Important

For WorkSpaces Thin Client administrator console to work properly, your system must first meet specific requirements. These requirements are listed in the configuration procedure for each virtual desktop provider.

WorkSpaces Thin Client requires specific software configurations, depending on your virtual desktop provider.

## Topics

- [Configuring WorkSpaces Personal for WorkSpaces Thin Client](#)
- [Configuring WorkSpaces Pools for WorkSpaces Thin Client](#)
- [Configuring WorkSpaces Applications for Amazon WorkSpaces Thin Client](#)
- [Configuring Amazon WorkSpaces Secure Browser for Amazon WorkSpaces Thin Client](#)

## Configuring WorkSpaces Personal for WorkSpaces Thin Client

For WorkSpaces Thin Client to be used with Amazon WorkSpaces Personal, your service will need to be configured to access the WorkSpaces directories. Amazon WorkSpaces Personal directories are listed based on their directory names on the WorkSpaces Thin Client **Create environment** page within AWS console.

**Note**

Configurations must be made before using the console for the first time. It is not recommended that you modify any prerequisite features after you start using the console.

## Before you begin

Make sure that you have an AWS account to create or administer a WorkSpace. Device users, however, don't need an AWS account to connect to and use their WorkSpaces.

Review and understand the following concepts before you proceed with your configuration:

- When you launch a WorkSpace, select a WorkSpace bundle. For more information, see [Amazon WorkSpaces Bundles](#).
- When you launch a WorkSpace, select which protocol that you want to use with your bundle. For more information, see [Protocols for Amazon WorkSpaces Personal](#).
- When you launch a WorkSpace, specify the profile information for each user, including username and email address. Users complete their profiles by creating a password. Information about WorkSpaces and users is stored in a directory. For more information, see [Manage directories for WorkSpaces Personal](#).
- When you launch a WorkSpace, enable and configure the WorkSpaces Thin Client web access. For more information, see [Configure WorkSpaces Thin Client](#)

## Step 1: Verify that your system meets WorkSpaces Personal required features

For WorkSpaces Thin Client administrator console to work properly with Amazon WorkSpaces Personal, your system must meet the following specific requirements. This table lists all of these supported features and their requirements.

Feature	Requirement
Web access	Enabled
Supported operating system	<ul style="list-style-type: none"><li>• Windows 10</li></ul>

Feature	Requirement
	<ul style="list-style-type: none"> <li>Windows 10 (Bring Your Own License)</li> <li>Windows 11</li> <li>Windows 11 (Bring Your Own License)</li> </ul>
Supported bundles	<ul style="list-style-type: none"> <li>Microsoft Power with Windows 10 (Server 2016, 2019, and 2022 based)</li> <li>Microsoft Power with Windows 10 (Server 2016, 2019, and 2022 based) w Office</li> <li>Microsoft PowerPro with Windows 10 (Server 2016, 2019, and 2022 based)</li> <li>Microsoft PowerPro with Windows 10 (Server 2016, 2019, and 2022 based) w Office</li> <li>Microsoft Performance with Windows 10 (Server 2016, 2019, and 2022 based)</li> <li>Microsoft Performance with Windows 10 (Server 2016, 2019, and 2022 based) w Office</li> </ul>
Supported protocol	DCV only

## Step 2: Use advanced setup to launch your WorkSpace

### To use advanced setup to launch your WorkSpace

1. Open the WorkSpaces console at <https://console.aws.amazon.com/workspaces/v2/home/>.
2. Choose one of the following directory types, and then choose **Next**:
  - AWS Managed Microsoft AD
  - Simple AD
  - AD Connector
3. Enter the directory information.
4. Choose two subnets in a VPC from two different Availability Zones. For more information, see [Configure a VPC with public subnets](#).

5. Review your directory information and choose **Create directory**.

## Business continuity

WorkSpaces Thin Client provides support for Business continuity as part of a [Business Continuity Plan \(BCP\)](#). WorkSpaces Thin Client business continuity is available for use with WorkSpaces Personal only. For more information on business continuity, see [Business continuity for WorkSpaces Personal](#) in the *Amazon WorkSpaces Administration guide*.

### Prerequisites

For business continuity to work on WorkSpaces Thin Client, the following prerequisites must be met:

- For WorkSpaces Cross-Region Redirection – DNS service and routing policies have been configured. To set these up, see [Configure your DNS service and set up DNS routing policies](#).
- For WorkSpaces Multi-Region Resilience – A standby WorkSpaces has been created. To create this, see [Create a standby WorkSpace](#).
- A connection alias in the region using WorkSpaces Thin Client. To verify your region, see [Covered regions](#).

## Configuring business continuity for WorkSpaces Thin Client

To enable WorkSpaces Personal DR on Amazon WorkSpaces Thin Client, you will need to configure connection aliases to map to the environment using the SDK.

Sample doc explanation for setting up disaster recovery:

### Example

An example command using the AWS CLI to create a new environment using a WorkSpaces connection alias for the streaming desktop:

```
aws workspaces-thin-client create-environment --region region --desktop-arn/  
arn:aws:workspaces:region:account:connectionalias/wscs-id
```

Replace *wscs-id* with your WorkSpaces Personal connection alias. The ID of the WorkSpaces connection alias can be found in the WorkSpaces Management Console or from the SDK.

## End user experience

Once business continuity is configured, devices must be registered and active within the last 15 days. After that, should WorkSpaces Thin Client management services become unavailable, users then can stay connected to their sessions for up to 24 hours. In this condition, the device will not receive software updates, exchange posture information, and cannot be activated. The corresponding device entry in WorkSpaces Thin Client console will not show the latest information.

If the WorkSpaces Thin Client device management services remain unavailable beyond 24 hours, the following error message will display:

**"An error has occurred. Please try again. If the issue persists, contact your IT administrator. (Error Code: 3006)."**

## Configuring WorkSpaces Pools for WorkSpaces Thin Client

For WorkSpaces Thin Client to be used with Amazon WorkSpaces Pools, your SAML 2.0 identity provider (IdP) will need to be configured to access the WorkSpaces Pools directory. Amazon WorkSpaces Pools directories are a non-persistent pool of WorkSpaces assigned to a group of users.

### Note

Configurations must be made before using the console for the first time.

## Before you begin

Make sure that you have an AWS account to create or administer a WorkSpace. Device users, however, don't need an AWS account to connect to and use their WorkSpaces.

Review and understand the concepts listed in [Before You Begin Using Active Directory with WorkSpaces Pools](#) in the *Amazon WorkSpaces Administration Guide* before you proceed with your configuration.

## Create a WorkSpaces Pool

Set up and create a pool from which user applications are launched and streamed.

**Note**

You should create a directory before you create a WorkSpaces Pool. For more information, see [Configure SAML 2.0 and create a WorkSpaces Pools directory](#) directory.

**To set up and create a pool**

1. Open the WorkSpaces console at <https://console.aws.amazon.com/workspaces/v2/home/>.
2. In the navigation pane, choose **WorkSpaces, Pools**.
3. Choose **Create WorkSpaces Pools**.
4. Under **Onboarding** (optional), you can choose **Recommend options to me based on my use case** to get recommendations on the type of WorkSpaces you want to use. You can skip this step if you know that you want to use WorkSpaces Pools.
5. Under **Configure WorkSpaces**, enter the following details:
  - For **Name**, enter a unique name identifier for the pool. Special characters aren't allowed.
  - For **Description**, enter a description for the pool (maximum of 256 characters).
  - For **Bundle**, choose from the following the bundle type that you want to use for your WorkSpaces.
    - **Use a base WorkSpaces bundle** – Choose one of the bundles from the drop down. For more information about the bundle type you selected, choose **Bundle details**. To compare bundles offered for pools, choose **Compare all bundles**.
    - **Use your own custom bundle** – Choose a bundle that you previously created. To create a custom bundle, see [Create a custom WorkSpaces image and bundle for WorkSpaces Personal](#).

**Note**

BYOL is currently unavailable for WorkSpaces Pools.

- For **Maximum session duration in minutes**, choose the maximum amount of time that a streaming session can remain active. If users are still connected to a streaming instance five minutes before this limit is reached, they are prompted to save any open documents before being disconnected. After this time elapses, the instance is terminated and replaced by a new instance. The maximum session duration that you can set in the WorkSpaces Pools

console is 5760 minutes (96 hours). The maximum session duration that you can set using the WorkSpaces Pools API and CLI is 432000 seconds (120 hours).

- For **Disconnect timeout in minutes**, choose the amount of time that a streaming session remains active after users disconnect. If users try to reconnect to the streaming session after a disconnection or network interruption within this time interval, they are connected to their previous session. Otherwise, they are connected to a new session with a new streaming instance.
- If a user ends the session by choosing **End Session** or **Logout** on the pools toolbar, the disconnect timeout doesn't apply. Instead, the user is prompted to save any open documents, and then immediately disconnected from the streaming instance. The instance the user was using is then terminated.
- For **Idle disconnect timeout in minutes**, choose the amount of time that users can be idle (inactive) before they are disconnected from their streaming session and the **Disconnect timeout in minutes** time interval begins. Users are notified before they are disconnected due to inactivity. If they try to reconnect to the streaming session before the time interval specified in **Disconnect timeout in minutes** has elapsed, they are connected to their previous session. Otherwise, they are connected to a new session with a new streaming instance. Setting this value to 0 disables it. When this value is disabled, users are not disconnected due to inactivity.

 **Note**

Users are considered idle when they stop providing keyboard or mouse input during their streaming session. For domain-joined pools, the countdown for the idle disconnect timeout doesn't begin until users log in with their Active Directory domain password or with a smart card. File uploads and downloads, audio in, audio out, and pixels changing do not qualify as user activity. If users continue to be idle after the time interval in **Idle disconnect timeout in minutes** elapses, they are disconnected.

- For **Scheduled capacity policies** (optional), choose **Add new schedule capacity**. Indicate the start and end date and time for when to provision the minimum and maximum number of instances for your pool based on the minimum number of expected concurrent users.
- For **Manual scaling policies** (optional), specify the scaling policies for pools to use to increase and decrease the capacity of your pool. **Expand Manual** scaling policies to add new scaling policies.

**Note**

The size of your pool is limited by the minimum and maximum capacity that you specified.

- Choose **Add new scale out policies** and enter the values for adding specified instances if the specified capacity utilization is less or more than the specified threshold value.
  - Choose **Add new scale in policies** and enter the values for removing specified instances if the specified capacity utilization is less or more than the specified threshold value.
  - For **Tags**, specify the key pair value that you want to use. A key can be a general category, such as "project," "owner," or "environment," with specific associated values.
6. On the **Select directory page**, choose the directory that you created. To create a directory, choose **Create directory**. For more information, see [Manage directories for WorkSpaces Pools](#).
  7. Choose **Create Workspace Pool**.

## Configuring WorkSpaces Thin Client access

Configuring web access for WorkSpaces Pools to use WorkSpaces Thin Client, you will need to use the AWS command land interface.

1. Install or update the [AWS Command Line Interface](#).
2. Configure your [AWS CLI settings](#).
3. Open the AWS CLI.
4. Run the following replacing `WORKSPACES_DIRECTORY_ID` and `REGION` with the appropriate information:

```
aws workspaces modify-workspace-access-properties --resource-id WORKSPACES_DIRECTORY_ID --workspace-access-properties '{"DeviceTypeWorkSpacesThinClient":"ALLOW"}' --region REGION
```

# Configuring WorkSpaces Applications for Amazon WorkSpaces Thin Client

WorkSpaces Applications instances will be listed based on Stack names and will require an IdP login URL to be configured on the create environment page. Because SAML authentication for WorkSpaces Applications only supports initiated authentication, the administrator will have to enter the correct login URL manually.

## Note

Configurations must be made before using the console for the first time. It is not recommended that you modify any prerequisite features after you start using the console.

## Step 1: Verify that your system meets WorkSpaces Applications required features

For WorkSpaces Thin Client administrator console to work with WorkSpaces Applications properly, your system must meet the following specific requirements. This table lists all of these supported features and their requirements.

Feature	Requirement
Identity Provider	Go to <a href="#">Setting Up SAML</a> in the <a href="#">WorkSpaces Applications Administrator Guide</a> to create an Identity Provider.  When prompted to <b>Create env console</b> , enter your IDP Login URL.
Operating system	Windows
Platform Type	Windows Server (2012 R2, 2016 or 2019)
Clipboard	Disable  Configured at WorkSpaces Applications stack level

Feature	Requirement
File transfer	Disable  Configured at WorkSpaces Applications stack level
Print to local device	Disable  Configured at WorkSpaces Applications stack level

The screen lock requirement through SAML authentication on WorkSpaces Applications is also supported. The **User Pool** and **Programmatic** authentication mechanisms are not supported on WorkSpaces Thin Client.

## Step 2: Set up your WorkSpaces Applications stacks

To stream your applications, WorkSpaces Applications requires an environment that includes a fleet that is associated with a stack, and at least one application image. Follow these steps to set up a fleet and stack and give users access to the stack. If you haven't already done so, we recommend that you try the procedures in [Get Started with WorkSpaces Applications: Set Up With Sample Applications](#).

If you want to create an image to use, see [Tutorial: Create a Custom AppStream 2.0 Image by Using the AppStream 2.0 Console](#).

If you plan to join a fleet to an Active Directory domain, configure your Active Directory domain before completing the following steps. For more information, see [Using Active Directory with AppStream 2.0](#).

### Tasks

- [Create a Fleet](#)
- [Create a Stack](#)
- [Provide Access to Users](#)
- [Clean Up Resources](#)

# Configuring Amazon WorkSpaces Secure Browser for Amazon WorkSpaces Thin Client

Amazon WorkSpaces Secure Browser are based on their web portal endpoints on the WorkSpaces Thin Client **Create environment** page within AWS console.

## Note

Configurations must be made before using the console for the first time. It is not recommended that you modify any prerequisite features after you start using the console.

## Step 1: Verify that your system meets Amazon WorkSpaces Secure Browser required features

For WorkSpaces Thin Client Administrator Console to work properly with Amazon WorkSpaces Secure Browser, your system must meet the following specific requirements. This table lists all of these supported features and their requirements.

Feature	Requirement
Clipboard	Disable
File transfer	Disable
Print to local device	Disable

## Note

The WorkSpaces Secure Browser extension for single sign-on is not currently supported on WorkSpaces Thin Client.

## Step 2: Set up WorkSpaces Secure Browser portals

WorkSpaces Thin Client works with the WorkSpaces Secure Browser VPC in a specific configuration:

1. Create a [VPC](#) using the [AWS CodeBuild Cloudformation template](#).
2. Set up your [Identity Provider](#).
3. [Create](#) an Amazon WorkSpaces Secure Browser portal.
4. [Test](#) your new Amazon WorkSpaces Secure Browser portal.

# Starting the WorkSpaces Thin Client administrator console

WorkSpaces Thin Client is a cost-effective thin client device built to work with AWS End User Computing services to provide you with secure, instant access to applications and virtual desktops.

## Topics

- [Covered regions](#)
- [Launching the WorkSpaces Thin Client administrator console](#)

## Covered regions

WorkSpaces Thin Client is available in the following Regions.

Only the WorkSpaces Thin Client administrator console is available in these Regions. WorkSpaces Thin Client devices are only currently available in the US, Germany, France, Italy, and Spain.

Region Name	Region	Endpoint	Console link
US East (N. Virginia)	us-east-1	thinclient.us-east-1.amazonaws.com	<a href="https://us-east-1.console.aws.amazon.com/workspaces-thin-client/home">https://us-east-1.console.aws.amazon.com/workspaces-thin-client/home</a>
US West (Oregon)	us-west-2	thinclient.us-west-2.amazonaws.com	<a href="https://us-west-2.console.aws.amazon.com/workspaces-thin-client/home">https://us-west-2.console.aws.amazon.com/workspaces-thin-client/home</a>
Asia Pacific (Mumbai)	ap-south-1	thinclient.ap-south-1.amazonaws.com	<a href="https://ap-south-1.console.aws.amazon.com/workspaces-thin-client/home">https://ap-south-1.console.aws.amazon.com/workspaces-thin-client/home</a>

Region Name	Region	Endpoint	Console link
Europe (Ireland)	eu-west-1	thinclient.eu-west-1.amazonaws.com	<a href="https://eu-west-1.console.aws.amazon.com/workspaces-thin-client/home">https://eu-west-1.console.aws.amazon.com/workspaces-thin-client/home</a>
Canada (Central)	ca-central-1	thinclient.ca-central-1.amazonaws.com	<a href="https://ca-central-1.console.aws.amazon.com/workspaces-thin-client/home">https://ca-central-1.console.aws.amazon.com/workspaces-thin-client/home</a>
Europe (Frankfurt)	eu-central-1	thinclient.eu-central-1.amazonaws.com	<a href="https://eu-central-1.console.aws.amazon.com/workspaces-thin-client/home">https://eu-central-1.console.aws.amazon.com/workspaces-thin-client/home</a>
Europe (London)	eu-west-2	thinclient.eu-west-2.amazonaws.com	<a href="https://eu-west-2.console.aws.amazon.com/workspaces-thin-client/home">https://eu-west-2.console.aws.amazon.com/workspaces-thin-client/home</a>

## Launching the WorkSpaces Thin Client administrator console

When you have an AWS account, you can launch the administrator console and go to the WorkSpaces Thin Client console. To launch the console, do the following:

1. Log on to your AWS account.
2. Access the [WorkSpaces Thin Client console](#).
3. Select **Get Started** and you will be directed to [Environments](#).

# Using WorkSpaces Thin Client administrator console

End User Computing

## Amazon WorkSpaces Thin Client

Affordable, easy-to-manage thin client for secure access to virtual desktops

Improve end-user productivity by going from unboxing to desktop access in just a few minutes, while improving IT staff productivity through centralized remote management of your fleet.

**Amazon WorkSpaces Thin Client**  
Create WorkSpaces Thin Client environment, enabling users to securely access virtual desktops.

[Get started](#) [Order devices](#)

### How it works

**Admin management flow**

```
graph LR; A[Amazon WorkSpaces Thin Client] --> B[Administrator sets up Amazon WorkSpaces, Amazon WorkSpaces Web, or Amazon AppStream 2.0 in desired AWS Region to associate with WorkSpaces Thin Client service]; B --> C[Administrator copies activation codes from Console and emails them to end users]; C --> D[End users enter activation code to register the device and log into their virtual desktop environment]; D --> E[Administrator manages, monitors, and maintains WorkSpaces Thin Client fleet and controls access through device management service];
```

**Amazon WorkSpaces Thin Client**  
Cost-effective, secure, and easy-to-manage access to virtual desktops

Administrator sets up Amazon WorkSpaces, Amazon WorkSpaces Web, or Amazon AppStream 2.0 in desired AWS Region to associate with WorkSpaces Thin Client service

Administrator copies activation codes from Console and emails them to end users

End users enter activation code to register the device and log into their virtual desktop environment

Administrator manages, monitors, and maintains WorkSpaces Thin Client fleet and controls access through device management service

### Pricing

You pay up front for the WorkSpaces Thin Client device, plus a monthly service fee per device to manage, monitor, and maintain your thin client fleet in the WorkSpaces Thin Client management console.

[Learn more about WorkSpaces Thin Client pricing](#)

### Amazon WorkSpaces Thin Client devices

Welcome to the WorkSpaces Thin Client Administrator Console!

From here, you can manage your fleet of WorkSpaces Thin Client devices and environments for your team.

For information regarding the WorkSpaces Thin Client device, please refer to the [WorkSpaces Thin Client User Guide](#).

Let's get started.

## Topics

- [Environments](#)
- [Devices](#)
- [Software updates](#)

# Environments

Each WorkSpaces Thin Client device uses an individual virtual desktop environment to access its online resources. Users access this environment by using one of the following virtual desktop providers:

- [Amazon WorkSpaces](#)
- [WorkSpaces Applications](#)
- [Amazon WorkSpaces Secure Browser](#)

## Environment list

There are a number of parameters for your environment for you to review as well as some actions you can take.

The screenshot displays the 'Environments' management interface. It includes a 'Getting started' section with three numbered steps: 1. Enter your environment details, 2. Select your virtual desktop provider, and 3. Send the activation codes to your device users. Below this is a table of existing environments with columns for Name, Virtual desktop service, Virtual desktop service ID, Activation code, Device count, and Time created. The table lists four environments: Environment 01, Environment 02, Environment 03, and Environment 04.

Name	Virtual desktop service	Virtual desktop service ID	Activation code	Device count	Time created
Environment 01	WorkSpaces	d-00000000	ghe1tpa5	1	October 16, 2023, 20:38 (UTC-07:00)
Environment 02	WorkSpaces	d-00000000	ghi5rax1	1	October 13, 2023, 11:38 (UTC-07:00)
Environment 03	WorkSpaces	d-00000000	gh113e0p	0	October 03, 2023, 21:22 (UTC-07:00)
Environment 04	WorkSpaces	d-00000000	ghn0fznc	0	October 03, 2023, 21:22 (UTC-07:00)

## Environment list details

The parameters for your environment are listed for your review. The following table lists each element in the summary and how it functions.

Element	Description
Name	The unique identifier associated with this environment.

Element	Description
Virtual desktop service	The virtual desktop provider that this environment uses.
Virtual desktop service ID	The unique identifier that the virtual desktop service provider assigns to this environment.
Activation code	The code that is used by end users to access the virtual desktop environment.
Device count	The number of WorkSpaces Thin Client devices that are accessing this environment.
Time Created	The date and time that the environment was created.

## Environment list actions

There are a number of actions you can perform from here. Select any of these to perform the corresponding action.

Element	Description
Search	Searches all environments that you manage.
Refresh	Refreshes the environment list.
View details	Displays <a href="#">Environment details</a> .
Actions	Opens a dropdown list where you can <a href="#">Edit</a> or <a href="#">Delete</a> an environment.
Create environment	Starts the process of <a href="#">creating an environment</a> .

## Topics

- [Environment Details](#)
- [Creating an environment](#)

- [Editing an environment](#)
- [Deleting an environment](#)

## Environment Details

When you select an environment, the WorkSpaces Thin Client console displays the details for that environment for you to review. The console also displays the details about the virtual desktop provider that this environment uses.

### Topics

- [Summary](#)
- [Virtual desktop environment details](#)

## Summary

The Summary section provides a high-level overview of the key features of the WorkSpaces Thin Client Environment. The following table lists each element in the summary and how it functions.

Summary		
Name DRK Environment - Mon, Aug 7, 2023, 16:03:41	Always keep software up-to-date Yes	Activation code
Virtual desktop service WorkSpaces Web	Maintenance window start time 00:00 (Device local time)	Associated devices 1
Virtual desktop service ID	Maintenance window end time 03:00 (Device local time)	Time created August 07, 2023, 16:04 (UTC-04:00)
	Maintenance window days of the week Sunday	Time last modified August 07, 2023, 16:04 (UTC-04:00)

Element	Description
Name	The unique identifier associated with this environment.
Virtual desktop service	The virtual desktop provider that this environment uses.
Virtual desktop service name	The unique identifier that the virtual desktop service provider assigns to this environment.

Element	Description
Activation code	This code is used by end users to access the virtual desktop environment.
Always keep software up-to-date	This setting enables automatic software updates.
Maintenance window start time	The time each week when automatic software updates begin.
Maintenance window end time	The time each week when automatic software updates finish.
Maintenance window days of the week	The days that automatic software updates occur.
Associated devices	The number of WorkSpaces Thin Client devices that are accessing this environment.
Time created	The date and time that this environment was created.

## Virtual desktop environment details

WorkSpaces Thin Client environments are run on a virtual desktop interface. Each interface has a different set of parameters that control the dedicated environment.

## Amazon WorkSpaces directory details

WorkSpaces Thin Client environments run on Amazon WorkSpaces use directories to create and run their virtual desktops. The following table lists each element in the details and how it functions.

WorkSpaces directory details		
Directory ID abc	Organization name Name	Registered ✔ True
Directory name xyz	Directory type Simple AD	Status ✔ Active

Element	Description
Directory ID	The Amazon WorkSpaces directory associated with this environment.
Directory name	The unique identifier associated with this Amazon WorkSpaces directory.
Organization name	The name of the organization that controls the Amazon WorkSpaces directory.
Directory type	The format of the Amazon WorkSpaces directory.
Registered	Whether this Amazon WorkSpaces directory is registered.
Status	Whether this Amazon WorkSpaces directory is active.

## Amazon WorkSpaces Secure Browser portal details

WorkSpaces Thin Client environments run on Amazon WorkSpaces Secure Browser use web portals to create and run their virtual desktops. The following table lists each element in the details and how it functions.


WorkSpaces Web portal details		
Name Custom Web Portal - Mon, Mar 06, 2023, 12:00:51 <a href="#">🔗</a>	Time created March 06, 2023, 13:50 (UTC-05:00)	Web portal endpoint

Element	Description
Name	The unique identifier associated with this WorkSpaces Secure Browser portal.

Element	Description
Time created	The date and time when this WorkSpaces Secure Browser portal was created.
Web portal endpoint	The url used to access your virtual desktop environment.

## WorkSpaces Applications details

WorkSpaces Thin Client environments run on WorkSpaces Applications information stacks to create and run their virtual desktops. The following table lists each element in the details and how it functions.

AppStream 2.0 details		
Stack name xyz	IdP login url <a href="https://abc.com">https://abc.com</a> 	Time created Thu Jun 08 2023 10:26:29 GMT-0700 (Pacific Daylight Time)

Element	Description
Stack name	The unique identifier associated with this WorkSpaces Applications stack.
IdP login url	The identity provider url that is used to log in and out of your WorkSpaces Applications stack.
Time created	The date and time when this WorkSpaces Applications stack was created.

## Creating an environment

To begin, each device requires an AWS End User Computing service. WorkSpaces Thin Client uses the following services:

- Amazon WorkSpaces through an assigned directory
- WorkSpaces Applications through an assigned stack
- Amazon WorkSpaces Secure Browser through a web portal address

You must either assign a service to an existing environment or create a new one.

#### Note

WorkSpaces Thin Client only displays virtual desktops in the same Region.

## Topics

- [Step 1: Enter your environment details](#)
- [Step 2: Select your virtual desktop provider](#)
- [Step 3: Send the activation code to your device users](#)

## Step 1: Enter your environment details

1. Enter a name for your environment in the **Environment details** field.
2. To set up automatic software patches, check the box for **Always keep software up-to-date**.

#### Note

If automatic software updates is not enabled, the devices registered to this environment won't receive software updates until you manually push the update or when the software reaches its expiration and the system forces an update. Also, the devices Software Set version is determined by the system. This version may not be the most recent one.

3. Select when you want to schedule the maintenance window for your environment.
  - **Apply system wide maintenance window** - Automatically updates the environment software at a determined time each week.
  - **Apply custom maintenance window** - Set a day and time when you want the environment software to update each week.
4. Select a virtual desktop service.

- [Amazon WorkSpaces](#)
- [Amazon WorkSpaces Secure Browser](#)
- [WorkSpaces Applications](#)

## Step 2: Select your virtual desktop provider

You must have a service to provide your users access to their virtual desktop and compatible resources.

### Important

For WorkSpaces Thin Client Administrator Console to work properly, your system must meet specific requirements. These requirements are listed in [Prerequisites and Configurations](#).

Make sure that your system meets these requirements before you set up your console.

## Using Amazon WorkSpaces

Amazon WorkSpaces is a fully managed desktop virtualization service for Windows that enables you to access resources from any supported device.

1. To use Amazon WorkSpaces, do one of the following:
  - Select the directory that you want to use for your environment. You can either browse through the dropdown list or you can search the directories by using the search field.
  - Create a directory by selecting the **Create WorkSpaces directory** button. For more information on creating WorkSpaces directories, see [Manage directories for WorkSpaces](#).
2. Select the **Create environment** button.

When you create your environment, you can still edit the details later. For more information, see [Editing an environment](#).

## Using WorkSpaces Applications

WorkSpaces Applications is a fully managed, secure application streaming service that you can use to stream desktop applications from AWS to a web browser.

**⚠ Important**

In order to create an WorkSpaces Applications environment, you must have `cli_follow_urlparam` set to `false`. To achieve this, do the following:

- For a default profile, run `aws configure set cli_follow_urlparam false`.
- For a profile with name `ProfileName`, run `aws configure set cli_follow_urlparam false --profile ProfileName`.

1. To set up WorkSpaces Applications, do one of the following:
  - Select the stack that you want to use for your environment. You can either browse through the dropdown list or you can search the stacks by using the search field.
  - Create a stack by selecting the **Create Stack** button. For more information on creating WorkSpaces Applications stacks, see [Create a Stack](#).
2. Enter your identity provider login and logout URL in the **IdP login URL** field. This provides users with a place to log in and out of WorkSpaces Thin Client.
3. Select the **Create environment** button.

After you create your environment, you can still edit the details later. For more information, see [Editing an environment](#).

## Using Amazon WorkSpaces Secure Browser

Amazon WorkSpaces Secure Browser is a low-cost, fully managed WorkSpaces console that is built to deliver secure web-based workloads and software as a service (SaaS) application access to users within existing web browsers.

1. To set up Amazon WorkSpaces Secure Browser, do one of the following:
  - Select the web portal that you want to use for your environment. You can either browse through the dropdown list or you can search the web portals by using the search field.
  - Create a web portal by selecting the **Create WorkSpaces Secure Browser** button. For more information on creating WorkSpaces Secure Browser web portals, see [Setting up Amazon WorkSpaces Secure Browser](#).
2. Select the **Create environment** button.

After you create your environment, you can still edit the details later. For more information, see [Editing an environment](#).

### Step 3: Send the activation code to your device users

After you set your environment and virtual desktop service, you will receive a unique activation code for your setup on the AWS Management Console.

Provide this activation code to any WorkSpaces Thin Client device user, and they can use it to access their virtual desktop.

See the [WorkSpaces Thin Client User Guide](#) for additional information on how to help your device user set up their Amazon WorkSpaces Thin Client.

## Editing an environment

The WorkSpaces Thin Client administration console manages virtual desktop environments for individual users. From this console, you can edit or delete virtual desktop environments.

1. Select the environment that you want to edit.

#### Note

You can either browse through the dropdown list or you can search the environments by using the search field.

2. Select the **Actions** button.
3. Select **Edit** from the dropdown list. You will be directed to the **Edit environment** window.
4. Edit any of the following:
  - Change the name of your environment in the **Environment name** field.
  - Change the check box for **Software updates details** for automatic software patch updates.
  - Change when you want to schedule the maintenance window for your environment.
5. Select the **Edit environment** button.

## Deleting an environment

### Note

You cannot delete an environment if it has any devices registered to it. First, you must [deregister](#) and [delete](#) all devices in an environment.

1. Select the environment that you want to delete. You can either browse through the dropdown list or you can search the environments by using the search field.
2. Select the **Actions** button.
3. Select **Delete** from the dropdown list. The **Delete environment** confirmation window appears.
4. Type "delete" in the confirmation field.
5. Select the **Delete** button.


## Devices

Each WorkSpaces Thin Client end user has a dedicated device that connects them to their virtual desktop environments and online resources. These devices are managed through the WorkSpaces Thin Client administrator console on the [AWS site](#).

From this console, you can order devices for your team.

## Device list

There are a number of parameters for any device in your network for you to review as well as some actions you can take.

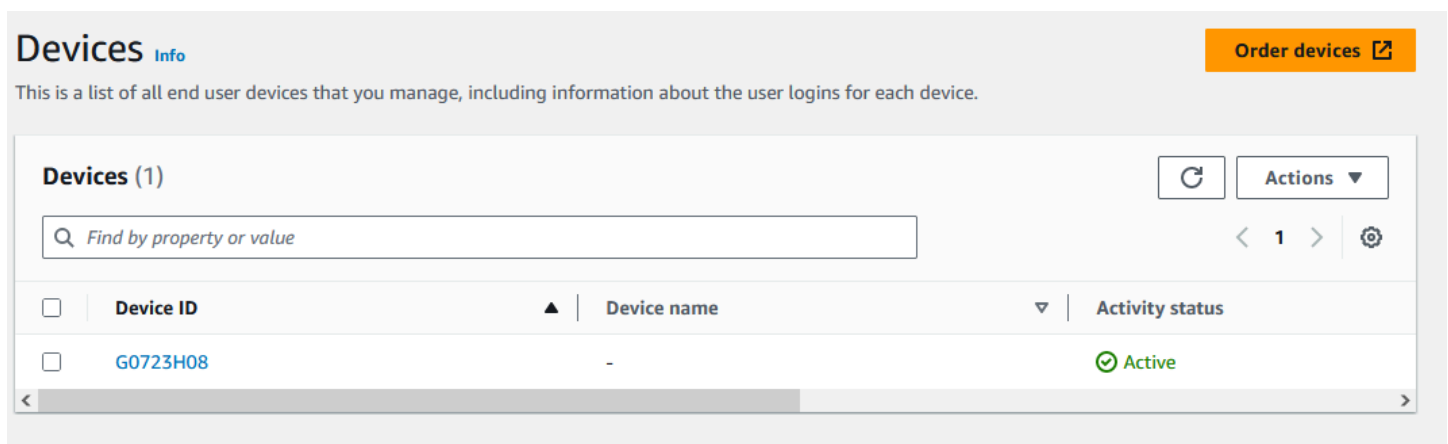


The screenshot displays the 'Devices' section of the AWS WorkSpaces Thin Client administrator console. At the top left, the title 'Devices' is followed by an 'Info' link. On the top right, there is an orange button labeled 'Order devices' with an external link icon. Below the title, a descriptive text states: 'This is a list of all end user devices that you manage, including information about the user logins for each device.' The main content area features a table with the following structure:

Device ID	Device name	Activity status
<input type="checkbox"/> G0723H08	-	<span style="color: green;">✔ Active</span>

Additional UI elements include a search bar with the placeholder 'Find by property or value', a refresh button, an 'Actions' dropdown menu, and pagination controls showing '1' of 1 items.

## Device list details

The parameters for your device are listed for your review. The following table lists each element in the summary and how it functions.

Element	Description
Device serial number	The identification number assigned to an individual device.
Device name	(optional) The unique name that you give to a device.
Last used by	The identification number of the user accessing the device. Only available when using WorkSpaces Personal.
Activity status	<p>The current status of a device. There are two status states:</p> <ul style="list-style-type: none"> <li>• <b>Active</b> – Connected to a network at least once in the past seven days.</li> <li>• <b>Inactive</b> – Not connected to a network in the past seven days.</li> </ul>
Enrollment status	<p>Confirmation that a device has been set up, is associated with this AWS account, and is part of a specific environment. It can be in one of the following states:</p> <ul style="list-style-type: none"> <li>• <b>Registered</b> – This is the default status.</li> <li>• <b>Deregistering</b> – The device is in the <b>Reset and Deregister</b> process.</li> </ul> <div data-bbox="860 1669 1510 1879" style="border: 1px solid #00a0e3; border-radius: 10px; padding: 10px; margin-top: 10px;"> <p> <b>Note</b> You can delete a device if it is in a deregistering state.</p> </div>

Element	Description
	<ul style="list-style-type: none"> <li>• <b>Deregistered</b> – The device has been successfully deregistered.</li> </ul> <div data-bbox="862 333 1508 600" style="border: 1px solid #add8e6; border-radius: 10px; padding: 10px; margin: 10px 0;"> <p><b>Note</b></p> <p>You can only delete a device if it's in either a <b>Deregistering</b> or <b>Deregistered</b> status.</p> </div> <ul style="list-style-type: none"> <li>• <b>Archived</b> – The device is archived.</li> </ul>
Environment ID	The identifier of the environment to which this device is attached.
Software compliance	<p>The compliance status of the device software. There are two status states:</p> <ul style="list-style-type: none"> <li>• <b>Compliant</b></li> <li>• <b>Not compliant</b></li> </ul>

## Device list actions

There are a number of actions you can perform from here. Select any of these to perform the corresponding action.

Element	Description
Search	Searches all devices that you manage.
Refresh	Refreshes the device list.
View details	Displays Device details.
Actions	<p>Opens a dropdown list where you can do the following:</p> <ul style="list-style-type: none"> <li>• <a href="#">Edit device name</a></li> </ul>

Element	Description
	<ul style="list-style-type: none"> <li>• <a href="#">Deregister</a></li> <li>• <a href="#">Archive</a></li> <li>• <a href="#">Delete</a></li> <li>• <a href="#">Export device details</a></li> </ul>
Order devices	Starts the process of ordering devices.

## Topics

- [Device details](#)
- [Editing a device name](#)
- [Resetting and deregistering a device](#)
- [Archiving a device](#)
- [Deleting a device](#)
- [Exporting device details](#)

## Device details


When you select an device, the WorkSpaces Thin Client console displays the details for that device for you to review. The console also displays the details about the device's network type and connected peripherals.




## Topics

- [Summary](#)
- [Device settings](#)
- [User Activity](#)


## Summary

The Summary section provides a high-level overview of the key features of the WorkSpaces Thin Client device. The following table lists each element in the summary and how it functions.

**Summary** 

<p><b>Device serial number</b></p> <p><b>ARN</b> </p> <p><b>Device name</b> -</p> <p><b>Device type</b></p> <p><b>Activity status</b>  Inactive</p>	<p><b>Environment ID</b></p> <p><b>Enrollment status</b> Registered</p> <p><b>Enrolled since</b> September 27, 2023, 20:33 (UTC-07:00)</p> <p><b>Last logged in</b> October 07, 2023, 03:09 (UTC-07:00)</p> <p><b>Last posture checked at</b> March 19, 2024, 17:53 (UTC-07:00)  Not checked in for past 7 days</p>	<p><b>Current software version</b> -</p> <p><b>Scheduled for software update</b> 2.8.1</p> <p><b>Software compliance</b> -</p>
---	--	--

Element	Description
Device serial number	The identification number assigned to an individual device.
ARN	The unique identifier for the device in Amazon Resource Name (ARN) format.
Device name	The name that you give to a device. If you have not created a name, you can name it, or it will get a default name.
Device type	The type of end user device that is linked to the account.
Activity status	The current status of this device. The two status states are: <ul style="list-style-type: none"> <li>• Active</li> <li>• Inactive</li> </ul>
Environment ID	The identification number of the environment that the device uses.
Enrollment status	Confirmation that a device has been set up, is associated with this AWS account, and is part of a specific environment. It can be in one of the following four states:

Element	Description
	<ul style="list-style-type: none"> <li>• <b>Registered</b> – This is the default status.</li> <li>• <b>Deregistering</b> – The device is in the Reset and Deregister process.</li> <li>• <b>Deregistered</b> – The device has been successfully deregistered.</li> </ul> <div data-bbox="862 495 1507 764" style="border: 1px solid #add8e6; border-radius: 10px; padding: 10px; margin: 10px 0;"> <p> <b>Note</b></p> <p>You can only delete the device if it's in either a Deregistered or Archived status.</p> </div> <ul style="list-style-type: none"> <li>• <b>Archived</b> – This device has been marked by the administrator as not currently in service.</li> </ul>
Enrolled since	The date the device was activated.
Last logged in	The date and time of the most recent login.
Last posture checked at	The date and time of the most recent device check-in.
Current software version	The software version that this device is currently using.
Scheduled for software update	The scheduled software version on the device.
Software compliance	<p>Confirmation that the software set is valid. There are two status states:</p> <ul style="list-style-type: none"> <li>• Compliant</li> <li>• Not Compliant</li> </ul>
Last used by	The identification number of the user accessing the device. Only available when using WorkSpaces Personal.

## User log

**User activity details (5)** [Info](#) [Export details](#) [Refresh](#)

< 1 > [Settings](#)

Device accessed on
August 28, 2023, 21:46 (UTC-04:00)
August 28, 2023, 18:18 (UTC-04:00)
August 24, 2023, 10:56 (UTC-04:00)
August 24, 2023, 10:56 (UTC-04:00)
August 24, 2023, 09:33 (UTC-04:00)

Element	Description
Last device access	The date and time when this device was last used.

## Device settings

The parameters for your device are listed for your review. The following table lists each element and how it functions.

### Note

Device settings information is updated only when device is online. If device is offline, some information may be out of date.

## Heading and Network

WorkSpaces Thin Client device details provides an overview of the device's network connections. The following table lists each element and how it functions.

**Device settings** [Info](#)

Last synced on: October 21, 2024, 14:28 (UTC-07:00)

**▼ Network**

<b>Connection type</b> ETHERNET	<b>Local IP address</b>
<b>Status</b> ✔ Connected	<b>Gateway address</b>

Element	Description
Last synced on	The date and time of the most recent device settings sync with console.
Connection type	The type of network connection used by the device. The connection type can either be Ethernet or Wifi.
Status	The status of the network. If the device is currently connected, or connected within the past 20 minutes, the status will show up as 'connected'. If the network has been disconnected for more than 20 min, the status will change to show the time passed since the device is last connected to internet, e.g. "last connected 20 minutes ago".
Local IP address	The local IP address of the connected network.
Gateway address	The gateway address of the connected network.

**Bluetooth and peripheral devices**

WorkSpaces Thin Client device details provide a list of any connected peripherals connect to a device. The following table lists each element and how it functions.

### ▼ Bluetooth and peripheral devices

#### Bluetooth

🟢 Enabled

#### Connected peripheral devices (5)

Name	Type
Logitech USB Receiver Mouse	Mouse (USB)
Logitech USB Receiver	Keyboard (USB)
Plantronics Blackwire 5220 Series	Speaker (USB)
Plantronics Blackwire 5220 Series	Microphone (USB)
UVC Camera (046d:0825)	Webcam (USB)

Element	Description
Bluetooth	The Bluetooth status of the device. The two status states are: <ul style="list-style-type: none"> <li>• Enabled</li> <li>• Disabled</li> </ul>
Connected peripheral devices	The list of names of the connected peripherals, such as Logitech mouse, and the type of the connected peripherals, such as Mouse (USB).

## Power and sleep

Each WorkSpaces Thin Client device has a power saving mode. The following table lists the status of this mode.

### ▼ Power and sleep

Turn off display after  
Never

Element	Description
Turn off display after	The period of inactive time after which the device turns off its display.

## User Activity

This tab shows the log of a specific device's setup and usage information. The following table lists each element of this log.

Device accessed on	User ID	Virtual desktop service	Virtual desktop service ID	IP address	Session ID
March 06, 2025, 16:43 (UTC+01:00)	sld-demo	WorkSpaces	<a href="#">d-123456abcde</a>	2a02:a46a:9b7c...	gw2-8a88e81

Element	Description
Device accessed on	The date and time the device is activated.
User ID	The identification number of the user accessing the device.
Virtual desktop service	The virtual desktop service the device uses.
Virtual desktop service ID	The virtual desktop service ID number associated with the user.
IP address	The identification number of the IP accessing the device.
Event type	Details on how the device is being used.

### Note

With the exception of WorkSpaces Personal, VDIs only show a **Login initiated** event.

You can use the search bar above the table to find specific information in the table. You can also filter the table results by date and time.

You can export the table to a csv file by selecting the **Export details** button.

## Editing a device name

1. Select the device that you want to edit. You can either browse through the dropdown list or you can search for device by using the search field.
2. Select the **Actions** button.
3. Select **Edit device name** from the dropdown list. The **Edit device name** window appears.
4. Enter the new device name in the **Device name** confirmation field.
5. Select the **Save** button.

## Resetting and deregistering a device

1. Select the device that you want to deregister. You can either browse through the dropdown list or you can search for the device by using the search field.
2. Select the **Actions** button.
3. Select **Deregister** from the dropdown list. The **Deregister** window appears.
4. Enter "deregister" in the confirmation field.
5. Select the **Deregister** button.

### Note

Deregistering forcibly logs out the user and require a reboot of their WorkSpaces Thin Client device in the middle of a session.

## Archiving a device

1. Select the device that you want to archive. You can either browse through the dropdown list or you can search for the device by using the search field.
2. Select the **Actions** button.
3. Select **Archive** from the dropdown list. The **Archive** window appears.
4. Enter "reset and archive" in the confirmation field.
5. Select the **Reset and archive** button.

**Note**

Archiving a device forcibly logs out the user and require a reboot of their WorkSpaces Thin Client device in the middle of a session.

## Deleting a device

1. Select the device that you want to delete. You can either browse through the dropdown list or you can search for the device by using the search field.
2. Select the **Actions** button.
3. Select **Delete** from the dropdown list. The **Delete** window appears.
4. Enter "delete" in the confirmation field.
5. Select the **Delete** button.

## Exporting device details

1. Select the device from which you want to export the details. You can either browse through the dropdown list or you can search for the device by using the search field.
2. Select the **Actions** button.
3. Select **Export device details** from the dropdown list. The details for the selected device download in a spreadsheet format.

## Your Amazon WorkSpaces Thin Client - Data generated by the use of the device

Your Amazon WorkSpaces Thin Client generates and collects data about your interactions with it.

**Types of Data:** Your Amazon WorkSpaces Thin Client generates data about device performance, usage patterns, and interactions with other AWS services. This includes technical data (like status and settings), usage data (such as log-in time stamps), and diagnostics data (such as system log where relevant).

**Data Volume & Collection:** The amount of data generated varies based on how you use your device and services. Data is collected continuously during device operation.

**Data Storage:** Data from your device is stored securely on the device itself or on AWS servers. It is stored in structured, machine-readable formats.

**Data Access:** You can access your device data through your AWS account following instructions listed [here](#). Further information, including instructions on data downloads and information on the quality of service, is available on these [pages](#).

**Data Management:** You can review your device data through your AWS account. To learn more about your device's data practices, please review our [Service Terms](#) and [Privacy Notice](#).

**Data Deletion:** You can delete your device data through your AWS account. For information about data retention and deletion options, visit [Deleting a device](#).

**Data sharing with others:** AWS does not share your device data with third parties. Only authorized third parties can access your data upon your approval via our [Identify and Access Management](#) processes. AWS shares personal data with third parties in limited cases included in the [AWS Privacy Notice](#).

**Need Help?** Visit [Customer Support](#) to reach our support team. This is without prejudice to your right to lodge a complaint under applicable law.

**Data holder:** Amazon Web Services EMEA SARL, 38 Avenue John F. Kennedy, L-1855, Luxembourg

## Software updates

WorkSpaces Thin Client requires software updates periodically to introduce new functionality and apply security patches. These updates are represented by a versioned **Software set**.

A **Software set** can contain updates for software applications or the operating system of the WorkSpaces Thin Client device. From this console, you can choose to update the software immediately or schedule an automatic update during the maintenance window for the environments.

There are two types of Software sets:

- Software sets that introduce new functionality, fix defects, and make general improvements. These are released monthly.
- Software sets that contain security patches and fixes for critical issues. These are released as needed.

As an administrator, if you haven't enabled automatic software updates on your environment, devices registered to that environment won't receive software updates until you manually push the update.

As new Software sets are released, older Software sets expire. Starting from the date of release of a Software set with new functionality, you have 40 days before prior Software sets expire.

To ensure the security posture of the device remains intact, the service automatically updates devices if it detects expired software. This type of update can interrupt active sessions because it won't honor the maintenance window or allow end users to delay the update. To avoid this, we recommend updating Software sets at least once every 30 days.

### Note

If a Software set with security patches or a critical update is released, all prior Software sets will be set to expire in 3 days. To ensure your device remains secure and minimize disruption to daily operations, we recommend updating these Software sets immediately.

Refer to [WorkSpaces Thin Client environment software sets](#) for the list of released Software Sets.

## Updating environment software

WorkSpaces Thin Client is an AWS End User Computing service that provides users access to virtual desktops. These virtual desktops are periodically updated with new software sets. To update environment software, do the following:

1. Select the software set from the list in **Available software updates**. For a list of software sets, refer to [WorkSpaces Thin Client environment software sets](#).
2. Select the **Install** button.
3. Select **Environments** at the top of the page.
4. Select the environment to update from the list in the **Environments** section.
5. Select when to update the environment in the **Schedule the update** by choosing one of the following:
  - **Update software now** - Starts the update of the environment software on all registered devices.

**Note**

Updating software now may interrupt any active user sessions.

- **Update software during each environments maintenance window** - Updates the environment software during the scheduled maintenance window for the environment.
6. Check the box to authorize the update. This box must be checked for the software to update.
  7. Select the **Install** button.

## Updating device software

WorkSpaces Thin Client is an AWS End User Computing service that provides a thin client device that connects users to dedicated virtual desktops. These devices are periodically updated with new software. To update device software, do the following:

1. Select the software set from the list in **Available software updates**.
2. Select the **Install** button.
3. Select **Device** at the top of the page.
4. Select the device or devices to update from the list in the **Devices** section. For a list of software sets, refer to [WorkSpaces Thin Client environment software sets](#).
5. Select when to update the environment from the **Schedule the update** options by choosing one of the following:
  - **Update software now** - Immediately updates the device software.

**Note**

Updating the software now may interrupt any active user sessions.

- **Update software during each devices maintenance window** - Updates the environment software during the scheduled maintenance window for the device.
6. Check the box to authorize the update. This box must be checked for the software to update.
  7. Select the **Install** button.

## WorkSpaces Thin Client software releases

WorkSpaces Thin Client is an AWS End User Computing service that provides users access to virtual desktops on a device. These devices are periodically updated with new software sets. The following table describes all the released software sets. Administrators can use the [AWS management console](#) to view available software sets.

Software set	Release date	Changes
2.20.3	03-19-2026	<ul style="list-style-type: none"> <li>Fix for Chromium's CVE-2026-3909 and CVE-2026-3910 critical security issues.</li> </ul>
2.20.2	02-23-2026	<ul style="list-style-type: none"> <li>Fix for Chromium's CVE-2026-2441 critical security issue.</li> </ul>
2.20.1	11-18-2025	<ul style="list-style-type: none"> <li>Fix for Chromium's CVE-2025-13223 and CVE-2025-13224 critical security issues.</li> </ul>
2.20.0	11-5-2025	<ul style="list-style-type: none"> <li>Improves the authentication of the device.</li> </ul>
2.19.0	9-30-2025	<ul style="list-style-type: none"> <li>Toolbar actions such as <b>Restart</b>, <b>Shut down</b>, and <b>Sleep</b> now require end users to re-authenticate with WorkSpaces.</li> <li>Fixed an issue where end users were unable to use Ctrl+Space keys to select the column in Excel.</li> </ul>

Software set	Release date	Changes
		<ul style="list-style-type: none"><li>• Changed the internal URLs for Lock and Licensing pages.</li></ul>
2.18.0	8-28-2025	<ul style="list-style-type: none"><li>• Added <b>Exit Session</b> button to the device toolbar.</li><li>• Fixed an issue where activity status notification was incorrectly shown on the device.</li><li>• Added support for FIDO2 in session authentication.</li><li>• General fixes and improvements.</li></ul>
2.17.0	7-30-2025	<ul style="list-style-type: none"><li>• <a href="#">Plugable USB hub UD-3900Z</a> is now supported for use with WorkSpaces Thin Client.</li><li>• Added support for AltGr keys with Spanish keyboards.</li><li>• Fixed the issue that resulted in duplicate entries for user session activity for the device.</li><li>• Added support for Enter key on numeric keypad.</li><li>• General fixes and improvements.</li></ul>
2.16.2	7-22-2025	<ul style="list-style-type: none"><li>• Fix for Chromium's CVE-2025-6558 critical security issue.</li></ul>

Software set	Release date	Changes
2.16.1	7-3-2025	<ul style="list-style-type: none"><li>• Fix for Chromium's CVE-2025-6554 critical security issue.</li></ul>
2.16.0	6-27-2025	<ul style="list-style-type: none"><li>• Added notifications for Network Latency.</li><li>• Added ability to recover from second monitor going dark during a session.</li><li>• Fixed issue with monitors showing a white screen or not auto extending after the device comes back from sleep mode.</li></ul>
2.15.0	6-19-2025	<ul style="list-style-type: none"><li>• Added support for Latin America Spanish and International English keyboards.</li><li>• End users see notifications when device does not detect keyboard or mouse activity for extended amount of time.</li></ul>
2.14.1	6-09-2025	<ul style="list-style-type: none"><li>• Fix for Chromium's CVE-2025-5419 critical security issues.</li></ul>

Software set	Release date	Changes
2.13.0	3-31-2025	<ul style="list-style-type: none"><li>• End users will see product satisfaction feedback survey as a notification.</li><li>• Adds prerelease feature support for FIDO2 authentication flow. See <a href="#">FIDO2 pre-session details</a>.</li><li>• The device will not go to sleep if audio/video is playing in the session.</li><li>• End users see notifications when monitor is connected and disconnected.</li><li>• Device collects diagnostic information from the operation system for service improvements.</li><li>• Fixes an issue where an incorrect date was shown in Settings for software installed date.</li></ul>
2.14.0	4-29-2025	<ul style="list-style-type: none"><li>• Usability improvements and bug fixes.</li></ul>

Software set	Release date	Changes
2.13.0	3-31-2025	<ul style="list-style-type: none"><li>• End users will see product satisfaction feedback survey as a notification.</li><li>• Adds prerelease feature support for FIDO2 authentication flow. See <a href="#">FIDO2 pre-session details</a>.</li><li>• The device will not go to sleep if audio/video is playing in the session.</li><li>• End users see notifications when monitor is connected and disconnected.</li><li>• Device collects diagnostic information from the operation system for service improvements.</li><li>• Fixes an issue where an incorrect date was shown in Settings for software installed date.</li></ul>
2.12.0	1-30-2025	<ul style="list-style-type: none"><li>• Fixes an issue where end user was logged out of session on pressing the back button on mouse.</li></ul>
2.11.2	1-24-2025	<ul style="list-style-type: none"><li>• Fixes an issue where audio was crackling during calls with mouse movements across monitors.</li></ul>

Software set	Release date	Changes
2.11.1	12-27-2024	<ul style="list-style-type: none"><li>• Fixes dual monitor auto-extend issue.</li><li>• Minor improvements to VoiceView label.</li></ul>
2.11.0	12-19-2024	<ul style="list-style-type: none"><li>• WorkSpaces Thin Client now supports VoiceView and Magnifier.</li></ul>
2.10.0	11-22-2024	<ul style="list-style-type: none"><li>• End users can use a keyboard shortcut to collapse the device toolbar.</li></ul>

Software set	Release date	Changes
2.9.0	10-28-2024	<ul style="list-style-type: none"><li>• Administrators can now view their end users' device settings within AWS console under Device details page of a specific device.</li><li>• WorkSpaces Thin Client now supports 2K resolution monitor for single screen.</li><li>• End users can see notifications related to network diagnostics on their WorkSpaces Thin Client devices.</li><li>• End user can now choose to place device toolbar on left or right as per their preference.</li><li>• Fixed an issue where device did not install software updates during sleep or idle time.</li></ul>
2.8.1	09-26-2024	<ul style="list-style-type: none"><li>• Fixed a critical issue where the second monitor could not be toggled on after the device woke up from sleep.</li></ul>

Software set	Release date	Changes
2.8.0	09-06-2024	<ul style="list-style-type: none"><li>Thin Client supports monitors with 4K resolution.</li><li>Users can connect to the VDI session even if WorkSpaces Thin Client device management services are temporarily unavailable.</li><li>Fixed the issue where User activity details section in AWS console showed duplicate entries.</li><li>End users can use PrintScreen option while streaming WorkSpaces on WorkSpaces Thin Client.</li></ul>
2.7.1	08-27-2024	<ul style="list-style-type: none"><li>Zero-day fixes for Chromium's CVE-2024-7971 and CVE-2024-7965 critical security issues.</li></ul>
2.7.0	07-29-2024	<ul style="list-style-type: none"><li>Improvements to performance of second monitor.</li><li>Fixed an issue where the toolbar language was unaffected on changing device language.</li><li>Device now collects diagnostic information for service improvements.</li></ul>

Software set	Release date	Changes
2.6.0	07-09-2024	<ul style="list-style-type: none"> <li>• Users can defer the incoming software updates so that they can finish their work without interruption.</li> <li>• Device settings allows users to forget saved WiFi networks.</li> <li>• Improvements to performance of audio/vid eo calls in the session.</li> <li>• Some user settings for the VDI sessions persist across device reboot.</li> </ul>
2.5.0	06-13-2024	<ul style="list-style-type: none"> <li>• Fixed the issue where device showed keyboard and mouse setup screen briefly on waking up from sleep before launching the session.</li> <li>• The <b>Home</b> button on the device toolbar renamed to <b>Sign In</b>.</li> <li>• Improvements to performance of audio/vid eo calls in the session.</li> </ul>
2.4.3	05-29-2024	<ul style="list-style-type: none"> <li>• Zero-day fix for Chromium's CVE-2024-5274 critical security issue.</li> </ul>
2.4.2	05-17-2024	<ul style="list-style-type: none"> <li>• Zero-day fix for Chromium's CVE-2024-4947 critical security issue.</li> </ul>

Software set	Release date	Changes
2.4.1	05-15-2024	<ul style="list-style-type: none"><li>• Zero-day fixes for Chromium's CVE-2024-4671 and CVE-2024-4761 critical security issues.</li><li>• Fixed the issue that allowed right-clicking on AWS and Privacy links on WorkSpaces sign-in page to open the browser in a stand-alone mode.</li></ul>
2.4.0	05-09-2024	<ul style="list-style-type: none"><li>• Fixed an issue blocking "accounts.google.com" and preventing the use of Google Workspace as the IDP for WorkSpaces Applications session.</li><li>• Device settings toolbar auto-collapses with a click in any area on the screen.</li></ul>

Software set	Release date	Changes
2.3.0	04-05-2024	<ul style="list-style-type: none"><li>• Device settings show up in a collapsed toolbar allowing better utilization of the visible screen.</li><li>• End users can now configure the duration to wait before the device sleeps on inactivity.</li><li>• Fixed the issue where "about:blank" URL shows up on the second display.</li><li>• Fixed the issue that resulted in a white screen when extended display is closed.</li><li>• Volume levels set by end users now persists across device restarts.</li></ul>
2.2.1	02-16-2024	<ul style="list-style-type: none"><li>• Fixed an issue that occurs during the sign-in process that prevented users from logging into WorkSpaces configured with SAML 2.0 authentication.</li></ul>
2.2.0	02-08-2024	<ul style="list-style-type: none"><li>• Added support for ISO keyboards with English (United Kingdom), French, German, Italian, Spanish locales.</li></ul>

Software set	Release date	Changes
2.1.2	01-26-2024	<ul style="list-style-type: none"><li>• Zero-day fix for Chromium's CVE-2024-0519 critical security issue.</li><li>• Improvement to end user latency associated with Lock functionality.</li><li>• Internal device-facing endpoints are switched over to 'thinclient*' domain.</li></ul>
2.1.1	12-21-2023	<ul style="list-style-type: none"><li>• Zero-day fix for Chromium's CVE-2023-7024 critical security issue.</li></ul>
2.1.0	12-20-2023	<ul style="list-style-type: none"><li>• Adds a <b>Home</b> button to the device settings and enables support for Meta keys. This allows ends users to invoke the lock screen by pressing Meta+L.</li></ul>
2.0.1	12-06-2023	<ul style="list-style-type: none"><li>• Zero-day fix for Chromium's CVE-2024-6345 critical security issue.</li></ul>
2.0.0	11-15-2023	<ul style="list-style-type: none"><li>• Initial release</li></ul>

# Using tags on WorkSpaces Thin Client resources

You can organize and manage the resources for your WorkSpaces Thin Client by assigning your own metadata to each resource as tags. You specify a key and a value for each tag. A key can be a general category, such as "project," "owner," or "environment," with specific associated values. You can use tags as a simple yet powerful way to manage AWS resources and to organize data, including billing data.

When you add tags to an existing resource, those tags don't appear in your cost allocation report until the first day of the following month. For example, if you add tags to an existing WorkSpaces Thin Client device on July 15, the tags won't appear in your cost allocation report until August 1. For more information, see [Using Cost Allocation Tags](#) in the *AWS Billing User Guide*.

## Note

To view your WorkSpaces Thin Client resource tags in the Cost Explorer, you must activate the tags that you have applied to your WorkSpaces Thin Client resources by following the instructions in [Activating User-Defined Cost Allocation Tags](#) in the *AWS Billing User Guide*. Tags appear 24 hours after activation, but it can take 4–5 days for values associated with those tags to appear in the Cost Explorer. Additionally, to appear and provide cost data in Cost Explorer, WorkSpaces Thin Client resources that have been tagged must incur charges during that time. Cost Explorer only shows cost data from the time when the tags were activated. No historical data is available at this time.

## Resources that you can tag:

- You can add tags to the following resources when you create them—WorkSpaces Thin Client environments.
- You can add tags to existing resources of the following types—WorkSpaces Thin Client environments, devices, and software sets.
- You can configure the tags for a device in an environment to be automatically applied when you register a device.

## Tag restrictions

- Maximum number of tags per resource—50

- Maximum key length—128 Unicode characters
- Maximum value length—256 Unicode characters
- Tag keys and values are case-sensitive. Allowed characters are letters, spaces, and numbers representable in UTF-8, plus the following special characters: + - = . \_ : / @. Do not use leading or trailing spaces.
- Do not use the `aws :` prefix in your tag names or values because it is reserved for AWS use. You can't edit or delete tag names or values with this prefix.

### To manage tags for an existing environment by using the console

1. Open the [WorkSpaces Thin Client console](#).
2. Select the **Environment** to open its details page
3. Choose **Edit**.
4. In **Tags** section, do one or more of the following:
  - To add a tag, choose **Add new tag** and then edit the values of **Key** and **Value**.
  - To update a tag, edit the value of **Value**.
  - To delete a tag, choose the **Remove** next to the tag.
5. When you are finished updating the tags, choose **Save**.

### To manage tags for an existing device by using the console

1. Open the [WorkSpaces Thin Client console](#).
2. Select the device to open its details page.
3. Choose **Tags**.
4. Choose **Manage tags**.
5. Do one or more of the following:
  - To add a tag, choose **Add new tag** and then edit the values of **Key** and **Value**.
  - To update a tag, edit the value of **Value**.
  - To delete a tag, choose the **Remove** next to the tag.
6. When you are finished updating the tags, choose **Save**.

## To manage tags for a new device by using the console

1. Open the [WorkSpaces Thin Client console](#).
2. Select the **Environment** to open its details page.
3. Choose **Edit**.
4. In **Device creation tags** section, do one or more of the following:
  - To add a tag, choose **Add new tag** and then edit the values of **Key** and **Value**.
  - To update a tag, edit the value of **Value**.
  - To delete a tag, choose the **Remove** next to the tag.
5. When you are finished updating the tags, choose Save.

When a device is created, it is registered with the environment and the device creation tags are applied. This only happens during new device registration. Additionally, the `aws:thinclient:environment-id` system tag is applied with the environment Id used as value.

## To manage tags for a software update by using the console

1. Open the [WorkSpaces Thin Client console](#).
2. Select the **Software update** to open its details page.
3. In **Tags** section, choose **Manage tags**.
4. Do one or more of the following:
  - To add a tag, choose **Add new tag** and then edit the values of **Key** and **Value**.
  - To update a tag, edit the value of **Value**.
  - To delete a tag, choose the **Remove** next to the tag.
5. When you are finished updating the tags, choose **Save**.

# Security in Amazon WorkSpaces Thin Client

Cloud security at AWS is the highest priority. As an AWS customer, you benefit from data centers and network architectures that are built to meet the requirements of the most security-sensitive organizations.

Security is a shared responsibility between AWS and you. The [shared responsibility model](#) describes this as security *of* the cloud and security *in* the cloud:

- **Security of the cloud** – AWS is responsible for protecting the infrastructure that runs AWS services in the AWS Cloud. AWS also provides you with services that you can use securely. Third-party auditors regularly test and verify the effectiveness of our security as part of the [AWS Compliance Programs](#). To learn about the compliance programs that apply to Amazon WorkSpaces Thin Client, see [AWS Services in Scope by Compliance Program](#).
- **Security in the cloud** – Your responsibility is determined by the AWS service that you use. You are also responsible for other factors including the sensitivity of your data, your company's requirements, and applicable laws and regulations.

This documentation helps you understand how to apply the shared responsibility model when using WorkSpaces Thin Client. The following topics show you how to configure WorkSpaces Thin Client to meet your security and compliance objectives. You can also learn how to use other AWS services that help you to monitor and secure your WorkSpaces Thin Client resources.

## Topics

- [Data protection in Amazon WorkSpaces Thin Client](#)
- [Identity and access management for Amazon WorkSpaces Thin Client](#)
- [Resilience in Amazon WorkSpaces Thin Client](#)
- [Vulnerability analysis and management in Amazon WorkSpaces Thin Client](#)

## Data protection in Amazon WorkSpaces Thin Client

The AWS [shared responsibility model](#) applies to data protection in Amazon WorkSpaces Thin Client. As described in this model, AWS is responsible for protecting the global infrastructure that runs all of the AWS Cloud. You are responsible for maintaining control over your content that is hosted on this infrastructure. You are also responsible for the security configuration and

management tasks for the AWS services that you use. For more information about data privacy, see the [Data Privacy FAQ](#). For information about data protection in Europe, see the [AWS Shared Responsibility Model and GDPR](#) blog post on the *AWS Security Blog*.

For data protection purposes, we recommend that you protect AWS account credentials and set up individual users with AWS IAM Identity Center or AWS Identity and Access Management (IAM). That way, each user is given only the permissions necessary to fulfill their job duties. We also recommend that you secure your data in the following ways:

- Use multi-factor authentication (MFA) with each account.
- Use SSL/TLS to communicate with AWS resources. We require TLS 1.2 and recommend TLS 1.3.
- Set up API and user activity logging with AWS CloudTrail. For information about using CloudTrail trails to capture AWS activities, see [Working with CloudTrail trails](#) in the *AWS CloudTrail User Guide*.
- Use AWS encryption solutions, along with all default security controls within AWS services.
- Use advanced managed security services such as Amazon Macie, which assists in discovering and securing sensitive data that is stored in Amazon S3.
- If you require FIPS 140-3 validated cryptographic modules when accessing AWS through a command line interface or an API, use a FIPS endpoint. For more information about the available FIPS endpoints, see [Federal Information Processing Standard \(FIPS\) 140-3](#).

We strongly recommend that you never put confidential or sensitive information, such as your customers' email addresses, into tags or free-form text fields such as a **Name** field. This includes when you work with WorkSpaces Thin Client or other AWS services using the console, API, AWS CLI, or AWS SDKs. Any data that you enter into tags or free-form text fields used for names may be used for billing or diagnostic logs. If you provide a URL to an external server, we strongly recommend that you do not include credentials information in the URL to validate your request to that server.

Amazon WorkSpaces Thin Client collects and provide information about user use of WorkSpaces Thin Client devices and their interaction with the virtual desktop services. For example, available memory, network diagnostics, network information, device connectivity, SAML credentials, device identification information, and crash reports. This information is used to provide you the service and may be used to improve ythe user experience with the service. Further, solely to provide you with the service, the information may be transferred outside of the AWS Region where users are using the service. We process this information in accordance with the [AWS Privacy Notice](#).

## Topics

- [Data encryption](#)
- [Data encryption at rest for Amazon WorkSpaces Thin Client](#)
- [Encryption in transit](#)
- [Key management](#)
- [Internet work traffic privacy](#)

## Data encryption

WorkSpaces Thin Client collects environment and device customization data, such as user settings, device identifiers, identity provider information, and streaming desktop identifiers. WorkSpaces Thin Client also collects session timestamps. Collected data is stored in Amazon DynamoDB and Amazon S3. WorkSpaces Thin Client uses AWS Key Management Service (KMS) for encryption.

To secure your content, follow these guidelines:

- Implement least privilege access and create specific roles to be used for WorkSpaces Thin Client actions.
- Protect data end-to-end by providing a customer-managed key, so WorkSpaces Thin Client can encrypt your data at rest with the keys you supply.
- Be careful with sharing environment activation codes and user credentials:
  - Admins are required to log into the WorkSpaces Thin Client console, and users are required to provide activation codes for WorkSpaces Thin Client setup use credentials to log into the streaming desktop.
  - Anyone with physical access can set up a WorkSpaces Thin Client, but they can't start a session unless they have a valid activation code and user credentials to log in.
- Users can explicitly end their sessions by choosing to lock their screen, reboot, or shut down the device by using the device toolbar. This discards the device session and clears session credentials.

WorkSpaces Thin Client secures content and metadata by default by encrypting all sensitive data with AWS KMS. If there is an error applying existing settings, a user can't access new sessions and devices cannot apply software updates.

## Data encryption at rest for Amazon WorkSpaces Thin Client

Amazon WorkSpaces Thin Client provides encryption by default to protect sensitive customer data at rest by using AWS owned encryption keys.

- **AWS owned keys** — Amazon WorkSpaces Thin Client uses these keys by default to automatically encrypt personally identifiable data. You cannot view, manage, or use AWS owned keys or audit their use. However, you don't have to take any action or change any programs to protect the keys that encrypt your data. For more information, see [AWS owned keys](#) in the *AWS Key Management Service Developer Guide*.

Encryption of data at rest by default helps reduce the operational overhead and complexity involved in protecting sensitive data. At the same time, it enables you to build secure applications that meet strict encryption compliance and regulatory requirements.

While you can't disable this layer of encryption or select an alternate encryption type, you can add a second layer of encryption over the existing AWS owned encryption keys by choosing a customer managed key when you create your Thin Client Environment:

- **Customer managed keys** — Amazon WorkSpaces Thin Client supports the use of a symmetric customer managed key that you create, own, and manage to add a second layer of encryption on the existing AWS owned encryption. Because you have full control of this layer of encryption, you can perform such tasks as the following:
  - Establishing and maintaining key policies
  - Establishing and maintaining IAM policies
  - Enabling and disabling key policies
  - Rotating key cryptographic material
  - Adding tags
  - Creating key aliases
  - Scheduling keys for deletion

For more information, see [customer managed key](#) in the *AWS Key Management Service Developer Guide*.

The following table summarizes how Amazon WorkSpaces Thin Client encrypts personally identifiable data.

Data type	AWS owned key encryption	Customer managed key encryption (Optional)
Environment name WorkSpaces Thin Client <a href="#">Environment</a> name	Enabled	Enabled
Device name WorkSpaces Thin Client <a href="#">Device</a> name	Enabled	Enabled
User activity WorkSpaces Thin Client <a href="#">User</a> activity	Enabled	Enabled
Device settings WorkSpaces Thin Client <a href="#">Device</a> settings	Enabled	Enabled
Device creation tags WorkSpaces Thin Client <a href="#">Environment</a> device creation tags	Enabled	Enabled

**Note**

Amazon WorkSpaces Thin Client automatically enables encryption at rest by using AWS owned keys to protect personally identifiable data at no charge. However, AWS KMS charges apply for using a customer managed key. For more information about pricing, see the [AWS Key Management Service pricing](#).

## How Amazon WorkSpaces Thin Client uses AWS KMS

Amazon WorkSpaces Thin Client requires a key policy for you to use your customer managed key.

Amazon WorkSpaces Thin Client requires the key policy to use your customer managed key for the following internal operations:

- Send [GenerateDataKey](#) requests to AWS KMS to encrypt the data.
- Send [Decrypt](#) requests to AWS KMS to decrypt the encrypted data.

You can remove the service's access to the customer managed key at any time. If you do, Amazon WorkSpaces Thin Client won't be able to access any of the data encrypted by the customer managed key, which affects operations that are dependent on that data. For example, if you attempt to [get environment details](#) that WorkSpaces Thin Client can't access, then the operation returns an `AccessDeniedException` error. Additionally, the WorkSpaces Thin Client device will not be able to use a WorkSpaces Thin Client Environment.

### Create a customer managed key

You can create a symmetric customer managed key by using the AWS Management Console or the AWS KMS API operations.

#### To create a symmetric customer managed key

Follow the steps for [Creating symmetric customer managed key](#) in the [AWS Key Management Service Developer Guide](#).

#### Key policy

Key policies control access to your customer managed key. Every customer managed key must have exactly one key policy, which contains statements that determine who can use the key and how they can use it. When you create your customer managed key, you can specify a key policy. For more information, see [Managing access to customer managed keys](#) in the [AWS Key Management Service Developer Guide](#).

To use your customer managed key with your Amazon WorkSpaces Thin Client resources, the following API operations must be permitted in the key policy:

- [kms:DescribeKey](#) — Provides the customer managed key details so Amazon WorkSpaces Thin Client can validate the key.

- [kms:GenerateDataKey](#) — Allows using the customer managed key to encrypt the data.
- [kms:Decrypt](#) — Allows using the customer managed key to decrypt the data.

The following are policy statement examples you can add for Amazon WorkSpaces Thin Client:

```
{
  "Statement":
  [
    {
      "Sid": "Allow access to principals authorized to use Amazon WorkSpaces Thin Client",
      "Effect": "Allow",
      "Principal": {"AWS": "*"},
      "Action": [
        "kms:DescribeKey",
        "kms:GenerateDataKey",
        "kms:Decrypt"
      ],
      "Resource": "*",
      "Condition": {
        "StringEquals": {
          "kms:ViaService": "thinclient.region.amazonaws.com",
          "kms:CallerAccount": "111122223333"
        }
      }
    },
    {
      "Sid": "Allow Amazon WorkSpaces Thin Client service to encrypt and decrypt data",
      "Effect": "Allow",
      "Principal": {"Service": "thinclient.amazonaws.com"},
      "Action": [
        "kms:GenerateDataKey",
        "kms:Decrypt"
      ],
      "Resource": "*",
      "Condition": {
        "StringLike": {
          "aws:SourceArn":
            "arn:aws:thinclient:region:111122223333:*",
          "kms:EncryptionContext:aws:thinclient:arn":
            "arn:aws:thinclient:region:111122223333:*"
        }
      }
    }
  ]
}
```

```

    }
  },
  {
    "Sid": "Allow access for key administrators",
    "Effect": "Allow",
    "Principal": {"AWS": "arn:aws:iam::111122223333:root"},
    "Action": ["kms:*"],
    "Resource": "arn:aws:kms:region:111122223333:key/key_ID"
  },
  {
    "Sid": "Allow read-only access to key metadata to the account",
    "Effect": "Allow",
    "Principal": {"AWS": "arn:aws:iam::111122223333:root"},
    "Action": [
      "kms:Describe*",
      "kms:Get*",
      "kms:List*"
    ],
    "Resource": "*"
  }
]
}

```

For more information about [specifying permissions in a policy](#), see the [AWS Key Management Service Developer Guide](#).

For more information about [troubleshooting key access](#), see the [AWS Key Management Service Developer Guide](#).

## Specifying a customer managed key for WorkSpaces Thin Client

You can specify a customer managed key as a second layer encryption for the following resources:

- WorkSpaces Thin Client [Environment](#)

When you create an Environment, you can specify the data key by providing a `kmsKeyArn`, which Amazon WorkSpaces Thin Client uses to encrypt the identifiable personal data.

- `kmsKeyArn` — A key identifier for an AWS KMS customer managed key. Provide a key ARN.

When a new WorkSpaces Thin Client device is added to the WorkSpaces Thin Client [Environment](#) encrypted with a customer managed key, the WorkSpaces Thin Client Device inherits the customer managed key setting from the WorkSpaces Thin Client Environment.

An [encryption context](#) is an optional set of key-value pairs that contains additional contextual information about the data.

AWS KMS uses the encryption context as [additional authenticated data](#) to support authenticated encryption. When you include an encryption context in a request to encrypt data, AWS KMS binds the encryption context to the encrypted data. To decrypt data, include the same encryption context in the request.

### Amazon WorkSpaces Thin Client encryption context

Amazon WorkSpaces Thin Client uses the same encryption context in all AWS KMS cryptographic operations, where the key is `aws:thinclient:arn` and the value is the Amazon Resource Name (ARN).

The following is the Environment encryption context:

```
"encryptionContext": {
  "aws:thinclient:arn": "arn:aws:thinclient:region:111122223333:environment/
environment_ID"
}
```

The following is the Device encryption context:

```
"encryptionContext": {
  "aws:thinclient:arn": "arn:aws:thinclient:region:111122223333:device/device_ID"
}
```

### Using encryption context for monitoring

When you use a symmetric customer managed key to encrypt your WorkSpaces Thin Client Environment and Device data, you can also use the encryption context in audit records and logs to identify how the customer managed key is being used. The encryption context also appears in [logs generated by AWS CloudTrail or Amazon CloudWatch Logs](#).

### Using encryption context to control access to your customer managed key

You can use the encryption context in key policies and IAM policies as conditions to control access to your symmetric customer managed key.

The following are example key policy statements to grant access to a customer managed key for a specific encryption context. The condition in this policy statement requires that the `kms:Decrypt` call has an encryption context constraint that specifies the encryption context.

```
{
  "Sid": "Enable Decrypt to access Thin Client Environment",
  "Effect": "Allow",
  "Principal": {"AWS": "arn:aws:iam::111122223333:role/ExampleReadOnlyRole"},
  "Action": "kms:Decrypt",
  "Resource": "*",
  "Condition": {
    "StringEquals": {"kms:EncryptionContext:aws:thinclient:arn":
"arn:aws:thinclient:region:111122223333:environment/environment_ID"}
  }
}
```

## Monitoring your encryption keys for Amazon WorkSpaces Thin Client

When you use an AWS KMS customer managed key with your Amazon WorkSpaces Thin Client resources, you can use AWS CloudTrail or Amazon CloudWatch Logs to track requests that Amazon WorkSpaces Thin Client sends to AWS KMS.

The following examples are AWS CloudTrail events for `DescribeKey`, `GenerateDataKey`, `Decrypt`, to monitor KMS operations called by Amazon WorkSpaces Thin Client to access data encrypted by your customer managed key:

In the following examples, you can see `encryptionContext` for the WorkSpaces Thin Client Environment. Similar CloudTrail events are recorded for the WorkSpaces Thin Client Device.

### DescribeKey

Amazon WorkSpaces Thin Client uses the `DescribeKey` operation to verify the AWS KMS customer managed key.

The following example event records the `DescribeKey` operation:

```
{
  "eventVersion": "1.09",
  "userIdentity": {
    "type": "AssumedRole",
    "principalId": "AROAIIGDTESTANDEXAMPLE:Sampleuser01",
    "arn": "arn:aws:sts::111122223333:assumed-role/Admin/Sampleuser01",
```

```

    "accountId": "111122223333",
    "accessKeyId": "AKIAIOSFODNN7EXAMPLE3",
    "sessionContext": {
      "sessionIssuer": {
        "type": "Role",
        "principalId": "AROAIQDTESTANDEXAMPLE:Sampleuser01",
        "arn": "arn:aws:sts::111122223333:assumed-role/Admin/Sampleuser01",
        "accountId": "111122223333",
        "userName": "Admin"
      },
      "attributes": {
        "creationDate": "2024-04-08T13:43:33Z",
        "mfaAuthenticated": "false"
      }
    },
    "invokedBy": "thinclient.amazonaws.com"
  },
  "eventTime": "2024-04-08T13:44:22Z",
  "eventSource": "kms.amazonaws.com",
  "eventName": "DescribeKey",
  "awsRegion": "eu-west-1",
  "sourceIPAddress": "thinclient.amazonaws.com",
  "userAgent": "thinclient.amazonaws.com",
  "requestParameters": {"keyId": "arn:aws:kms:eu-west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE"},
  "responseElements": null,
  "requestID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
  "eventID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
  "readOnly": true,
  "resources": [
    {
      "accountId": "111122223333",
      "type": "AWS::KMS::Key",
      "ARN": "arn:aws:kms:eu-west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE"
    }
  ],
  "eventType": "AwsApiCall",
  "managementEvent": true,
  "recipientAccountId": "111122223333",
  "eventCategory": "Management"
}

```

## GenerateDataKey

Amazon WorkSpaces Thin Client uses the `GenerateDataKey` operation to encrypt data.

The following example event records the `GenerateDataKey` operation:

```
{
  "eventVersion": "1.09",
  "userIdentity": {
    "type": "AssumedRole",
    "principalId": "AROAIQDTESTANDEXAMPLE:Sampleuser01",
    "arn": "arn:aws:sts::111122223333:assumed-role/Admin/Sampleuser01",
    "accountId": "111122223333",
    "accessKeyId": "AKIAIOSFODNN7EXAMPLE3",
    "sessionContext": {
      "sessionIssuer": {
        "type": "Role",
        "principalId": "AROAIQDTESTANDEXAMPLE:Sampleuser01",
        "arn": "arn:aws:sts::111122223333:assumed-role/Admin/Sampleuser01",
        "accountId": "111122223333",
        "userName": "Admin"
      },
      "attributes": {
        "creationDate": "2024-04-08T12:21:03Z",
        "mfaAuthenticated": "false"
      }
    },
    "invokedBy": "thinclient.amazonaws.com"
  },
  "eventTime": "2024-04-08T13:03:56Z",
  "eventSource": "kms.amazonaws.com",
  "eventName": "GenerateDataKey",
  "awsRegion": "eu-west-1",
  "sourceIPAddress": "thinclient.amazonaws.com",
  "userAgent": "thinclient.amazonaws.com",
  "requestParameters": {
    "keyId": "arn:aws:kms:eu-west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE",
    "encryptionContext": {
      "aws-crypto-public-key": "ABC123def4567890abc12345678/90dE/F123abcDEF+4567890abc123D+ef1==",
      "aws:thinclient:arn": "arn:aws:thinclient:eu-west-1:111122223333:environment/abcSAMPLE"
    }
  },
}
```

```

    "numberOfBytes": 32
  },
  "responseElements": null,
  "requestID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
  "eventID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
  "readOnly": true,
  "resources": [
    {
      "accountId": "111122223333",
      "type": "AWS::KMS::Key",
      "ARN": "arn:aws:kms:eu-
west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE"
    }
  ],
  "eventType": "AwsApiCall",
  "managementEvent": true,
  "recipientAccountId": "111122223333",
  "sharedEventID": "1234abcd-12ab-34cd-56ef-123456SAMPLE",
  "vpcEndpointId": "vpce-1234abcd567SAMPLE",
  "vpcEndpointAccountId": "thinclient.amazonaws.com",
  "eventCategory": "Management"
}

```

## GenerateDataKey (by service)

When Amazon WorkSpaces Thin Client uses the GenerateDataKey saves Device information, the GenerateDataKey operation is used to encrypt the data.

The GenerateDataKey operation is allowed in KMS key policy statement with Sid "Allow Amazon WorkSpaces Thin Client service to encrypt and decrypt data".

The following example event records the GenerateDataKey operation:

```

{
  "eventVersion": "1.09",
  "userIdentity": {
    "type": "AWSService",
    "invokedBy": "thinclient.amazonaws.com"
  },
  "eventTime": "2024-04-08T13:03:56Z",
  "eventSource": "kms.amazonaws.com",
  "eventName": "GenerateDataKey",
  "awsRegion": "eu-west-1",
  "sourceIPAddress": "thinclient.amazonaws.com",

```

```

    "userAgent": "thinclient.amazonaws.com",
    "requestParameters": {
      "keyId": "arn:aws:kms:eu-
west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE",
      "encryptionContext": {
        "aws-crypto-public-key": "ABC123def4567890abc12345678/90dE/F123abcDEF
+4567890abc123D+ef1==",
        "aws:thinclient:arn": "arn:aws:thinclient:eu-
west-1:111122223333:environment/abcSAMPLE"
      },
      "numberOfBytes": 32
    },
    "responseElements": null,
    "requestID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
    "eventID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
    "readOnly": true,
    "resources": [
      {
        "accountId": "111122223333",
        "type": "AWS::KMS::Key",
        "ARN": "arn:aws:kms:eu-
west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE"
      }
    ],
    "eventType": "AwsApiCall",
    "managementEvent": true,
    "recipientAccountId": "111122223333",
    "sharedEventID": "1234abcd-12ab-34cd-56ef-123456SAMPLE",
    "vpcEndpointId": "vpce-1234abcd567SAMPLE",
    "vpcEndpointAccountId": "thinclient.amazonaws.com",
    "eventCategory": "Management"
  }

```

## Decrypt

Amazon WorkSpaces Thin Client uses the Decrypt operation to decrypt data.

The following example event records the Decrypt operation:

```

{
  "eventVersion": "1.09",
  "userIdentity": {
    "type": "AssumedRole",
    "principalId": "AROAIQDTESTANDEXAMPLE:Sampleuser01",

```

```

    "arn": "arn:aws:sts::111122223333:assumed-role/Admin/Sampleuser01",
    "accountId": "111122223333",
    "accessKeyId": "AKIAIOSFODNN7EXAMPLE3",
    "sessionContext": {
      "sessionIssuer": {
        "type": "Role",
        "principalId": "AROAIIGDTESTANDEXAMPLE:Sampleuser01",
        "arn": "arn:aws:sts::111122223333:assumed-role/Admin/Sampleuser01",
        "accountId": "111122223333",
        "userName": "Admin"
      },
      "attributes": {
        "creationDate": "2024-04-08T13:43:33Z",
        "mfaAuthenticated": "false"
      }
    },
    "invokedBy": "thinclient.amazonaws.com"
  },
  "eventTime": "2024-04-08T13:44:25Z",
  "eventSource": "kms.amazonaws.com",
  "eventName": "Decrypt",
  "awsRegion": "eu-west-1",
  "sourceIPAddress": "thinclient.amazonaws.com",
  "userAgent": "thinclient.amazonaws.com",
  "requestParameters": {
    "keyId": "arn:aws:kms:eu-west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE",
    "encryptionContext": {
      "aws-crypto-public-key": "ABC123def4567890abc12345678/90dE/F123abcDEF+4567890abc123D+ef1==",
      "aws:thinclient:arn": "arn:aws:thinclient:eu-west-1:111122223333:environment/abcSAMPLE"
    },
    "encryptionAlgorithm": "SYMMETRIC_DEFAULT"
  },
  "responseElements": null,
  "requestID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
  "eventID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
  "readOnly": true,
  "resources": [
    {
      "accountId": "111122223333",
      "type": "AWS::KMS::Key",

```

```

        "ARN": "arn:aws:kms:eu-
west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE"
    }
  ],
  "eventType": "AwsApiCall",
  "managementEvent": true,
  "recipientAccountId": "111122223333",
  "sharedEventID": "1234abcd-12ab-34cd-56ef-123456SAMPLE",
  "vpcEndpointId": "vpce-1234abcd567SAMPLE",
  "vpcEndpointAccountId": "thinclient.amazonaws.com",
  "eventCategory": "Management"
}

```

## Decrypt (by service)

When WorkSpaces Thin Client Device accesses Environment or Device information, the Decrypt operation is used to decrypt the data. The Decrypt operation is allowed in KMS key policy statement with Sid "Allow Amazon WorkSpaces Thin Client service to encrypt and decrypt data".

The following example event records the Decrypt operation, authorized through a Grant:

```

{
  "eventVersion": "1.09",
  "userIdentity": {
    "type": "AWSService",
    "invokedBy": "thinclient.amazonaws.com"
  },
  "eventTime": "2024-04-08T13:44:25Z",
  "eventSource": "kms.amazonaws.com",
  "eventName": "Decrypt",
  "awsRegion": "eu-west-1",
  "sourceIPAddress": "thinclient.amazonaws.com",
  "userAgent": "thinclient.amazonaws.com",
  "requestParameters": {
    "keyId": "arn:aws:kms:eu-
west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE",
    "encryptionContext": {
      "aws-crypto-public-key": "ABC123def4567890abc12345678/90dE/F123abcDEF
+4567890abc123D+ef1==",
      "aws:thinclient:arn": "arn:aws:thinclient:eu-
west-1:111122223333:environment/abcSAMPLE"
    },
    "encryptionAlgorithm": "SYMMETRIC_DEFAULT"
  }
}

```

```
  },
  "responseElements": null,
  "requestID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
  "eventID": "ff000af-00eb-00ce-0e00-ea000fb0fba0SAMPLE",
  "readOnly": true,
  "resources": [
    {
      "accountId": "111122223333",
      "type": "AWS::KMS::Key",
      "ARN": "arn:aws:kms:eu-
west-1:111122223333:key/1234abcd-12ab-34cd-56ef-123456SAMPLE"
    }
  ],
  "eventType": "AwsApiCall",
  "managementEvent": true,
  "recipientAccountId": "111122223333",
  "sharedEventID": "1234abcd-12ab-34cd-56ef-123456SAMPLE",
  "vpcEndpointId": "vpce-1234abcd567SAMPLE",
  "vpcEndpointAccountId": "thinclient.amazonaws.com",
  "eventCategory": "Management"
}
```

## Learn More

The following resources provide more information about data encryption at rest:

- For more information about [AWS Key Management Service basic concepts](#), see the [AWS Key Management Service Developer Guide](#).
- For more information about [Security best practices for AWS Key Management Service](#), see the [AWS Key Management Service Developer Guide](#).

## Encryption in transit

WorkSpaces Thin Client encrypts data in transit over HTTPS and TLS 1.2. You can send a request to WorkSpaces Thin Client by using the console or direct API calls. The request data that is transferred is encrypted by sending it through an HTTPS or TLS connection. Request data can be transferred from the AWS Console, AWS Command Line Interface, or AWS SDK to WorkSpaces Thin Client. This also includes any software updates on the device.

Encryption in transit is configured by default, and secure connections (HTTPS, TLS) are configured by default.

## Key management

You can supply your own Customer Managed AWS KMS Key to encrypt your customer information. If you don't supply a key, WorkSpaces Thin Client uses an AWS Owned Key. You can set your key by using the AWS SDK.

## Internet work traffic privacy

Administrators are able to view WorkSpaces Thin Client session events, including start times and pending software update information. These logs are encrypted and securely delivered to customers in the WorkSpaces Thin Client console. User information and further details about individual streaming desktop sessions is recorded by the desktop services. For more information, see [Monitor your WorkSpaces](#), [Monitoring and Reporting for WorkSpaces Applications](#), or [User access logging](#) for WorkSpaces Web.

## Identity and access management for Amazon WorkSpaces Thin Client

AWS Identity and Access Management (IAM) is an AWS service that helps an administrator securely control access to AWS resources. IAM administrators control who can be *authenticated* (signed in) and *authorized* (have permissions) to use WorkSpaces Thin Client resources. IAM is an AWS service that you can use with no additional charge.

### Topics

- [Audience](#)
- [Authenticating with identities](#)
- [Managing access using policies](#)
- [How Amazon WorkSpaces Thin Client works with IAM](#)
- [Identity-based policy examples for Amazon WorkSpaces Thin Client](#)
- [AWS managed policies for Amazon WorkSpaces Thin Client](#)
- [Troubleshooting Amazon WorkSpaces Thin Client identity and access](#)

## Audience

How you use AWS Identity and Access Management (IAM) differs based on your role:

- **Service user** - request permissions from your administrator if you cannot access features (see [Troubleshooting Amazon WorkSpaces Thin Client identity and access](#))
- **Service administrator** - determine user access and submit permission requests (see [How Amazon WorkSpaces Thin Client works with IAM](#))
- **IAM administrator** - write policies to manage access (see [Identity-based policy examples for Amazon WorkSpaces Thin Client](#))

## Authenticating with identities

Authentication is how you sign in to AWS using your identity credentials. You must be authenticated as the AWS account root user, an IAM user, or by assuming an IAM role.

You can sign in as a federated identity using credentials from an identity source like AWS IAM Identity Center (IAM Identity Center), single sign-on authentication, or Google/Facebook credentials. For more information about signing in, see [How to sign in to your AWS account](#) in the *AWS Sign-In User Guide*.

For programmatic access, AWS provides an SDK and CLI to cryptographically sign requests. For more information, see [AWS Signature Version 4 for API requests](#) in the *IAM User Guide*.

### AWS account root user

When you create an AWS account, you begin with one sign-in identity called the AWS account *root user* that has complete access to all AWS services and resources. We strongly recommend that you don't use the root user for everyday tasks. For tasks that require root user credentials, see [Tasks that require root user credentials](#) in the *IAM User Guide*.

### Federated identity

As a best practice, require human users to use federation with an identity provider to access AWS services using temporary credentials.

A *federated identity* is a user from your enterprise directory, web identity provider, or Directory Service that accesses AWS services using credentials from an identity source. Federated identities assume roles that provide temporary credentials.

For centralized access management, we recommend AWS IAM Identity Center. For more information, see [What is IAM Identity Center?](#) in the *AWS IAM Identity Center User Guide*.

## IAM users and groups

An [IAM user](#) is an identity with specific permissions for a single person or application. We recommend using temporary credentials instead of IAM users with long-term credentials. For more information, see [Require human users to use federation with an identity provider to access AWS using temporary credentials](#) in the *IAM User Guide*.

An [IAM group](#) specifies a collection of IAM users and makes permissions easier to manage for large sets of users. For more information, see [Use cases for IAM users](#) in the *IAM User Guide*.

## IAM roles

An [IAM role](#) is an identity with specific permissions that provides temporary credentials. You can assume a role by [switching from a user to an IAM role \(console\)](#) or by calling an AWS CLI or AWS API operation. For more information, see [Methods to assume a role](#) in the *IAM User Guide*.

IAM roles are useful for federated user access, temporary IAM user permissions, cross-account access, cross-service access, and applications running on Amazon EC2. For more information, see [Cross account resource access in IAM](#) in the *IAM User Guide*.

## Managing access using policies

You control access in AWS by creating policies and attaching them to AWS identities or resources. A policy defines permissions when associated with an identity or resource. AWS evaluates these policies when a principal makes a request. Most policies are stored in AWS as JSON documents. For more information about JSON policy documents, see [Overview of JSON policies](#) in the *IAM User Guide*.

Using policies, administrators specify who has access to what by defining which **principal** can perform **actions** on what **resources**, and under what **conditions**.

By default, users and roles have no permissions. An IAM administrator creates IAM policies and adds them to roles, which users can then assume. IAM policies define permissions regardless of the method used to perform the operation.

## Identity-based policies

Identity-based policies are JSON permissions policy documents that you attach to an identity (user, group, or role). These policies control what actions identities can perform, on which resources, and under what conditions. To learn how to create an identity-based policy, see [Define custom IAM permissions with customer managed policies](#) in the *IAM User Guide*.

Identity-based policies can be *inline policies* (embedded directly into a single identity) or *managed policies* (standalone policies attached to multiple identities). To learn how to choose between managed and inline policies, see [Choose between managed policies and inline policies](#) in the *IAM User Guide*.

## Resource-based policies

Resource-based policies are JSON policy documents that you attach to a resource. Examples include *IAM role trust policies* and *Amazon S3 bucket policies*. In services that support resource-based policies, service administrators can use them to control access to a specific resource. You must [specify a principal](#) in a resource-based policy.

Resource-based policies are inline policies that are located in that service. You can't use AWS managed policies from IAM in a resource-based policy.

## Other policy types

AWS supports additional policy types that can set the maximum permissions granted by more common policy types:

- **Permissions boundaries** – Set the maximum permissions that an identity-based policy can grant to an IAM entity. For more information, see [Permissions boundaries for IAM entities](#) in the *IAM User Guide*.
- **Service control policies (SCPs)** – Specify the maximum permissions for an organization or organizational unit in AWS Organizations. For more information, see [Service control policies](#) in the *AWS Organizations User Guide*.
- **Resource control policies (RCPs)** – Set the maximum available permissions for resources in your accounts. For more information, see [Resource control policies \(RCPs\)](#) in the *AWS Organizations User Guide*.
- **Session policies** – Advanced policies passed as a parameter when creating a temporary session for a role or federated user. For more information, see [Session policies](#) in the *IAM User Guide*.

## Multiple policy types

When multiple types of policies apply to a request, the resulting permissions are more complicated to understand. To learn how AWS determines whether to allow a request when multiple policy types are involved, see [Policy evaluation logic](#) in the *IAM User Guide*.

## How Amazon WorkSpaces Thin Client works with IAM

Before you use IAM to manage access to WorkSpaces Thin Client, learn what IAM features are available to use with WorkSpaces Thin Client.

### IAM features you can use with Amazon WorkSpaces Thin Client

IAM feature	WorkSpaces Thin Client support
<a href="#">Identity-based policies</a>	Yes
<a href="#">Resource-based policies</a>	No
<a href="#">Policy actions</a>	Yes
<a href="#">Policy resources</a>	Yes
<a href="#">Policy condition keys</a>	Yes
<a href="#">ACLs</a>	No
<a href="#">ABAC (tags in policies)</a>	Yes
<a href="#">Temporary credentials</a>	Yes
<a href="#">Principal permissions</a>	Yes
<a href="#">Service roles</a>	No
<a href="#">Service-linked roles</a>	No

To get a high-level view of how WorkSpaces Thin Client and other AWS services work with most IAM features, see [AWS services that work with IAM](#) in the *IAM User Guide*.

## Identity-based policies for WorkSpaces Thin Client

### Supports identity-based policies: Yes

Identity-based policies are JSON permissions policy documents that you can attach to an identity, such as an IAM user, group of users, or role. These policies control what actions users and roles can perform, on which resources, and under what conditions. To learn how to create an identity-based policy, see [Define custom IAM permissions with customer managed policies](#) in the *IAM User Guide*.

With IAM identity-based policies, you can specify allowed or denied actions and resources as well as the conditions under which actions are allowed or denied. To learn about all of the elements that you can use in a JSON policy, see [IAM JSON policy elements reference](#) in the *IAM User Guide*.

### Identity-based policy examples for WorkSpaces Thin Client

To view examples of WorkSpaces Thin Client identity-based policies, see [Identity-based policy examples for Amazon WorkSpaces Thin Client](#).

## Resource-based policies within WorkSpaces Thin Client

### Supports resource-based policies: No

Resource-based policies are JSON policy documents that you attach to a resource. Examples of resource-based policies are IAM *role trust policies* and Amazon S3 *bucket policies*. In services that support resource-based policies, service administrators can use them to control access to a specific resource. For the resource where the policy is attached, the policy defines what actions a specified principal can perform on that resource and under what conditions. You must [specify a principal](#) in a resource-based policy. Principals can include accounts, users, roles, federated users, or AWS services.

To enable cross-account access, you can specify an entire account or IAM entities in another account as the principal in a resource-based policy. For more information, see [Cross account resource access in IAM](#) in the *IAM User Guide*.

## Policy actions for WorkSpaces Thin Client

### Supports policy actions: Yes

Administrators can use AWS JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The **Action** element of a JSON policy describes the actions that you can use to allow or deny access in a policy. Include actions in a policy to grant permissions to perform the associated operation.

To see a list of WorkSpaces Thin Client actions, see [Actions Defined by Amazon WorkSpaces Thin Client](#) in the *Service Authorization Reference*.

Policy actions in WorkSpaces Thin Client use the following prefix before the action:

```
thinclient
```

To specify multiple actions in a single statement, separate them with commas, as shown in the following example:

```
"Action": [  
  "thinclient:action1",  
  "thinclient:action2"  
]
```

To view examples of WorkSpaces Thin Client identity-based policies, see [Identity-based policy examples for Amazon WorkSpaces Thin Client](#).

## Policy resources for WorkSpaces Thin Client

**Supports policy resources:** Yes

Administrators can use AWS JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The **Resource** JSON policy element specifies the object or objects to which the action applies. As a best practice, specify a resource using its [Amazon Resource Name \(ARN\)](#). For actions that don't support resource-level permissions, use a wildcard (\*) to indicate that the statement applies to all resources.

```
"Resource": "*"
```

To see a list of WorkSpaces Thin Client resource types and their ARNs, see [Resources Defined by Amazon WorkSpaces Thin Client](#) in the *Service Authorization Reference*. To learn with which actions you can specify the ARN of each resource, see [Actions Defined by Amazon WorkSpaces Thin Client](#).

To view examples of WorkSpaces Thin Client identity-based policies, see [Identity-based policy examples for Amazon WorkSpaces Thin Client](#).

## Policy condition keys for WorkSpaces Thin Client

**Supports service-specific policy condition keys:** Yes

Administrators can use AWS JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The `Condition` element specifies when statements execute based on defined criteria. You can create conditional expressions that use [condition operators](#), such as equals or less than, to match the condition in the policy with values in the request. To see all AWS global condition keys, see [AWS global condition context keys](#) in the *IAM User Guide*.

To see a list of WorkSpaces Thin Client condition keys, see [Condition Keys for Amazon WorkSpaces Thin Client](#) in the *Service Authorization Reference*. To learn with which actions and resources you can use a condition key, see [Actions Defined by Amazon WorkSpaces Thin Client](#).

To view examples of WorkSpaces Thin Client identity-based policies, see [Identity-based policy examples for Amazon WorkSpaces Thin Client](#).

## ACLs in WorkSpaces Thin Client

**Supports ACLs:** No

Access control lists (ACLs) control which principals (account members, users, or roles) have permissions to access a resource. ACLs are similar to resource-based policies, although they do not use the JSON policy document format.

## ABAC with WorkSpaces Thin Client

**Supports ABAC (tags in policies):** Yes

Attribute-based access control (ABAC) is an authorization strategy that defines permissions based on attributes called tags. You can attach tags to IAM entities and AWS resources, then design ABAC policies to allow operations when the principal's tag matches the tag on the resource.

To control access based on tags, you provide tag information in the [condition element](#) of a policy using the `aws:ResourceTag/key-name`, `aws:RequestTag/key-name`, or `aws:TagKeys` condition keys.

If a service supports all three condition keys for every resource type, then the value is **Yes** for the service. If a service supports all three condition keys for only some resource types, then the value is **Partial**.

For more information about ABAC, see [Define permissions with ABAC authorization](#) in the *IAM User Guide*. To view a tutorial with steps for setting up ABAC, see [Use attribute-based access control \(ABAC\)](#) in the *IAM User Guide*.

## Using temporary credentials with WorkSpaces Thin Client

**Supports temporary credentials:** Yes

Temporary credentials provide short-term access to AWS resources and are automatically created when you use federation or switch roles. AWS recommends that you dynamically generate temporary credentials instead of using long-term access keys. For more information, see [Temporary security credentials in IAM](#) and [AWS services that work with IAM](#) in the *IAM User Guide*.

## Cross-service principal permissions for WorkSpaces Thin Client

**Supports forward access sessions (FAS):** Yes

Forward access sessions (FAS) use the permissions of the principal calling an AWS service, combined with the requesting AWS service to make requests to downstream services. For policy details when making FAS requests, see [Forward access sessions](#).

## Service roles for WorkSpaces Thin Client

**Supports service roles:** No

A service role is an [IAM role](#) that a service assumes to perform actions on your behalf. An IAM administrator can create, modify, and delete a service role from within IAM. For more information, see [Create a role to delegate permissions to an AWS service](#) in the *IAM User Guide*.

### **Warning**

Changing the permissions for a service role might disrupt WorkSpaces Thin Client functionality. Edit service roles only when WorkSpaces Thin Client provides guidance to do so.

## Service-linked roles for WorkSpaces Thin Client

### Supports service-linked roles: No

A service-linked role is a type of service role that is linked to an AWS service. The service can assume the role to perform an action on your behalf. Service-linked roles appear in your AWS account and are owned by the service. An IAM administrator can view, but not edit the permissions for service-linked roles.

For details about creating or managing service-linked roles, see [AWS services that work with IAM](#). Find a service in the table that includes a Yes in the **Service-linked role** column. Choose the **Yes** link to view the service-linked role documentation for that service.

## Identity-based policy examples for Amazon WorkSpaces Thin Client

By default, users and roles don't have permission to create or modify WorkSpaces Thin Client resources. To grant users permission to perform actions on the resources that they need, an IAM administrator can create IAM policies.

To learn how to create an IAM identity-based policy by using these example JSON policy documents, see [Create IAM policies \(console\)](#) in the *IAM User Guide*.

For details about actions and resource types defined by WorkSpaces Thin Client, including the format of the ARNs for each of the resource types, see [Actions, Resources, and Condition Keys for Amazon WorkSpaces Thin Client](#) in the *Service Authorization Reference*.

### Topics

- [Policy best practices](#)
- [Using the WorkSpaces Thin Client console](#)
- [Grant read-only access to WorkSpaces Thin Client](#)
- [Allow users to view their own permissions](#)
- [Grant full access to WorkSpaces Thin Client](#)

## Policy best practices

Identity-based policies determine whether someone can create, access, or delete WorkSpaces Thin Client resources in your account. These actions can incur costs for your AWS account. When you create or edit identity-based policies, follow these guidelines and recommendations:

- **Get started with AWS managed policies and move toward least-privilege permissions** – To get started granting permissions to your users and workloads, use the *AWS managed policies* that grant permissions for many common use cases. They are available in your AWS account. We recommend that you reduce permissions further by defining AWS customer managed policies that are specific to your use cases. For more information, see [AWS managed policies](#) or [AWS managed policies for job functions](#) in the *IAM User Guide*.
- **Apply least-privilege permissions** – When you set permissions with IAM policies, grant only the permissions required to perform a task. You do this by defining the actions that can be taken on specific resources under specific conditions, also known as *least-privilege permissions*. For more information about using IAM to apply permissions, see [Policies and permissions in IAM](#) in the *IAM User Guide*.
- **Use conditions in IAM policies to further restrict access** – You can add a condition to your policies to limit access to actions and resources. For example, you can write a policy condition to specify that all requests must be sent using SSL. You can also use conditions to grant access to service actions if they are used through a specific AWS service, such as CloudFormation. For more information, see [IAM JSON policy elements: Condition](#) in the *IAM User Guide*.
- **Use IAM Access Analyzer to validate your IAM policies to ensure secure and functional permissions** – IAM Access Analyzer validates new and existing policies so that the policies adhere to the IAM policy language (JSON) and IAM best practices. IAM Access Analyzer provides more than 100 policy checks and actionable recommendations to help you author secure and functional policies. For more information, see [Validate policies with IAM Access Analyzer](#) in the *IAM User Guide*.
- **Require multi-factor authentication (MFA)** – If you have a scenario that requires IAM users or a root user in your AWS account, turn on MFA for additional security. To require MFA when API operations are called, add MFA conditions to your policies. For more information, see [Secure API access with MFA](#) in the *IAM User Guide*.

For more information about best practices in IAM, see [Security best practices in IAM](#) in the *IAM User Guide*.

## Using the WorkSpaces Thin Client console

To access the Amazon WorkSpaces Thin Client console, you must have a minimum set of permissions. These permissions must allow you to list and view details about the WorkSpaces Thin Client resources in your AWS account. If you create an identity-based policy that is more restrictive

than the minimum required permissions, the console won't function as intended for entities (users or roles) with that policy.

You don't need to allow minimum console permissions for users that are making calls only to the AWS CLI or the AWS API. Instead, allow access to only the actions that match the API operation that they're trying to perform.

## Grant read-only access to WorkSpaces Thin Client

This example shows how you can create a policy that allows IAM users to view a WorkSpaces Thin Client configuration, but not make changes. This policy includes permissions to complete this action on the console or program by using the AWS CLI or AWS API.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "thinclient:GetEnvironment",
        "thinclient:ListEnvironments",
        "thinclient:GetDevice",
        "thinclient:ListDevices",
        "thinclient:ListDeviceSessions",
        "thinclient:GetSoftwareSet",
        "thinclient:ListSoftwareSets",
        "thinclient:ListTagsForResource"
      ],
      "Resource": "arn:aws:thinclient:*:*:*"
    },
    {
      "Effect": "Allow",
      "Action": ["workspaces:DescribeWorkspaceDirectories"],
      "Resource": "arn:aws:workspaces:*:*:directory/*"
    },
    {
      "Effect": "Allow",
      "Action": ["workspaces-web:GetPortal"],
      "Resource": ["arn:aws:workspaces-web:*:*:portal/*"]
    }
  ]
}
```

```
    {
      "Effect": "Allow",
      "Action": ["workspaces-web:GetUserSettings"],
      "Resource": ["arn:aws:workspaces-web:*:*:userSettings/*"]
    },
    {
      "Effect": "Allow",
      "Action": ["appstream:DescribeStacks"],
      "Resource": ["arn:aws:appstream:*:*:stack/*"]
    }
  ]
}
```

## Allow users to view their own permissions

This example shows how you might create a policy that allows IAM users to view the inline and managed policies that are attached to their user identity. This policy includes permissions to complete this action on the console or programmatically using the AWS CLI or AWS API.

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Sid": "ViewOwnUserInfo",
      "Effect": "Allow",
      "Action": [
        "iam:GetUserPolicy",
        "iam:ListGroupsForUser",
        "iam:ListAttachedUserPolicies",
        "iam:ListUserPolicies",
        "iam:GetUser"
      ],
      "Resource": ["arn:aws:iam::*:user/${aws:username}"]
    },
    {
      "Sid": "NavigateInConsole",
      "Effect": "Allow",
      "Action": [
        "iam:GetGroupPolicy",
        "iam:GetPolicyVersion",
        "iam:GetPolicy",
        "iam:ListAttachedGroupPolicies",

```

```

        "iam:ListGroupPolicies",
        "iam:ListPolicyVersions",
        "iam:ListPolicies",
        "iam:ListUsers"
    ],
    "Resource": "*"
}
]
}

```

## Grant full access to WorkSpaces Thin Client

This example shows how you can create a policy that grants full access to WorkSpaces Thin Client IAM users. This policy includes permissions to complete all WorkSpaces Thin Client actions on the console or program by using the AWS CLI or AWS API.

JSON

```

{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": ["thinclient:*"],
      "Resource": "arn:aws:thinclient:*:*:*"
    },
    {
      "Effect": "Allow",
      "Action": ["workspaces:DescribeWorkspaceDirectories"],
      "Resource": "arn:aws:workspaces:*:*:directory/*"
    },
    {
      "Effect": "Allow",
      "Action": ["workspaces-web:GetPortal"],
      "Resource": ["arn:aws:workspaces-web:*:*:portal/*"]
    },
    {
      "Effect": "Allow",
      "Action": ["workspaces-web:GetUserSettings"],
      "Resource": ["arn:aws:workspaces-web:*:*:userSettings/*"]
    },
    {

```

```
        "Effect": "Allow",
        "Action": ["appstream:DescribeStacks"],
        "Resource": ["arn:aws:appstream:*:*:stack/*"]
    }
]
}
```

## AWS managed policies for Amazon WorkSpaces Thin Client

An AWS managed policy is a standalone policy that is created and administered by AWS. AWS managed policies are designed to provide permissions for many common use cases so that you can start assigning permissions to users, groups, and roles.

Keep in mind that AWS managed policies might not grant least-privilege permissions for your specific use cases because they're available for all AWS customers to use. We recommend that you reduce permissions further by defining [customer managed policies](#) that are specific to your use cases.

You cannot change the permissions defined in AWS managed policies. If AWS updates the permissions defined in an AWS managed policy, the update affects all principal identities (users, groups, and roles) that the policy is attached to. AWS is most likely to update an AWS managed policy when a new AWS service is launched or new API operations become available for existing services.

For more information, see [AWS managed policies](#) in the *IAM User Guide*.

### AWS managed policy: AmazonWorkSpacesThinClientReadOnlyAccess

You can attach the AmazonWorkSpacesThinClientReadOnlyAccess policy to your IAM identities. This policy grants full access permissions to the WorkSpaces Thin Client service and its dependencies. For more information on this managed policy, see [AmazonWorkSpacesThinClientReadOnlyAccess](#) in the *AWS Managed Policy Reference guide*.

#### Permissions details

This policy includes the following permissions.

- `thinclient` (WorkSpaces Thin Client) – Allows read-only access to all WorkSpaces Thin Client actions.
- `workspaces` (WorkSpaces) – Allows permissions to describe WorkSpaces directories and connection aliases. This is used to check that your WorkSpaces resources are compatible with WorkSpaces Thin Client. It is also used to show these resources in the WorkSpaces Thin Client AWS console.
- `workspaces-web` (WorkSpaces Secure Browser) – Allows permissions to describe WorkSpaces Secure Browser portals and user settings. This is used to check that your WorkSpaces Secure Browser resources are compatible with WorkSpaces Thin Client. It is also used to show these resources in the WorkSpaces Thin Client AWS console.
- `appstream` (WorkSpaces Applications) – Allows permissions to describe WorkSpaces Applications stacks. This is used to check that your WorkSpaces Applications resources are compatible with WorkSpaces Thin Client. It is also used to show these resources in the WorkSpaces Thin Client AWS console.

## JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Sid": "AllowThinClientReadAccess",
      "Effect": "Allow",
      "Action": [
        "thinclient:GetDevice",
        "thinclient:GetDeviceDetails",
        "thinclient:GetEnvironment",
        "thinclient:GetSoftwareSet",
        "thinclient:ListDevices",
        "thinclient:ListDeviceSessions",
        "thinclient:ListEnvironments",
        "thinclient:ListSoftwareSets",
        "thinclient:ListTagsForResource"
      ],
      "Resource": "*"
    },
    {
      "Sid": "AllowWorkSpacesAccess",
      "Effect": "Allow",
```

```

    "Action": [
      "workspaces:DescribeConnectionAliases",
      "workspaces:DescribeWorkspaceDirectories"
    ],
    "Resource": "*"
  },
  {
    "Sid": "AllowWorkSpacesSecureBrowserAccess",
    "Effect": "Allow",
    "Action": [
      "workspaces-web:GetPortal",
      "workspaces-web:GetUserSettings",
      "workspaces-web:ListPortals"
    ],
    "Resource": "*"
  },
  {
    "Sid": "AllowAppStreamAccess",
    "Effect": "Allow",
    "Action": [
      "appstream:DescribeStacks"
    ],
    "Resource": "*"
  }
]
}

```

## AWS managed policy: AmazonWorkSpacesThinClientFullAccess

You can attach the AmazonWorkSpacesThinClientFullAccess policy to your IAM identities. This policy grants full access permissions to the WorkSpaces Thin Client service and its dependencies. For more information on this managed policy, see [AmazonWorkSpacesThinClientFullAccess](#) in the *AWS Managed Policy Reference Guide*.

### Permissions details

This policy includes the following permissions:

- `thinclient` (WorkSpaces Thin Client) – Allows full access to all WorkSpaces Thin Client actions.
- `workspaces` (WorkSpaces) – Allows permissions to describe WorkSpaces directories and connection aliases. This is used to check that your WorkSpaces resources are compatible with

WorkSpaces Thin Client. It is also used to show these resources in the WorkSpaces Thin Client AWS console.

- `workspaces-web` (WorkSpaces Secure Browser) – Allows permissions to describe WorkSpaces Secure Browser portals and user settings. This is used to check that your WorkSpaces Secure Browser resources are compatible with WorkSpaces Thin Client. It is also used to show these resources in the WorkSpaces Thin Client AWS console.
- `appstream` (WorkSpaces Applications) – Allows permissions to describe WorkSpaces Applications stacks. This is used to check that your WorkSpaces Applications resources are compatible with WorkSpaces Thin Client. It is also used to show these resources in the WorkSpaces Thin Client AWS console.
- `iam` – Allows WorkSpaces Thin Client to create a service-linked role in your account. This role enables WorkSpaces Thin Client to publish metrics to CloudWatch on your behalf.

## JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Sid": "AllowThinClientFullAccess",
      "Effect": "Allow",
      "Action": [
        "thinclient:*"
      ],
      "Resource": "*"
    },
    {
      "Sid": "AllowWorkSpacesAccess",
      "Effect": "Allow",
      "Action": [
        "workspaces:DescribeConnectionAliases",
        "workspaces:DescribeWorkspaceDirectories"
      ],
      "Resource": "*"
    },
    {
      "Sid": "AllowWorkSpacesSecureBrowserAccess",
      "Effect": "Allow",
      "Action": [
```

```

        "workspaces-web:GetPortal",
        "workspaces-web:GetUserSettings",
        "workspaces-web:ListPortals"
    ],
    "Resource": "*"
},
{
    "Sid": "AllowAppStreamAccess",
    "Effect": "Allow",
    "Action": [
        "appstream:DescribeStacks"
    ],
    "Resource": "*"
},
{
    "Sid": "AllowCreateServiceLinkedRole",
    "Effect": "Allow",
    "Action": "iam:CreateServiceLinkedRole",
    "Resource": "arn:aws:iam::*:role/aws-service-role/
monitoring.thinclient.amazonaws.com/
AWSServiceRoleForAmazonWorkSpacesThinClientMonitoring",
    "Condition": {
        "StringEquals": {
            "iam:AWSServiceName": "monitoring.thinclient.amazonaws.com"
        }
    }
}
]
}

```

## WorkSpaces Thin Client updates to AWS managed policies

Change	Description	Date
AmazonWorkSpacesThinClientMonitoringServiceRolePolicy – Removed policy	WorkSpaces Thin Client removed the AmazonWorkSpacesThinClientMonitoringServiceRolePolicy section.	November 12, 2025

Change	Description	Date
<p><a href="#">AmazonWorkSpacesThinClientFullAccess</a> – Updated policy</p> <p>AmazonWorkSpacesThinClientMonitoringServiceRolePolicy – New policy</p>	WorkSpaces Thin Client updated the policy to include service linked roles.	August 26th 2025
<p><a href="#">AmazonWorkSpacesThinClientReadOnlyAccess</a> – Updated policy</p>	WorkSpaces Thin Client updated the policy to include limited read permissions for device details and WorkSpaces connection aliases.	January 9th 2025
<p><a href="#">AmazonWorkSpacesThinClientFullAccess</a> – Updated policy</p>	WorkSpaces Thin Client updated the policy to include limited read permissions for WorkSpaces connection aliases.	January 9th 2025
<p><a href="#">AmazonWorkSpacesThinClientReadOnlyAccess</a> – Updated policy</p>	WorkSpaces Thin Client updated the policy to include limited read permissions for WorkSpaces Applications, WorkSpaces Web and WorkSpaces.	August 9th 2024
<p><a href="#">AmazonWorkSpacesThinClientFullAccess</a> – New policy</p>	Provides full access to Amazon WorkSpaces Thin Client as well as limited access to required related services.	August 9th 2024
<p><a href="#">AmazonWorkSpacesThinClientReadOnlyAccess</a> – New policy</p>	Provides read-only access to Amazon WorkSpaces Thin Client and its dependencies.	July 19th 2024

Change	Description	Date
WorkSpaces Thin Client started tracking changes	WorkSpaces Thin Client started tracking changes for its AWS managed policies.	July 19th 2024

## Troubleshooting Amazon WorkSpaces Thin Client identity and access

Use the following information to help you diagnose and fix common issues that you might encounter when working with WorkSpaces Thin Client and IAM.

### Topics

- [I am not authorized to perform an action in WorkSpaces Thin Client](#)
- [I want to view my access keys](#)
- [I'm an administrator and want to allow others to access WorkSpaces Thin Client](#)
- [I want to allow people outside of my AWS account to access my WorkSpaces Thin Client resources](#)

### I am not authorized to perform an action in WorkSpaces Thin Client

If the AWS Management Console tells you that you're not authorized to perform an action, then you must contact your administrator for assistance. Your administrator is the person that provided you with your user name and password.

The following example error occurs when the mateojackson IAM user tries to use the console to view details about a fictional *my-thin-client-device* resource but does not have the fictional `thinclient:ListDevices` permissions.

```
User: arn:aws:iam::123456789012:user/mateojackson is not authorized to perform:
thinclient:ListDevices on resource: my-thin-client-device
```

In this case, Mateo asks his administrator to update his policies to allow him to access the *my-thin-client-device* resource by using the `thinclient:ListDevices` action.

## I want to view my access keys

After you create your IAM user access keys, you can view your access key ID at any time. However, you can't view your secret access key again. If you lose your secret key, you must create a new access key pair.

Access keys consist of two parts: an access key ID (for example, AKIAIOSFODNN7EXAMPLE) and a secret access key (for example, wJa1rXUtnFEMI/K7MDENG/bPxrFiCYEXAMPLEKEY). Like a user name and password, you must use both the access key ID and secret access key together to authenticate your requests. Manage your access keys as securely as you do your user name and password.

### Important

Do not provide your access keys to a third party, even to help [find your canonical user ID](#). By doing this, you might give someone permanent access to your AWS account.

When you create an access key pair, you are prompted to save the access key ID and secret access key in a secure location. The secret access key is available only at the time you create it. If you lose your secret access key, you must add new access keys to your IAM user. You can have a maximum of two access keys. If you already have two, you must delete one key pair before creating a new one. To view instructions, see [Managing access keys](#) in the *IAM User Guide*.

## I'm an administrator and want to allow others to access WorkSpaces Thin Client

To allow others to access WorkSpaces Thin Client, you must grant permission to the people or applications that need access. If you are using AWS IAM Identity Center to manage people and applications, you assign permission sets to users or groups to define their level of access. Permission sets automatically create and assign IAM policies to IAM roles that are associated with the person or application. For more information, see [Permission sets](#) in the *AWS IAM Identity Center User Guide*.

If you are not using IAM Identity Center, you must create IAM entities (users or roles) for the people or applications that need access. You must then attach a policy to the entity that grants them the correct permissions in WorkSpaces Thin Client. After the permissions are granted, provide the credentials to the user or application developer. They will use those credentials to access AWS. To learn more about creating IAM users, groups, policies, and permissions, see [IAM Identities](#) and [Policies and permissions in IAM](#) in the *IAM User Guide*.

For more information, see [Grant full access to WorkSpaces Thin Client](#).

## I want to allow people outside of my AWS account to access my WorkSpaces Thin Client resources

You can create a role that users in other accounts or people outside of your organization can use to access your resources. You can specify who is trusted to assume the role. For services that support resource-based policies or access control lists (ACLs), you can use those policies to grant people access to your resources.

To learn more, consult the following:

- To learn whether WorkSpaces Thin Client supports these features, see [How Amazon WorkSpaces Thin Client works with IAM](#).
- To learn how to provide access to your resources across AWS accounts that you own, see [Providing access to an IAM user in another AWS account that you own](#) in the *IAM User Guide*.
- To learn how to provide access to your resources to third-party AWS accounts, see [Providing access to AWS accounts owned by third parties](#) in the *IAM User Guide*.
- To learn how to provide access through identity federation, see [Providing access to externally authenticated users \(identity federation\)](#) in the *IAM User Guide*.
- To learn the difference between using roles and resource-based policies for cross-account access, see [Cross account resource access in IAM](#) in the *IAM User Guide*.

## Resilience in Amazon WorkSpaces Thin Client

The AWS global infrastructure is built around AWS Regions and Availability Zones. AWS Regions provide multiple physically separated and isolated Availability Zones, which are connected with low-latency, high-throughput, and highly redundant networking. With Availability Zones, you can design and operate applications and databases that automatically fail over between Availability Zones without interruption. Availability Zones are more highly available, fault tolerant, and scalable than traditional single or multiple data center infrastructures.

For more information about AWS Regions and Availability Zones, see [AWS Global Infrastructure](#).

In addition to the AWS global infrastructure, WorkSpaces Thin Client offers several features to help support your data resiliency and backup needs.

# Vulnerability analysis and management in Amazon WorkSpaces Thin Client

Configuration and IT controls are a shared responsibility between AWS and you. For more information, see the AWS [shared responsibility model](#).

Amazon WorkSpaces Thin Client cross-integrates with Amazon WorkSpaces, Amazon WorkSpaces Applications, and WorkSpaces Web. See the following links for more information about update management for each of these services:

- [Update Management in Amazon WorkSpaces Applications](#)
- [Update management in Amazon WorkSpaces](#)
- [Configuration and vulnerability analysis in Amazon WorkSpaces Web](#)

# Monitoring Amazon WorkSpaces Thin Client

Monitoring is an important part of maintaining the reliability, availability, and performance of Amazon WorkSpaces Thin Client and your other AWS solutions. AWS provides the following monitoring tools to watch WorkSpaces Thin Client, report when something is wrong, and take automatic actions when appropriate:

- *AWS CloudTrail* captures API calls and related events made by or on behalf of your AWS account and delivers the log files to the Amazon S3 bucket that you specify. You can identify users and accounts that called AWS, the source IP address from which the calls were made, and when the calls occurred. For more information, see the [AWS CloudTrail User Guide](#).

## Topics

- [Logging Amazon WorkSpaces Thin Client API calls using AWS CloudTrail](#)
- [Monitor your WorkSpaces Thin Client using CloudWatch metrics](#)

## Logging Amazon WorkSpaces Thin Client API calls using AWS CloudTrail

Amazon WorkSpaces Thin Client is integrated with [AWS CloudTrail](#), a service that provides a record of actions taken by a user, role, or an AWS service. CloudTrail captures all API calls for WorkSpaces Thin Client as events. The calls captured include calls from the WorkSpaces Thin Client console and code calls to the WorkSpaces Thin Client API operations. Using the information collected by CloudTrail, you can determine the request that was made to WorkSpaces Thin Client, the IP address from which the request was made, when it was made, and additional details.

All Amazon WorkSpaces Thin Client actions are logged by CloudTrail and are documented in the [Amazon WorkSpaces Thin Client API Reference](#). For example, calls to the `CreateEnvironment`, `DeleteDevice` and `GetSoftwareSet` actions generate entries in the CloudTrail log files.

Every event or log entry contains information about who generated the request. The identity information helps you determine the following:

- Whether the request was made with root user or user credentials.
- Whether the request was made on behalf of an IAM Identity Center user.

- Whether the request was made with temporary security credentials for a role or federated user.
- Whether the request was made by another AWS service.

CloudTrail is active in your AWS account when you create the account and you automatically have access to the CloudTrail **Event history**. The CloudTrail **Event history** provides a viewable, searchable, downloadable, and immutable record of the past 90 days of recorded management events in an AWS Region. For more information, see [Working with CloudTrail Event history](#) in the *AWS CloudTrail User Guide*. There are no CloudTrail charges for viewing the **Event history**.

For an ongoing record of events in your AWS account past 90 days, create a trail or a [CloudTrail Lake](#) event data store.

## CloudTrail trails

A *trail* enables CloudTrail to deliver log files to an Amazon S3 bucket. All trails created using the AWS Management Console are multi-Region. You can create a single-Region or a multi-Region trail by using the AWS CLI. Creating a multi-Region trail is recommended because you capture activity in all AWS Regions in your account. If you create a single-Region trail, you can view only the events logged in the trail's AWS Region. For more information about trails, see [Creating a trail for your AWS account](#) and [Creating a trail for an organization](#) in the *AWS CloudTrail User Guide*.

You can deliver one copy of your ongoing management events to your Amazon S3 bucket at no charge from CloudTrail by creating a trail, however, there are Amazon S3 storage charges. For more information about CloudTrail pricing, see [AWS CloudTrail Pricing](#). For information about Amazon S3 pricing, see [Amazon S3 Pricing](#).

## CloudTrail Lake event data stores

*CloudTrail Lake* lets you run SQL-based queries on your events. CloudTrail Lake converts existing events in row-based JSON format to [Apache ORC](#) format. ORC is a columnar storage format that is optimized for fast retrieval of data. Events are aggregated into *event data stores*, which are immutable collections of events based on criteria that you select by applying [advanced event selectors](#). The selectors that you apply to an event data store control which events persist and are available for you to query. For more information about CloudTrail Lake, see [Working with AWS CloudTrail Lake](#) in the *AWS CloudTrail User Guide*.

CloudTrail Lake event data stores and queries incur costs. When you create an event data store, you choose the [pricing option](#) you want to use for the event data store. The pricing

option determines the cost for ingesting and storing events, and the default and maximum retention period for the event data store. For more information about CloudTrail pricing, see [AWS CloudTrail Pricing](#).

## WorkSpaces Thin Client data events in CloudTrail

[Data events](#) provide information about the resource operations performed on or in a resource (for example, registration of a device by an end user). These are also known as data plane operations. Data events are often high-volume activities. By default, CloudTrail doesn't log data events. The CloudTrail **Event history** doesn't record data events.

Additional charges apply for data events. For more information about CloudTrail pricing, see [AWS CloudTrail Pricing](#).

You can log data events for the WorkSpaces Thin Client resource types by using the CloudTrail console, AWS CLI, or CloudTrail API operations. For more information about how to log data events, see [Logging data events with the AWS Management Console](#) and [Logging data events with the AWS Command Line Interface](#) in the *AWS CloudTrail User Guide*.

The following table lists the WorkSpaces Thin Client resource types for which you can log data events. The **Data event type (console)** column shows the value to choose from the **Data event type** list on the CloudTrail console. The **resources.type value** column shows the `resources.type` value, which you would specify when configuring advanced event selectors using the AWS CLI or CloudTrail APIs. The **Data APIs logged to CloudTrail** column shows the API calls logged to CloudTrail for the resource type.

Data event type (console)	resources.type value	Data APIs logged to CloudTrail
<b>ThinClientDevice</b>	<code>AWS::WorkSpacesThinClient::Device</code>	<ul style="list-style-type: none"> <li>RegisterDevice</li> <li>UpdateDeviceDetails</li> </ul>

You can configure advanced event selectors to filter on the `eventName`, `readOnly`, and `resources.ARN` fields to log only those events that are important to you. For more information about these fields, see [AdvancedFieldSelector](#) in the *AWS CloudTrail API Reference*.

## WorkSpaces Thin Client management events in CloudTrail

[Management events](#) provide information about management operations that are performed on resources in your AWS account. These are also known as control plane operations. By default, CloudTrail logs management events.

Amazon WorkSpaces Thin Client logs all WorkSpaces Thin Client control plane operations as management events. For a list of the Amazon WorkSpaces Thin Client control plane operations that WorkSpaces Thin Client logs to CloudTrail, see the [Amazon WorkSpaces Thin Client API Reference](#).

## WorkSpaces Thin Client event examples

An event represents a single request from any source and includes information about the requested API operation, the date and time of the operation, request parameters, and so on. CloudTrail log files aren't an ordered stack trace of the public API calls, so events don't appear in any specific order.

The following example shows a CloudTrail event that demonstrates the `RegisterDevice` operation.

```
{
  "eventVersion": "1.10",
  "userIdentity": {
    "type": "Unknown",
    "accountId": "111111111111",
    "userName": "DSN: G1X11X1111111111XX"
  },
  "eventTime": "2024-06-19T17:13:44Z",
  "eventSource": "thinclient.amazonaws.com",
  "eventName": "RegisterDevice",
  "awsRegion": "us-west-2",
  "sourceIPAddress": "AWS Internal",
  "userAgent": "AWS Internal",
  "requestParameters": {
    "dsn": "G1X11X1111111111XX",
    "activationCode": "xxx1xxx1",
    "model": "AFTGAZL"
  },
  "responseElements": null,
  "requestID": "f626fb2b-a841-4b87-9a9b-685a62024058",
```

```

"eventID": "214385d7-9249-4f60-af56-b4c951e0491d",
"readOnly": false,
"resources": [
  {
    "type": "AWS::ThinClient::Device",
    "ARN": "arn:aws:thinclient:us-west-2:111111111111:device/DEVICE_ID"
  }
],
"eventType": "AwsApiCall",
"managementEvent": false,
"recipientAccountId": "111111111111",
"eventCategory": "Data"
}

```

The following example shows a CloudTrail event that demonstrates the `UpdateDeviceDetails` operation.

```

{
  "eventVersion": "1.10",
  "userIdentity": {
    "type": "Unknown",
    "accountId": "111111111111",
    "userName": "DSN: G1X11X1111111111XX"
  },
  "eventTime": "2024-10-21T17:46:27Z",
  "eventSource": "thinclient.amazonaws.com",
  "eventName": "UpdateDeviceDetails",
  "awsRegion": "us-west-2",
  "sourceIPAddress": "AWS Internal",
  "userAgent": "AWS Internal",
  "requestParameters": null,
  "responseElements": null,
  "requestID": "7d562fcf-a9ce-40da-9e5c-9ef390b8b83c",
  "eventID": "f294b614-b00c-45ef-b293-cd389121033a",
  "readOnly": false,
  "resources": [
    {
      "type": "AWS::ThinClient::Device",
      "ARN": "arn:aws:thinclient:us-west-2:111111111111:device/DEVICE_ID"
    }
  ],
  "eventType": "AwsServiceEvent",
  "managementEvent": false,
}

```

```
"recipientAccountId": "111111111111",
"serviceEventDetails": {
  "settings": {
    "network": {
      "ethernet": {
        "addresses": [
          {
            "gateway": "gateway",
            "localIp": "localIp",
            "type": "IPV4"
          }
        ],
        "connectionStatus": "NOT_CONNECTED"
      },
      "networkInterfaceInUse": "ETHERNET",
      "wifi": {
        "addresses": [
          {
            "gateway": "gateway",
            "localIp": "localIp",
            "type": "IPV4"
          }
        ],
        "connectionStatus": "NOT_CONNECTED"
      }
    },
    "peripherals": {
      "bluetooth": {
        "enabledStatus": "ENABLED"
      },
      "keyboards": [
        {
          "name": "name",
          "type": "USB"
        }
      ],
      "mice": [
        {
          "name": "name",
          "type": "BLUETOOTH"
        }
      ],
      "sound": {
        "microphones": [
```

```
    {
      "name": "name",
      "selectionStatus": "SELECTED",
      "type": "BUILT_IN"
    }
  ],
  "speakers": [
    {
      "name": "name",
      "selectionStatus": "SELECTED",
      "type": "BUILT_IN"
    }
  ]
},
"webcams": [
  {
    "name": "name",
    "selectionStatus": "SELECTED",
    "type": "USB"
  }
]
},
"powerAndSleep": {
  "sleepAfter": "FIFTEEN_MINUTES"
}
},
"updatedAt": "2024-10-21T17:46:27.624Z"
},
"eventCategory": "Data"
}
```

For information about CloudTrail record contents, see [CloudTrail record contents](#) in the *AWS CloudTrail User Guide*.

## Monitor your WorkSpaces Thin Client using CloudWatch metrics

WorkSpaces Thin Client devices and Amazon CloudWatch are integrated, so you can gather and analyze performance metrics emitted by your WorkSpaces Thin Client devices. You can monitor these metrics using the CloudWatch console, the CloudWatch command line interface, or

programmatically using the CloudWatch API. CloudWatch also allows you to set alarms when you reach a specified threshold for a metric.

For more information about using CloudWatch and alarms, see the [Amazon CloudWatch User Guide](#).

## Prerequisites

There are no prerequisites. Once a WorkSpaces Thin Client device is registered to an Environment, it will begin to emit device metrics.

## Contents

- [WorkSpaces Thin Client metrics](#)

## WorkSpaces Thin Client metrics

The `AWS/WorkSpacesThinClient` namespace includes the following metrics.

Metric	Description	Dimensions	Statistics	Units
DeviceSession	The number of ThinClient devices that are either connected to a device session, or that are not in session.	desktopType	Average, Min, Max, Sum, Sample Count	Count
Connected Devices	The number of ThinClient devices that are currently online.	n/a	Average, Min, Max, Sum, Sample Count	Count
SoftwareSetVersion	The number of ThinClient devices running	softwareSetVersion	Average, Min, Max, Sum, Sample Count	Count

Metric	Description	Dimensions	Statistics	Units
	a given Software Set version.			
NetworkConnectionEthernet	The number of ThinClient devices that are currently connected via Ethernet.	n/a	Average, Min, Max, Sum, Sample Count	Count
NetworkConnectionWifi	The number of ThinClient devices that are currently connected via WiFi.	n/a	Average, Min, Max, Sum, Sample Count	Count

### Dimensions to WorkSpaces Thin Client metrics

Dimension	Description
desktopType	Filters the metric data by the desktop type currently in-session on the device. The device is in-session if a user is logged into a desktop, and if the device is not sleeping. If the device is in-session, the dimension value will be the desktop type used, such as WorkSpaces, WorkSpacesSecureBrowser, or AppStream. If the device is not in-session, the dimension value will be NotInSession.
softwareSetVersion	Filters the metric data by the Software Set version installed on the device. The form of the dimension is X.Y.Z, for example 1.4.2.

# Creating Amazon WorkSpaces Thin Client resources with AWS CloudFormation

Amazon WorkSpaces Thin Client is integrated with AWS CloudFormation, a service that helps you model and set up your AWS resources. This way, you can spend less time creating and managing your resources and infrastructure. You create a template that describes all the AWS resources that you want (such as Environments), and CloudFormation provisions and configures those resources for you.

When you use CloudFormation, you can reuse your template to set up your WorkSpaces Thin Client resources consistently and repeatedly. Describe your resources once, and then provision the same resources repeatedly in multiple AWS accounts and Regions.

## WorkSpaces Thin Client and CloudFormation templates

To provision and configure resources for WorkSpaces Thin Client and related services, you must understand [CloudFormation templates](#). Templates are formatted text files in JSON or YAML format. These templates describe the resources that you want to provision in your CloudFormation stacks. If you're unfamiliar with JSON or YAML formats, you can use CloudFormation Designer to help you get started with CloudFormation templates. For more information, see [What is CloudFormation Designer?](#) in the *AWS CloudFormation User Guide*.

WorkSpaces Thin Client supports creating Environments in CloudFormation. For more information, including examples of JSON and YAML templates for Environments, see the [Amazon WorkSpaces Thin Client resource type reference](#) in the *AWS CloudFormation User Guide*.

## Learn more about CloudFormation

To learn more about CloudFormation, see the following resources:

- [AWS CloudFormation](#)
- [AWS CloudFormation User Guide](#)
- [CloudFormation API Reference](#)
- [AWS CloudFormation Command Line Interface User Guide](#)

# Access Amazon WorkSpaces Thin Client by using an interface endpoint (AWS PrivateLink)

You can use AWS PrivateLink to create a private connection between your VPC and Amazon WorkSpaces Thin Client. You can access WorkSpaces Thin Client as a VPC, without the use of an internet gateway, NAT device, VPN connection, or Direct Connect connection. Instances in your VPC don't require public IP addresses to access WorkSpaces Thin Client.

You establish this private connection by creating an *interface endpoint* that's powered by AWS PrivateLink. We create an endpoint network interface in each subnet that you enable for the interface endpoint. These are requester-managed network interfaces that serve as the entry point for traffic destined for WorkSpaces Thin Client.

For more information, see [Access AWS services through AWS PrivateLink](#) in the *AWS PrivateLink Guide*.

## Considerations for WorkSpaces Thin Client

Before you set up an interface endpoint for WorkSpaces Thin Client, review [Considerations](#) in the *AWS PrivateLink Guide*.

WorkSpaces Thin Client supports making calls to all of its API actions through the interface endpoint.

## Create an interface endpoint for WorkSpaces Thin Client

You can create an interface endpoint for WorkSpaces Thin Client by using either the Amazon VPC console or the AWS Command Line Interface (AWS CLI). For more information, see [Create an interface endpoint](#) in the *AWS PrivateLink Guide*.

Create an interface endpoint for WorkSpaces Thin Client by using the following service name:

```
com.amazonaws.region.thinclient.api
```

If you enable private DNS for the interface endpoint, you can make API requests to WorkSpaces Thin Client by using its default Regional DNS name. For example, `api.thinclient.us-east-1.amazonaws.com`.

## Create an endpoint policy for your interface endpoint

An endpoint policy is an IAM resource that you can attach to an interface endpoint. The default endpoint policy gives you full access to WorkSpaces Thin Client through the interface endpoint. To control the access granted to WorkSpaces Thin Client from your VPC, attach a custom endpoint policy to the interface endpoint.

An endpoint policy specifies the following information:

- The principals that can perform actions (AWS accounts, IAM users, and IAM roles).
- The actions that can be performed.
- The resources on which the actions can be performed.

For more information, see [Control access to services using endpoint policies](#) in the *AWS PrivateLink Guide*.

### Example: VPC endpoint policy for WorkSpaces Thin Client actions

The following is an example of a custom endpoint policy. When you attach this policy to your interface endpoint, it grants access to the listed WorkSpaces Thin Client actions for all principals on all resources.

```
{
  "Statement": [
    {
      "Principal": "*",
      "Effect": "Allow",
      "Action": [
        "thinclient:ListEnvironments",
        "thinclient:ListDevices",
        "thinclient:ListSoftwareSets"
      ],
      "Resource": "*"
    }
  ]
}
```

# Document history for the WorkSpaces Thin Client Administrator Guide

The following table describes the documentation history for releases of the WorkSpaces Thin Client Administrator Guide.

Change	Description	Date
<a href="#">Amazon WorkSpaces Thin Client end of support</a>	End of support notice: On March 31, 2027, AWS will end support for Amazon WorkSpaces Thin Client. After March 31, 2027, you will no longer be able to access the WorkSpaces Thin Client console or WorkSpaces Thin Client resources. For more information, see <a href="#">Amazon WorkSpaces Thin Client end of support</a> .	March 31, 2026
AWS managed policy: AmazonWorkSpacesThinClientMonitoringServiceRolePolicy	Amazon WorkSpaces Thin Client removed AmazonWorkSpacesThinClientMonitoringServiceRolePolicy section.	November 12, 2025
AWS managed policy: AmazonWorkSpacesThinClientMonitoringServiceRolePolicy	Amazon WorkSpaces Thin Client added AmazonWorkSpacesThinClientMonitoringServiceRolePolicy managed policy.	August 26th 2025
<a href="#">AWS managed policy: AmazonWorkSpacesThinClientFullAccess</a>	Amazon WorkSpaces Thin Client added AmazonWorkSpacesThinClientFullAccess managed policies version 3.	

Change	Description	Date
<a href="#">AWS managed policy: AmazonWorkSpacesThinClientFullAccess</a>	Amazon WorkSpaces Thin Client added AmazonWorkSpacesThinClientFullAccess managed policy version 2.	January 9, 2025
<a href="#">AWS managed policy: AmazonWorkSpacesThinClientReadOnlyAccess</a>	Amazon WorkSpaces Thin Client added AmazonWorkSpacesThinClientReadOnlyAccess managed policies version 3.	January 9, 2025
<a href="#">Logging Amazon WorkSpaces Thin Client API calls using AWS CloudTrail</a>  <a href="#">Device settings</a>  <a href="#">Data encryption at rest for Amazon WorkSpaces Thin Client</a>	<p>Added new section for data events.</p> <p>Added new section for device settings.</p> <p>Updated the KMS information in the section for data encryption at rest.</p>	October 28, 2024
<a href="#">Business continuity</a>	Added new section for Business continuity and disaster recovery.	September 6, 2024
<a href="#">AWS managed policy: AmazonWorkSpacesThinClientFullAccess</a>	Amazon WorkSpaces Thin Client added AmazonWorkSpacesThinClientFullAccess managed policy.	August 9, 2024
<a href="#">AWS managed policy: AmazonWorkSpacesThinClientReadOnlyAccess</a>	Amazon WorkSpaces Thin Client added AmazonWorkSpacesThinClientReadOnlyAccess managed policies version 2.	August 9, 2024

Change	Description	Date
<a href="#">Configuring WorkSpaces Personal for WorkSpaces Thin Client</a>	Updated the for new WorkSpaces Personal.	August 7, 2024
<a href="#">Configuring WorkSpaces Pools for WorkSpaces Thin Client</a>	Added new section for new WorkSpaces Pools.	August 7, 2024
<a href="#">AWS managed policy: AmazonWorkSpacesThinClientReadOnlyAccess</a>	Amazon WorkSpaces Thin Client added AmazonWorkSpacesThinClientReadOnlyAccess managed policy.	July 19, 2024
<a href="#">AWS managed policies for Amazon WorkSpaces Thin Client</a>	Amazon WorkSpaces Thin Client started tracking changes.	July 19, 2024
<a href="#">Configuring WorkSpaces for Amazon WorkSpaces Thin Client</a>	Updated the operating system list.	February 12, 2024
<a href="#">Configuring WorkSpaces Applications for Amazon WorkSpaces Thin Client</a>	Updated the Identity Provider procedure.	February 12, 2024
Initial release	Initial release	November 26, 2023